SYLVANIA

SERVICE MANUAL

Sec. 1: Main Section
- Specifications
- Preparation for Servicing
- Adjustment Procedures
- Schematic Diagrams
- CBA's

Sec. 2: Deck Mechanism Section
- Standard Maintenance
- Alignment for Mechanism
- Disassembly/Assembly of Mechanism

Sec. 3: Exploded views and Parts List Section
- Exploded views
- Parts List

13" COLOR TV/VCR COMBINATION

SRC2213/SRC22134

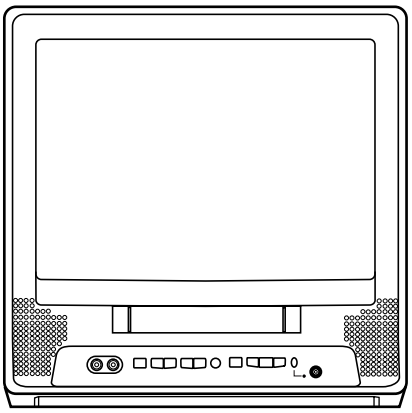

19" COLOR TV/VCR COMBINATION

SRC22194

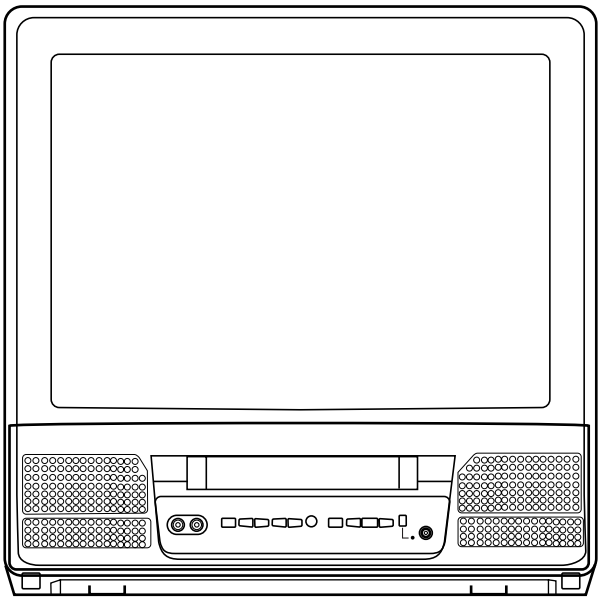

VHS

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Funai Equipment. The service procedures recommended by Funai and described in this service manual are effective methods of performing service operations. Some of these service special tools should be used when and as recommended.

It is important to note that this service manual contains various CAUTIONS and NOTICES which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these CAUTIONS and NOTICES ARE NOT EXHAUSTIVE. Funai could not possibly know, evaluate and advice the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Funai has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Funai must first use all precautions thoroughly so that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

MAIN SECTION

13"/19" COLOR TV/VCR COMBINATION

SRC2213/SRC22134/SRC22194

Sec. 1: Main Section

- **Specifications**
- **Preparation for Servicing**
- **Adjustment Procedures**
- **Schematic Diagrams**
- **CBA's**

TABLE OF CONTENTS

Specifications 1-1-1
Important Safety Precautions 1-2-1
Standard Notes for Servicing 1-3-1
Preparation for Servicing 1-4-1
Operating Controls and Functions 1-5-1
Cabinet Disassembly Instructions 1-6-1
Electrical Adjustment Instructions 1-7-1
Block Diagrams 1-8-1
Mechanical Trouble Indicator 1-8-15
Power Supply Trouble Shooting Guide 1-8-17
Schematic Diagrams / CBA's and Test Points 1-9-1
Waveforms 1-10-1
Wiring Diagrams 1-11-1
System Control Timing Charts 1-12-1
IC Pin Function Descriptions 1-13-1
Lead Identifications 1-14-1

SPECIFICATIONS

✳Mode---------SP mode unless otherwise specified
✳Test input terminal
<Except Tuner>----------Video input (1Vp-p)
Audio input (-10dB)
<Tuner>----------Ant. input (80dBμV) Video: 87.5%
Audio: 25kHz dev (1kHz Sin)

<DEFLECTION>

[SRC2213/ SRC22134]

Description	Condition	Unit	Nominal	Limit
1. Over Scan	—	%	90	—
2. Linearity	Horizontal	%	—	15
	Vertical	%	—	10
3. High Voltage	—	kV	22	—

[SRC22194]

Description	Condition	Unit	Nominal	Limit
1. Over Scan	—	%	90	—
2. Linearity	Horizontal	%	—	15
	Vertical	%	—	10
3. High Voltage	—	kV	25	—

<VIDEO & CHROMA>

[SRC2213/ SRC22134]

Description	Condition	Unit	Nominal	Limit
1. Misconvergence	Center	m/m	—	0.3
	Corner	m/m	—	1.5
	Side	m/m	—	1.2
2. Tint Control Range	—	deg	±30	—
3. Contrast Control Range	—	dB	6	4
4. Brightness	APL 100%	ft-L	55	40
5. Color Temperature	—	K	9200	—

[SRC22194]

Description	Condition	Unit	Nominal	Limit
1. Misconvergence	Center	m/m	—	0.3
	Corner	m/m	—	1.5
	Side	m/m	—	1.2
2. Tint Control Range	—	deg	±30	—
3. Contrast Control Range	—	dB	6	4
4. Brightness	APL 100%	ft-L	35	40
5. Color Temperature	—	K	9200	—

<VCR>

Description	Condition	Unit	Nominal	Limit
1. Horizontal Resolution	(R/P)	Line	230	200
2. Jitter (Low)	(R/P)	µS	0.05	0.2
3. S/N Chroma AM(SP)	(R/P)	dB	38	33
PM(SP)	(R/P)	dB	36	33
4. Wow & Flutter (RMS)	(R/P)	%	0.25	0.5

<TUNER>

Description	Condition	Unit	Nominal	Limit
1. Video S/N	—	dB	45	40
2. Audio S/N (W/LPF)	—	dB	43	40

<AUDIO>

All items are measured across 8Ω resistor at speaker output terminal.

Description	Condition	Unit	Nominal	Limit
1. Audio Output Power (Max.)	(R/P)	W	1.0	0.8
2. Audio S/N (W/LPF)	(R/P)	dB	40	36
3. Audio Distortion (W/LPF)	(R/P)	%	3.0	5.0
4. Audio Freq. Response	200Hz (R/P)	dB	-2.0	-2.0±5.0
(-10dB Ref. 1KHz)	8kHz (R/P)	dB	0	0±6.0

Note: Nominal specifications represent the design specifications. All units should be able to approximate these. Some will exceed and some may drop slightly below these specifications. Limit specifications represent the absolute worst condition that still might be considered acceptable. In no case should a unit fail to meet limit specifications.

IMPORTANT SAFETY PRECAUTIONS

Prior to shipment from the factory, our products are strictly inspected for recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Safety Precautions for TV Circuit

1. **Before returning an instrument to the customer,** always make a safety check of the entire instrument, including, but not limited to, the following items:

a. Be sure that no built-in protective devices are defective and have been defeated during servicing. (1) Protective shields are provided on this chassis to protect both the technician and the customer. Correctly replace all missing protective shields, including any removed for servicing convenience. (2) When reinstalling the chassis and/or other assembly in the cabinet, be sure to put back in place all protective devices, including but not limited to, nonmetallic control knobs, insulating fishpapers, adjustment and compartment covers/shields, and isolation resistor/capacitor networks. **Do not operate this instrument or permit it to be operated without all protective devices correctly installed and functioning. Servicers who defeat safety features or fail to perform safety checks may be liable for any resulting damage.**

b. Be sure that there are no cabinet openings through which an adult or child might be able to insert their fingers and contact a hazardous voltage. Such openings include, but are not limited to, (1) spacing between the picture tube and the cabinet mask, (2) excessively wide cabinet ventilation slots, and (3) an improperly fitted and/or incorrectly secured cabinet back cover.

c. **Antenna Cold Check -** With the instrument AC plug removed from any AC source, connect an electrical jumper across the two AC plug prongs. Place the instrument AC switch in the on position. Connect one lead of an ohmmeter to the AC plug prongs tied together and touch the other ohmmeter lead in turn to each tuner antenna input exposed terminal screw and, if applicable, to the coaxial connector. If the measured resistance is less than 1.0 megohm or greater than 5.2 megohm, an abnormality exists that must be corrected before the instrument is returned to the customer. Repeat this test with the instrument AC switch in the off position.

d. **Leakage Current Hot Check -** With the instrument completely reassembled, plug the AC line cord directly into a 120V AC outlet. (Do not use an isolation transformer during this test.) Use a leakage current tester or a metering system that complies with American National Standards Institute (ANSI) C101.1 Leakage Current for Appliances and Underwriters Laboratories (UL) 1410, (50.7). With the instrument AC switch first in the on position and then in the off position, measure from a known earth ground (metal water pipe, conduit, etc.) to all exposed metal parts of the instrument (antennas, handle brackets, metal cabinet, screw heads, metallic overlays, control shafts, etc.), especially any exposed metal parts that offer an electrical return path to the chassis. Any current measured must not exceed 0.5 milli-ampere. Reverse the instrument power cord plug in the outlet and repeat the test.

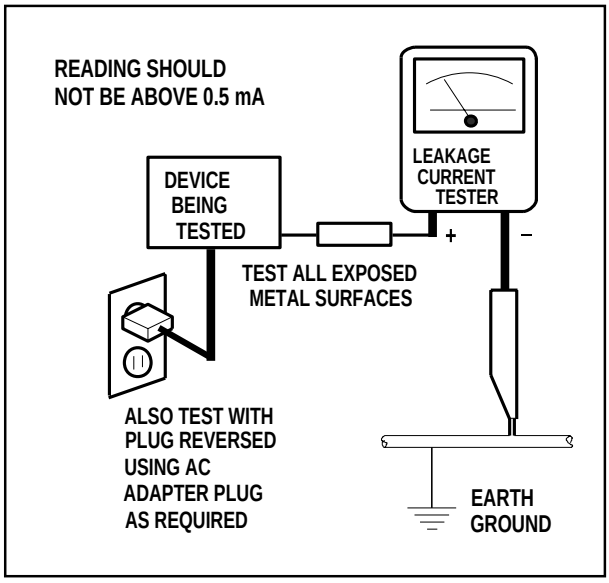

ANY MEASUREMENTS NOT WITHIN THE LIMITS SPECIFIED HEREIN INDICATE A POTENTIAL SHOCK HAZARD THAT MUST BE ELIMINATED BEFORE RETURNING THE INSTRUMENT TO THE CUSTOMER OR BEFORE CONNECTING THE ANTENNA OR ACCESSORIES.

e. **X-Radiation and High Voltage Limits -** Because the picture tube is the primary potential source of X-radiation in solid-state TV receivers, it is specially constructed to prohibit X-radiation emissions. For continued X-radiation protection, the replacement picture tube must be the same type as the original. Also, because the picture tube shields and mounting hardware perform an X-radiation protection function, they must be correctly in place. High voltage must be measured each time servic-

ing is performed that involves B+, horizontal deflection or high voltage. Correct operation of the X-radiation protection circuits also must be reconfirmed each time they are serviced. (X-radiation protection circuits also may be called "horizontal disable" or "hold down.") Read and apply the high voltage limits and, if the chassis is so equipped, the X-radiation protection circuit specifications given on instrument labels and in the Product Safety & X-Radiation Warning note on the service data chassis schematic. High voltage is maintained within specified limits by close tolerance safety-related components/adjustments in the high-voltage circuit. If high voltage exceeds specified limits, check each component specified on the chassis schematic and take corrective action.

2. Read and comply with all caution and safety-related notes on or inside the receiver cabinet, on the receiver chassis, or on the picture tube.

3. Design Alteration Warning - Do not alter or add to the mechanical or electrical design of this TV receiver. Design alterations and additions, including, but not limited to circuit modifications and the addition of items such as auxiliary audio and/or video output connections, might alter the safety characteristics of this receiver and create a hazard to the user. Any design alterations or additions will void the manufacturer's warranty and may make you, the servicer, responsible for personal injury or property damage resulting therefrom.

4. Picture Tube Implosion Protection Warning - The picture tube in this receiver employs integral implosion protection. For continued implosion protection, replace the picture tube only with one of the same type number. Do not remove, install, or otherwise handle the picture tube in any manner without first putting on shatterproof goggles equipped with side shields. People not so equipped must be kept safely away while picture tubes are handled. Keep the picture tube away from your body. Do not handle the picture tube by its neck. Some "in-line" picture tubes are equipped with a permanently attached deflection yoke; because of potential hazard, do not try to remove such "permanently attached" yokes from the picture tube.

5. Hot Chassis Warning -

a. Some TV receiver chassis are electrically connected directly to one conductor of the AC power cord and maybe safety-serviced without an isolation transformer only if the AC power plug is inserted so that the chassis is connected to the ground side of the AC power source. To confirm that the AC power plug is inserted correctly, with an AC voltmeter, measure between the chassis and a known earth ground. If a voltage reading in excess of 1.0V is obtained, remove and reinsert the AC power plug in the opposite polarity and again measure the voltage potential between the chassis and a known earth ground.

b. Some TV receiver chassis normally have 85V AC(RMS) between chassis and earth ground regardless of the AC plug polarity. This chassis can be safety-serviced only with an isolation transformer inserted in the power line between the receiver and the AC power source, for both personnel and test equipment protection.

c. Some TV receiver chassis have a secondary ground system in addition to the main chassis ground. This secondary ground system is not isolated from the AC power line. The two ground systems are electrically separated by insulation material that must not be defeated or altered.

6. Observe original lead dress. Take extra care to assure correct lead dress in the following areas: a. near sharp edges, b. near thermally hot parts-be sure that leads and components do not touch thermally hot parts, c. the AC supply, d. high voltage, and e. antenna wiring. Always inspect in all areas for pinched, out of place, or frayed wiring. Check AC power cord for damage.

7. Components, parts, and/or wiring that appear to have overheated or are otherwise damaged should be replaced with components, parts, or wiring that meet original specifications. Additionally, determine the cause of overheating and/or damage and, if necessary, take corrective action to remove any potential safety hazard.

8. Product Safety Notice - Some electrical and mechanical parts have special safety-related characteristics which are often not evident from visual inspection, nor can the protection they give necessarily be obtained by replacing them with components rated for higher voltage, wattage, etc.. Parts that have special safety characteristics are identified by a (⚠) on schematics and in parts lists. Use of a substitute replacement that does not have the same safety characteristics as the recommended replacement part might create shock, fire, and/or other hazards. The Product's Safety is under review continuously and new instructions are issued whenever appropriate. Prior to shipment from the factory, our products are strictly inspected to confirm with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

Precautions during Servicing

A. Parts identified by the (⚠) symbol are critical for safety.

Replace only with part number specified.

B. In addition to safety, other parts and assemblies are specified for conformance with regulations applying to spurious radiation. These must also be replaced only with specified replacements.

Examples: RF converters, RF cables, noise blocking capacitors, and noise blocking filters, etc.

C. Use specified internal wiring. Note especially:

1) Wires covered with PVC tubing
2) Double insulated wires
3) High voltage leads

D. Use specified insulating materials for hazardous live parts. Note especially:

1) Insulation Tape
2) PVC tubing
3) Spacers
4) Insulators for transistors.

E. When replacing AC primary side components (transformers, power cord, etc.), wrap ends of wires securely about the terminals before soldering.

F. Observe that the wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)

G. Check that replaced wires do not contact sharp edged or pointed parts.

H. When a power cord has been replaced, check that 5~6 kg of force in any direction will not loosen it.

I. Also check areas surrounding repaired locations.

J. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

K. Crimp type wire connector

When replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, in order to prevent shock hazards, perform carefully and precisely the following steps.

Replacement procedure

1) Remove the old connector by cutting the wires at a point close to the connector.

   Important: Do not re-use a connector (discard it).

2) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.
3) Align the lengths of the wires to be connected. Insert the wires fully into the connector.
4) Use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

L. When connecting or disconnecting the VCR connectors, first, disconnect the AC plug from AC supply socket.

Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.

1. Clearance Distance

When replacing primary circuit components, confirm specified clearance distance (d) and (d') between soldered terminals, and between terminals and surrounding metallic parts. (See Fig. 1)

Table 1 : Ratings for selected area

AC Line Voltage	Region	Clearance Distance (d) (d')
110 to 130 V	USA or CANADA	≥ 3.2 mm (0.126 inches)

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

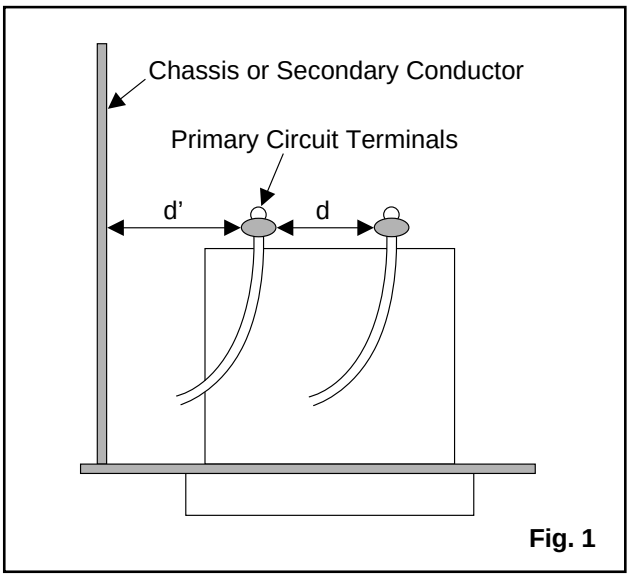

Fig. 1

2. Leakage Current Test

Confirm the specified (or lower) leakage current between B (earth ground, power cord plug prongs) and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).

Measuring Method : (Power ON)

Insert load Z between B (earth ground, power cord plug prongs) and exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig. 2 and following table.

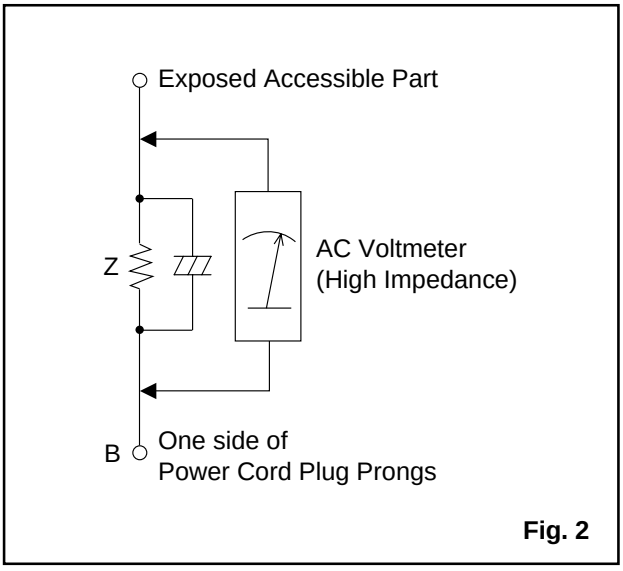

Fig. 2

Table 2 : Leakage current ratings for selected areas

AC Line Voltage	Region	Load Z	Leakage Current (i)	Earth Ground (B) to:
110 to 130 V	USA or CANADA	0.15μF CAP. & 1.5kΩ RES. connected in parallel	i≤0.5mA rms	Exposed accessible parts

Note: This table is unofficial and for reference only. Be sure to confirm the precise values.

STANDARD NOTES FOR SERVICING

Circuit Board Indications

1. The output pin of the 3 pin Regulator ICs is indicated as shown:

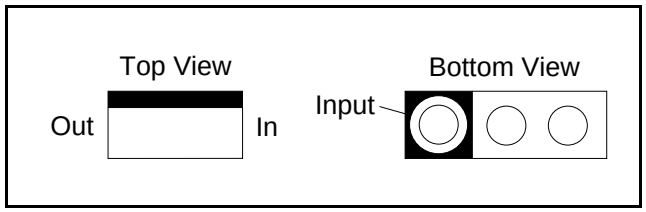

2. For other ICs, pin 1 and every 5th pin is indicated as shown:

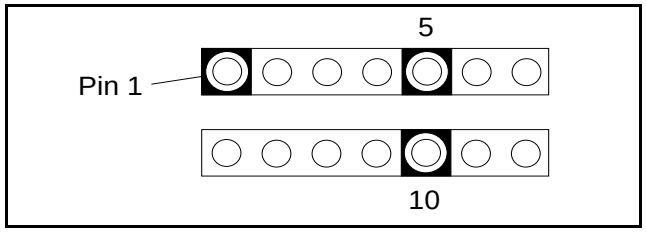

3. The 1st pin of every pin connector are indicated as shown:

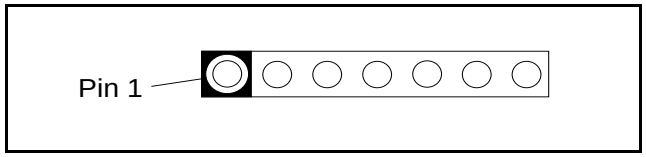

Instructions for Connectors

1. When you connect or disconnect FFC cable (connector), be sure to disconnect the AC cord.
2. FFC cable (connector) should be inserted parallel into the connector, not at an angle.

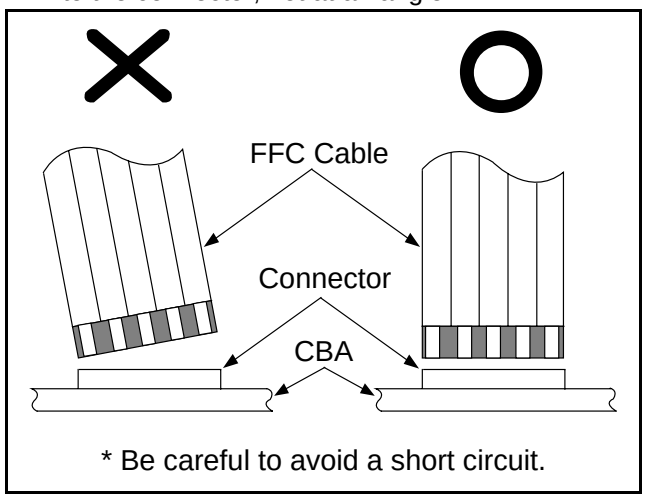

[CBA= Circuit Board Assembly]

How to Read the Values of the Rectangular Type Chip Components

Example:
(a) Resistor

= 473 = 47 [kΩ]

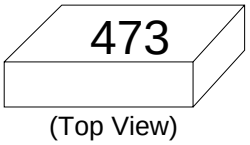

(b) Capacitor

= Not Shown

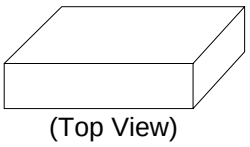

Caution:
Once chip parts (Resistors, Capacitors, Transistors, etc.) are removed, they must not be reused. Always use a new part.

Replacement Procedures for Leadless (Chip) Components

The Following Procedures are Recommended for the Replacement of the Leadless Components Used in this Unit.

1. Preparation for replacement

a. Soldering Iron
Use a pencil-type soldering iron (less than 30 watts).

b. Solder
Eutectic solder (Tin 63%, Lead 37%) is recommended.

c. Soldering time
Do not apply heat for more than 4 seconds.

d. Preheating
Leadless capacitor must be preheated before installation. (130°C~150°C, for about two minutes.)

Notes:

a. Leadless components must not be reused after removal.

b. Excessive mechanical stress and rubbing for the component electrode must be avoided.

2. Removing the leadless component

Grasp the leadless component body with tweezers and alternately apply heat to both electrodes. When the solder on both electrodes has melted, remove leadless component with a twisting motion.

Notes:

a. Do not attempt to lift the component off the board until the component is completely disconnected from the board by the twisting action.

b. Take care not to break the copper foil on the printed board

3. Installing the leadless component

a. Presolder the contact points of the circuit board.

b. Press the part downward with tweezers and solder both electrodes as shown below.

Note:

Do not glue the replacement leadless component to the circuit board.

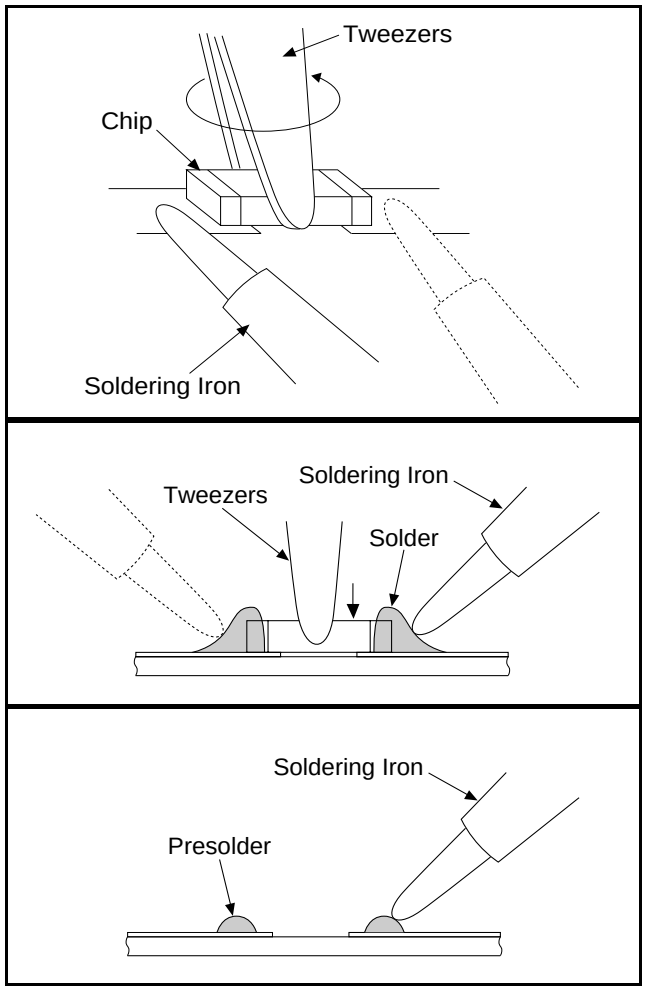

How to Remove / Install Flat Pack IC

Caution:

1. Do not apply the hot air to the chip parts around the Flat Pack-IC for over 6 seconds as damage may occur to the chip parts. Put Masking Tape around the Flat Pack-IC to protect other parts from damage. (Fig. S-1-2)

2. The Flat Pack-IC on the CBA is affixed with glue, so be careful not to break or damage the foil of each pin or solder lands under the IC when removing it.

1. Removal

With Hot - Air Flat Pack - IC Desoldering Machine:

a. Prepare the Hot - Air Flat Pack - IC Desoldering Machine, then apply hot air to Flat Pack - IC (about 5~6 seconds). (Fig. S-1-1)

b. Remove the Flat Pack- IC with tweezers while applying the hot air.

With Soldering Iron:

a. Using desoldering braid, remove the solder from all pins of the Flat Pack - IC. When you use solder flux which is applied to all pins of the Flat Pack - IC, you can remove it easily. (Fig. S-1-3)

b. Lift each lead of the Flat Pack - IC upward one by one, using a sharp pin or wire to which solder will not adhere (iron wire). When heating the pins, use a fine tip soldering iron or a hot air Desoldering Machine. (Fig. S-1-4)

With Iron Wire:

a. Using desoldering braid, remove the solder from all pins of the Flat Pack - IC. When you use solder flux which is applied to all pins of the Flat Pack - IC, you can remove it easily. (Fig. S-1-3)

b. Affix the wire to a workbench or solid mounting point, as shown in Fig. S-1-5.

c. Pull up on the wire as the solder melts so as to lift the IC leads from the CBA contact pads, while heating the pins using a fine tip soldering iron or hot air blower.

Note:

When using a soldering iron, care must be taken to ensure that the Flat Pack - IC is not being held by glue, or when it is removed from the CBA, it may be damaged if force is used.

2. Installation

a. Using desoldering braid, remove the solder from the foil of each pin of the Flat Pack - IC on the CBA, so you can install a replacement Flat Pack - IC more easily.

b. The "●" mark on the Flat Pack - IC indicates pin 1 (See Fig. S-1-6). Make sure this mark matches the 1 on the CBA when positioning for installation. Then pre - solder the four corners of the Flat Pack-IC (See Fig. S-1-7).

c. Solder all pins of the Flat Pack - IC. Make sure that none of the pins have solder bridges.

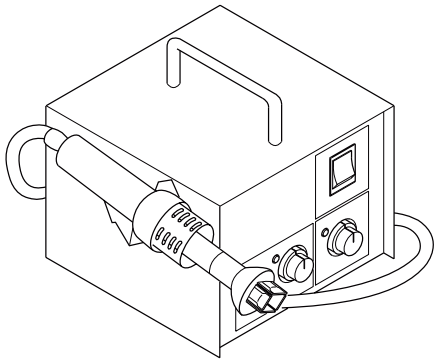

Fig. S-1-1

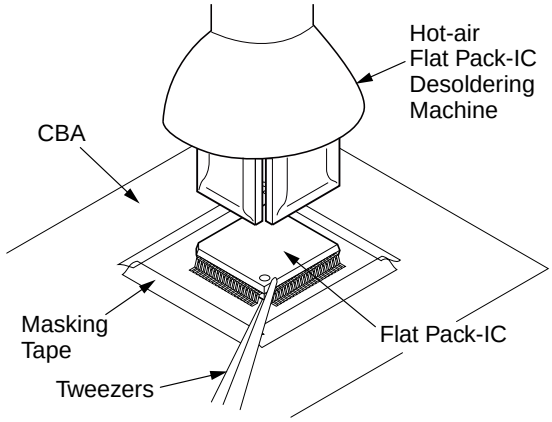

Fig. S-1-2

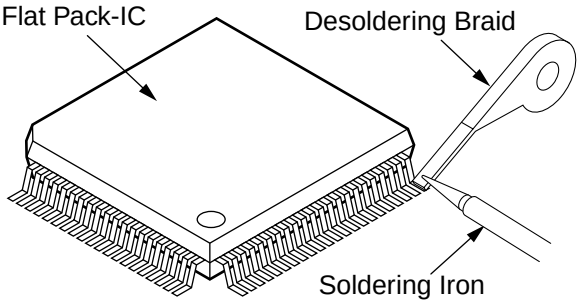

Fig. S-1-3

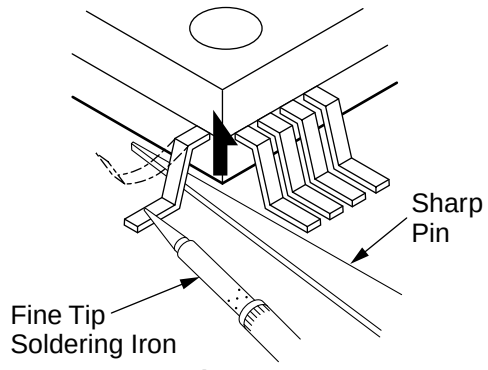

Fig. S-1-4

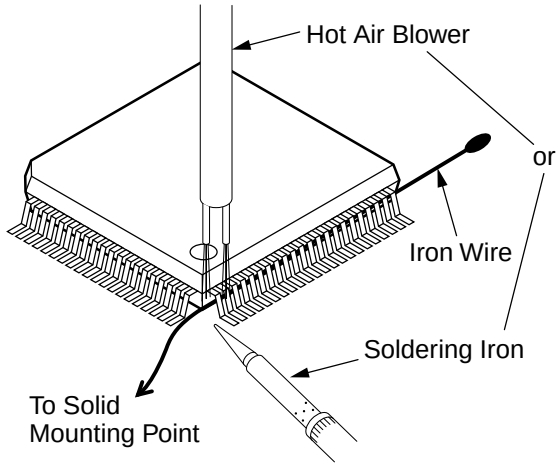

Fig. S-1-5

Example :

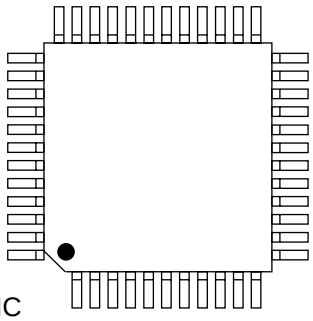

Pin 1 of the Flat Pack-IC
is indicated by a " ● " mark.

Fig. S-1-6

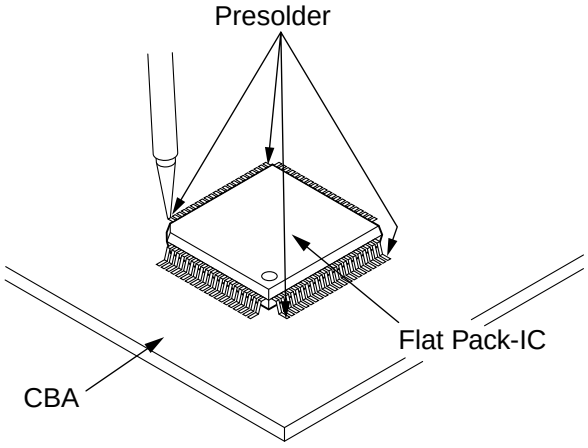

Fig. S-1-7

Instructions for Handling Semiconductors

Electrostatic breakdown of the semiconductors may occur due to a potential difference caused by electrostatic charge during unpacking or repair work.

Ground for Human Body

Be sure to wear a grounding band (1MΩ) that is properly grounded to remove any static electricity that may be charged on the body.

Ground for Work Bench

Be sure to place a conductive sheet or copper plate with proper grounding (1MΩ) on the work bench or other surface, where the semiconductors are to be placed. Because the static electricity charge on the clothing will not escape through the body grounding band, be careful to avoid contacting semiconductors to clothing.

Incorrect

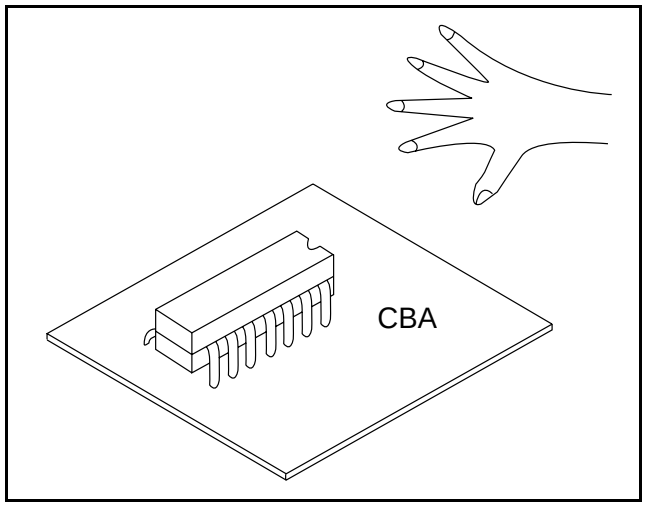

Correct

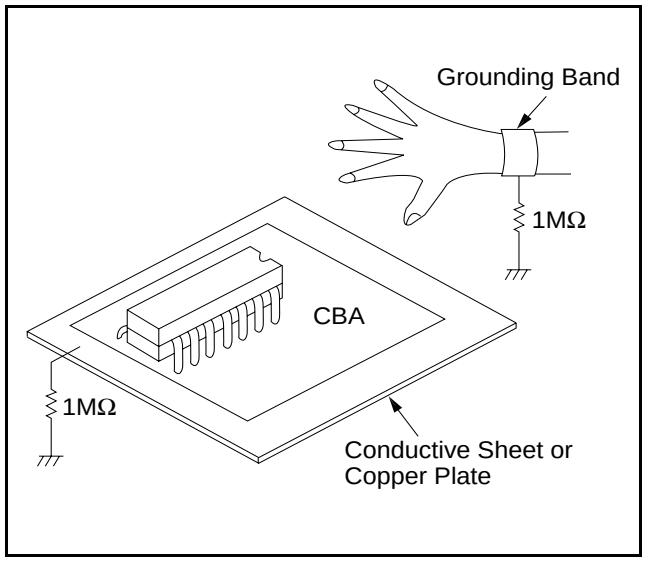

PREPARATION FOR SERVICING

How to Enter the Service Mode

Caution: 1

1. Optical sensors system are used for Tape Start and End Sensor on this equipment. Read this page carefully and prepare as described on this page before starting to service; otherwise, the unit may operate unexpectedly.

Preparing: 1

1. Cover Q202 (START SENSOR) and Q201 (END SENSOR) with Insulation Tape or enter the service mode to activate Sensor Inhibition automatically.

Note: Avoid playing, rewinding or fast forwarding the tape to its beginning or end, because both Tape End Sensors are not active.

How to Enter the Service Mode

1. Turn power on.
2. Use service remote control unit and press WAKE-UP/SLEEP key. (See page1-7-1)
3. When entering the service mode, one of the number (1, 2 or 4) will display at corners of the screen.
4. During the service mode, electrical adjustment mode can be selected by remote control key. (Service remote control unit).

   Details are as follows.

Key	Adjustment Mode
MENU	Picture adjustment mode: Press the MENU button to change from BRT (Bright), *CNT (Contrast), *CLR (Color), *TNT(Tint) and *V-T. Press CH UP/DOWN key to display Initial Value. *Marked items are not necessary to adjust normally.
0	C-Trap and Y DL Time adjustment mode: See adjustment instructions page 1-7-3.
1	No need to use.
2	AGC/H adjustment mode: See adjustment instructions page 1-7-2.
3	Auto AFT adjustment mode: See adjustment instructions page 1-7-2.
4	Auto record mode: Perform recording (15 Sec.)-->Stop-->Rewind (Zero return) automatically.
5	Head switching point adjustment mode: See adjustment instructions page 1-7-6.
6	**No need to use.**
7	Purity check mode: Shows Red, Green, Blue or White cyclically on the screen each time the “7” key is pressed.
8	H. Shift adjustment mode: See adjustment instructions page 1-7-4.
9	V.size/V. shift adjustment: See adjustment instructions page 1-7-4.

Caution: 2

1. The deck mechanism assembly is mounted on the Main CBA directly, and SW211 (REC-SAFETY SW) is mounted on the Main CBA. When deck mechanism assembly is removed from the Main CBA due to servicing, this switch can not be operated automatically.

Preparing: 2

1. To eject the tape, press the STOP/EJECT button on the unit (or Remote Control).
2. When you want to record during the Service mode, press the Rec button while depressing SW211 (REC-SAFETY SW) on the Main CBA.

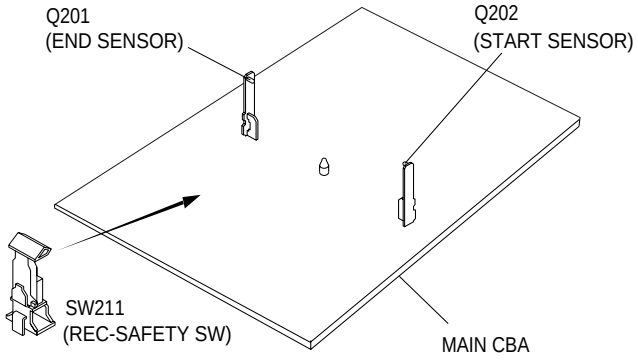

OPERATING CONTROLS AND FUNCTIONS

[SRC2213]

NOTE:

- We do not recommend the use of universal remote controls. Not all of the functions may be controlled with a universal remote control.
  If you decide to use a universal remote control with this unit, please be aware that the code number given may not operate this unit. In this case, please call the manufacturer of the universal remote control.

- TV/VCR FRONT PANEL -

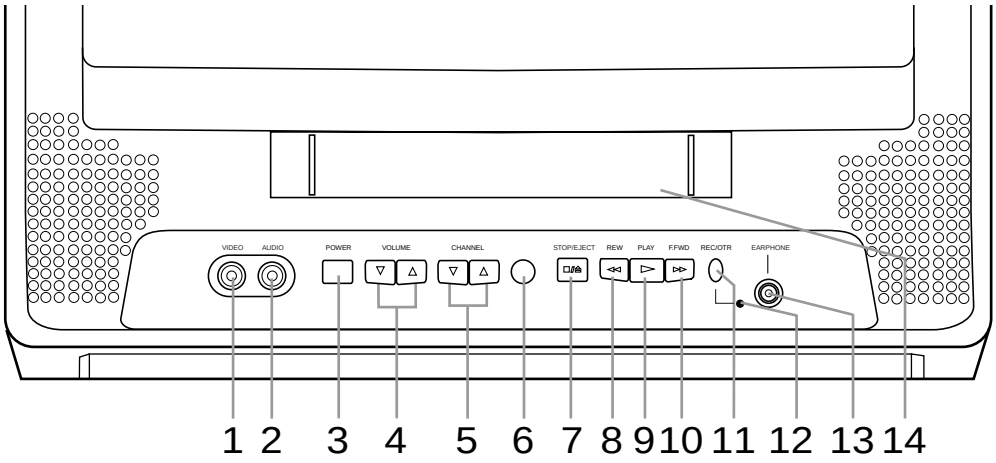

- REMOTE CONTROL -

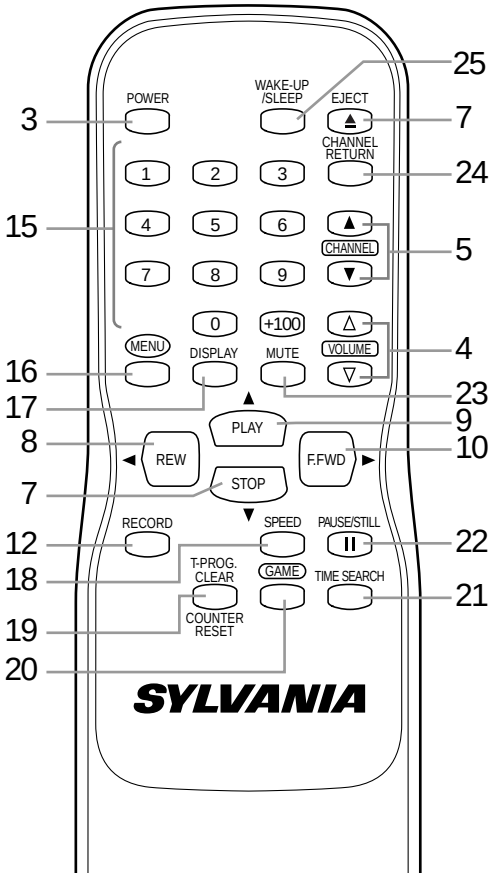

1 VIDEO input jack– Connect to the video output jack of your video camera or another VCR.

2 AUDIO input jack– Connect to the audio output jack of your audio equipment, video camera or another VCR.

3 POWER button– Press to turn TV/VCR on and off. Press to activate timer recording.

4 VOLUME △ / ▽ buttons– Adjust the volume level.

5 CHANNEL ▲ / ▼ buttons– Press to select the desired channels for viewing or recording.

You may display the main menu on the TV screen by pressing repeatedly this button on the TV/VCR.

TRACKING function– Press to minimize video 'noise' (lines or dots on screen) during playback mode.

6 Remote Sensor Window– Receives the infrared signals from the remote control.

7 STOP button– Press to stop the tape motion.

EJECT button– Press in the Stop mode to remove tape from TV/VCR.

▼ button–

- Press to select setting modes from the on screen menu.
- Press to enter digits when setting program. (for example: setting clock or timer program)

- REAR VIEW -

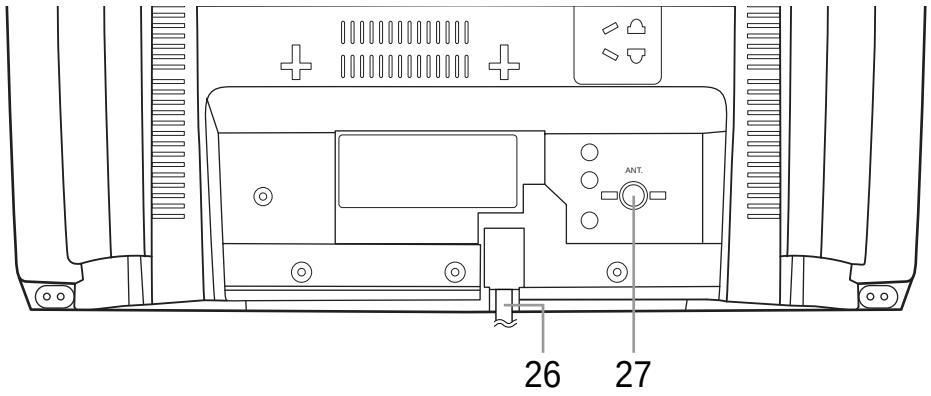

8 REW button– Press to rewind the tape, or to view the picture rapidly in reverse during playback mode. (Rewind Search)

◀ button–

- Press to select a mode from a particular menu. (for example: LANGUAGE or USER'S SET UP)

9 PLAY button– Press to begin playback.

▲ button–

- Press to select setting modes from the on screen menu.
- Press to enter digits when setting program. (for example: setting clock or timer program)

10 F.FWD button– Press to rapidly advance the tape, or to view the picture rapidly in forward during playback mode. (Forward Search)

▶ button–

- When setting program (for example: setting clock or timer program), press to determine your selection and proceed to the next step you want to input.
- Press to determine setting modes from on screen menu.
- Press to select a mode from a particular menu. (for example: LANGUAGE or USER'S SET UP)

11 REC button– Press for manual recording.

OTR button– Activates One Touch Recording. (only on the TV/VCR)

12 RECORD indicator– Flashes during recording. Lights up in the Stand-by mode for Timer Recording.

13EARPHONE jack– Connects to earphones (not supplied) for personal listening. The size of jack is 1/8" monaural (3.5mm).

14 Cassette compartment

15 Number buttons– Press to select desired channels for viewing or recording. To select channels from 1 to 9, first press the 0 button and then 1 to 9.

+100 button– When selecting cable channels which are higher than 99, press this button first, then press the last two digits. (To select channel 125, first press the "+100" button then press "2" and "5").

16 MENU button– Press to display the main menu on the TV screen.

17 DISPLAY button– Display the counter or the current channel number and current time on the TV screen.

18 SPEED button– Press to choose the desired recording speed:SP/SLP.

19 T-PROG. CLEAR button– Press to cancel a setting of timer program.

COUNTER RESET button– Press to reset counter to 0:00:00.

20 GAME button– Sets the game mode and external input mode at the same time.

21 TIME SEARCH button– Press to activate Time Search mode.

22 PAUSE/STILL button– Press to temporarily stop the tape during the recording or to view a still picture during playback.

23 MUTE button– Mutes the sound. Press it again to resume sound.

24 CHANNEL RETURN button– Press to go back to the previously viewed channel. For example, pressing this button once will change channel display from 3 (present channel) to 10 (previously viewed channel), and pressing it a second time will return from 10 to 3.

25 WAKE UP/SLEEP button– Sets the Wake up or Sleep Timer.

26 Power cord– Connect to a standard AC outlet (120V/60Hz).

27 ANT. terminal– Connect to an antenna or cable system.

[SRC22134/SRC22194]

This manual covers 13" and 19". The operation of the two models are exactly the same except the appearance. 19" model is illustrated in this manual.

- TV/VCR FRONT PANEL -

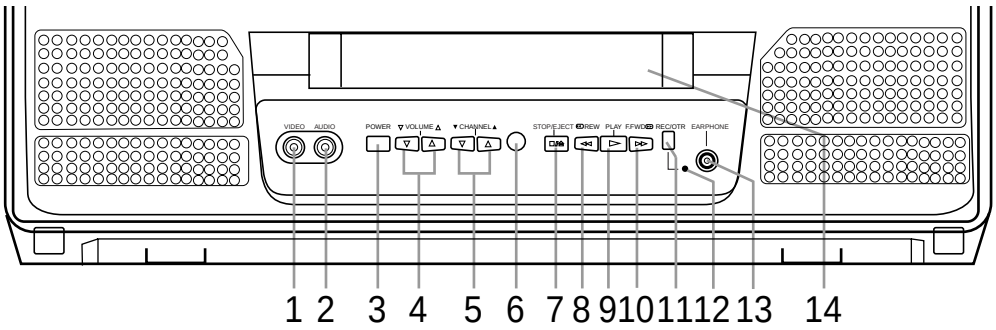

- REMOTE CONTROL -

[SRC22134]

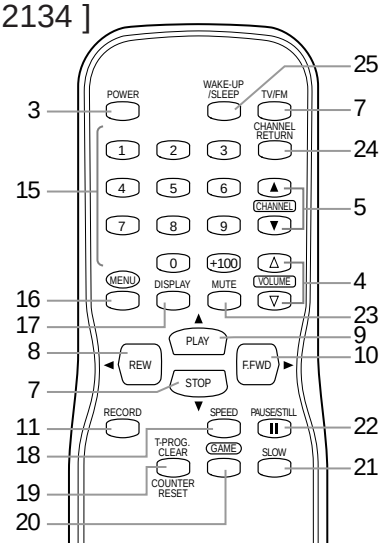

[SRC22194]

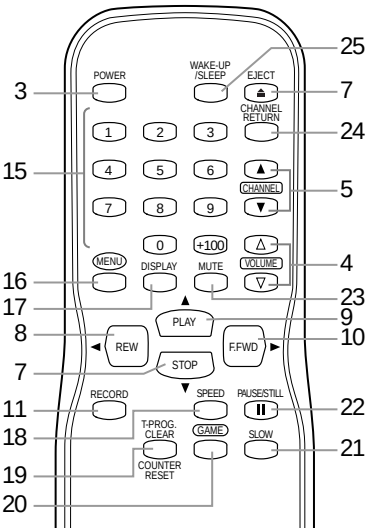

1 VIDEO input jack– Connect to the video output jack of your video camera or another VCR.

2 AUDIO input jack– Connect to the audio output jack of your audio equipment, video camera or another VCR.

3 POWER button– Press to turn TV/VCR on and off. Press to activate timer recording.

4 VOLUME △ / ▽ buttons– Adjust the volume level.

5 CHANNEL ▲ / ▼ buttons– Press to select the desired channels for viewing or recording, listening of FM radio.

You may display the main menu on the TV screen by pressing repeatedly this button on the TV/VCR.

TRACKING function– Press to minimize video 'noise' (lines or dots on screen) during playback or Slow mode.

6 Remote Sensor Window– Receives the infrared signals from the remote control.

[TV/VCR]

7 STOP button– Press to stop the tape motion.

EJECT button– Press in the Stop mode to remove tape from TV/VCR.

▼ button–

- Press to select setting modes from the on screen menu.
- Press to enter digits when setting program. (for example: setting clock or timer program)

[Remote control]

(SRC22134)TV/FM button– Sets the FM mode.

(SRC22194)EJECT button– Press in the Stop mode to remove tape from TV/VCR.

- REAR VIEW -*

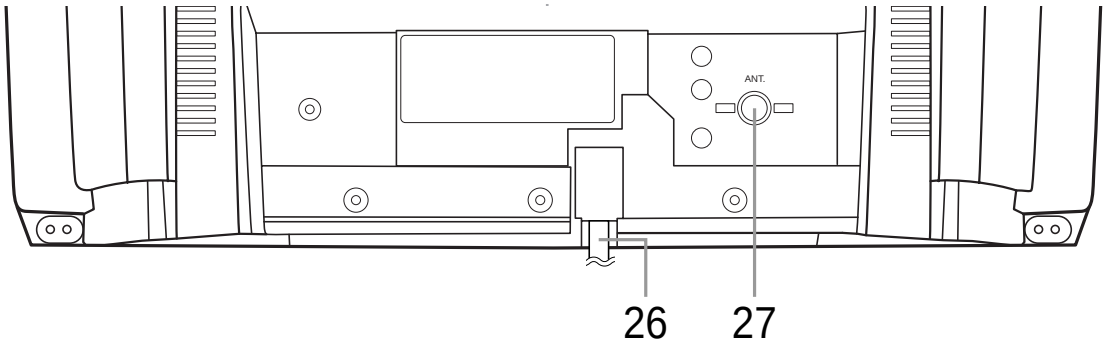

8 REW button– Press to rewind the tape, or to view the picture rapidly in reverse during playback mode. (Rewind Search)

◀ button–

- Press to select a mode from a particular menu. (for example: LANGUAGE or USER'S SET UP)

9 PLAY button– Press to begin playback.

▲ button–

- Press to select setting modes from the on screen menu.
- Press to enter digits when setting program. (for example: setting clock or timer program)

10 F.FWD button– Press to rapidly advance the tape, or to view the picture rapidly in forward during playback mode. (Forward Search)

► button–

- When setting program (for example: setting clock or timer program), press to determine your selection and proceed to the next step you want to input.
- Press to determine setting modes from on screen menu.
- Press to select a mode from a particular menu. (for example: LANGUAGE or USER'S SET UP)

11 REC button– Press for manual recording.
OTR button– Activates One Touch Recording. (only on the TV/VCR)

12 RECORD indicator– Flashes during recording. Lights up in the Stand-by mode for Timer Recording.

13 EARPHONE jack– Connects to earphones (not supplied) for personal listening. The size of jack is 1/8" monaural (3.5mm).

14 Cassette compartment

15 Number buttons– Press to select desired channels for viewing or recording. To select channels from 1 to 9, first press the 0 button and then 1 to 9.
+100 button– When selecting cable channels which are higher than 99, press this button first, then press the last two digits. (To select channel 125, first press the "+100" button then press "2" and "5").

16 MENU button– Press to display the main menu on the TV screen.

17 DISPLAY button– Display the counter or the current channel number and current time on the TV screen.

18 SPEED button– Press to choose the desired recording speed:SP/SLP.

19 T-PROG. CLEAR button– Press to cancel a setting of timer program.
COUNTER RESET button– Press to reset counter to 0:00:00.

20 GAME button– Sets the game mode and external input mode at the same time.

21 SLOW button– Press to start slow motion playback.

22 PAUSE/STILL button– Press to temporarily stop the tape during the recording or to view a still picture during playback.
Frame Advance function– Press to advance the picture one frame at a time during Still mode.

23 MUTE button– Mutes the sound. Press it again to resume sound.

24 CHANNEL RETURN button– Press to go back to the previously viewed channel. For example, pressing this button once will change channel display from 3 (present channel) to 10 (previously viewed channel), and pressing it a second time will return from 10 to 3.

25 WAKE UP/SLEEP button– Sets the Wake up or Sleep Timer.

26 Power cord– Connect to a standard AC outlet (120V/60Hz).

27 ANT. terminal– Connect to an antenna or cable system.

CABINET DISASSEMBLY INSTRUCTIONS

[SRC2213/SRC22134]

1. Disassembly Flowchart

This flowchart indicates the disassembly steps for the cabinet parts, and the CBA in order to gain access to item(s) to be serviced. When reassembling, follow the steps in reverse order. Bend, route and dress the cables as they were.

Caution !!

When removing the CRT, be sure to discharge the Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

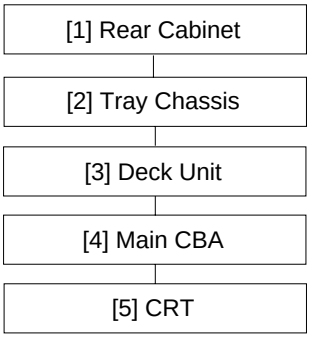

2. Disassembly Method

ID/ LOC. No.	PART	REMOVAL		
		Fig. No.	REMOVE/ *UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOL-DER	Note
[1]	Rear Cabinet	1, 2	4(S-1)	1
[2]	Tray Chassis	3, 5	Anode Cap, CN501, CRT CBA, CN601, CN802, CN571	2
[3]	Deck Unit	3, 5	7(S-2), 2(S-3), Desolder (CL201, CL401, CL402, CL403)	3
[4]	Main CBA	3, 5	6(S-4)	4
[5]	CRT	4	4(S-5)	5
↓ (1)	↓ (2)	↓ (3)	↓ (4)	↓ (5)

(1): Order of steps in Procedure. When reassembling, follow the steps in reverse order.These numbers are also used as the identification (location) No. of parts in Figures.

(2): Parts to be removed or installed.

(3): Fig. No. showing Procedure of Part Location.

(4): Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.
S=Screw, P=Spring, L=Locking Tab, CN=Connector, *=Unhook, Unlock, Release, Unplug, or Desolder
2(S-2) = two Screw (S-2)

(5): Refer to the following"Reference Notes in the Table" following.

Reference Notes in the Table

1. Removal of the Rear Cabinet.
   Remove Screws 4(S-1).

Caution !!

Discharge the Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

2. Removal of the Tray Chassis.
   Discharge the Anode Lead of the CRT with the CRT Ground before removing the Anode Cap.
   Disconnect the following: Anode Cap, CN501, CRT CBA, CN601, CN571 and CN802. Then, pull the Tray Chassis backward.
3. Removal of the Deck Unit.
   Remove Screws 7(S-2) and 2(S-3). Then, desolder connectors (CL201, CL401, CL402, CL403) and lift up the Deck Unit.
4. Removal of the Main CBA.
   Remove Screws 6(S-4) and pull up the Main CBA.
5. Removal of the CRT.
   Remove Screws 4(S-5) and pull the CRT backward.

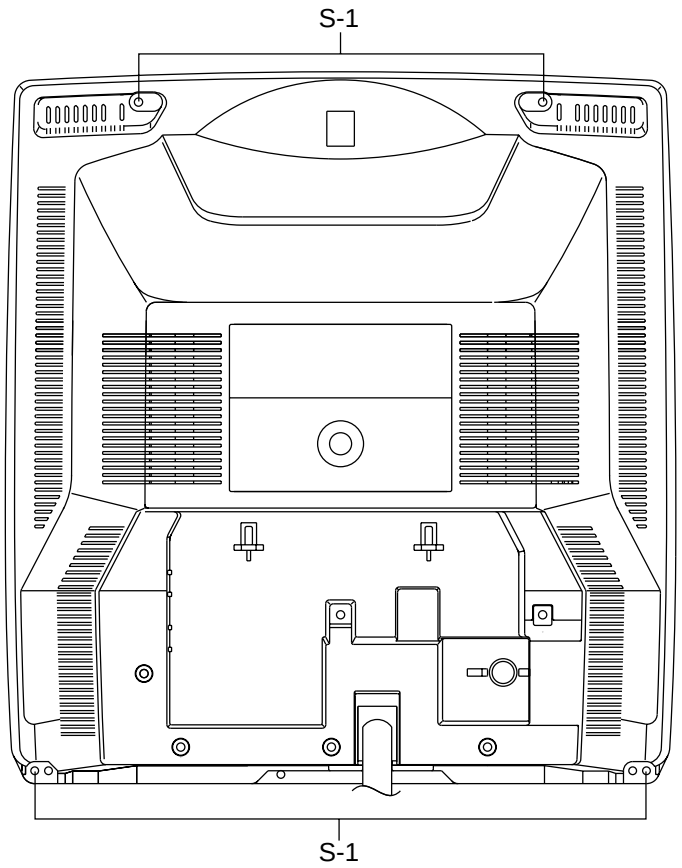

Fig. 1

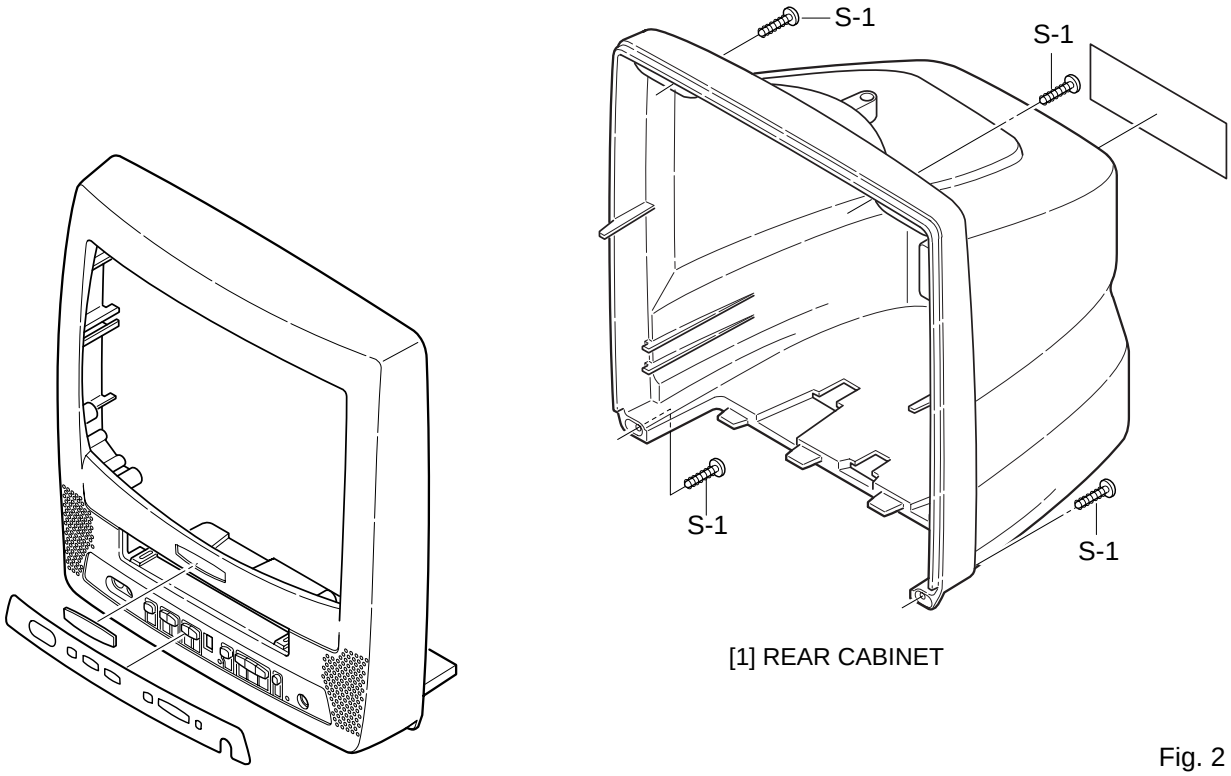

[1] REAR CABINET

Fig. 2

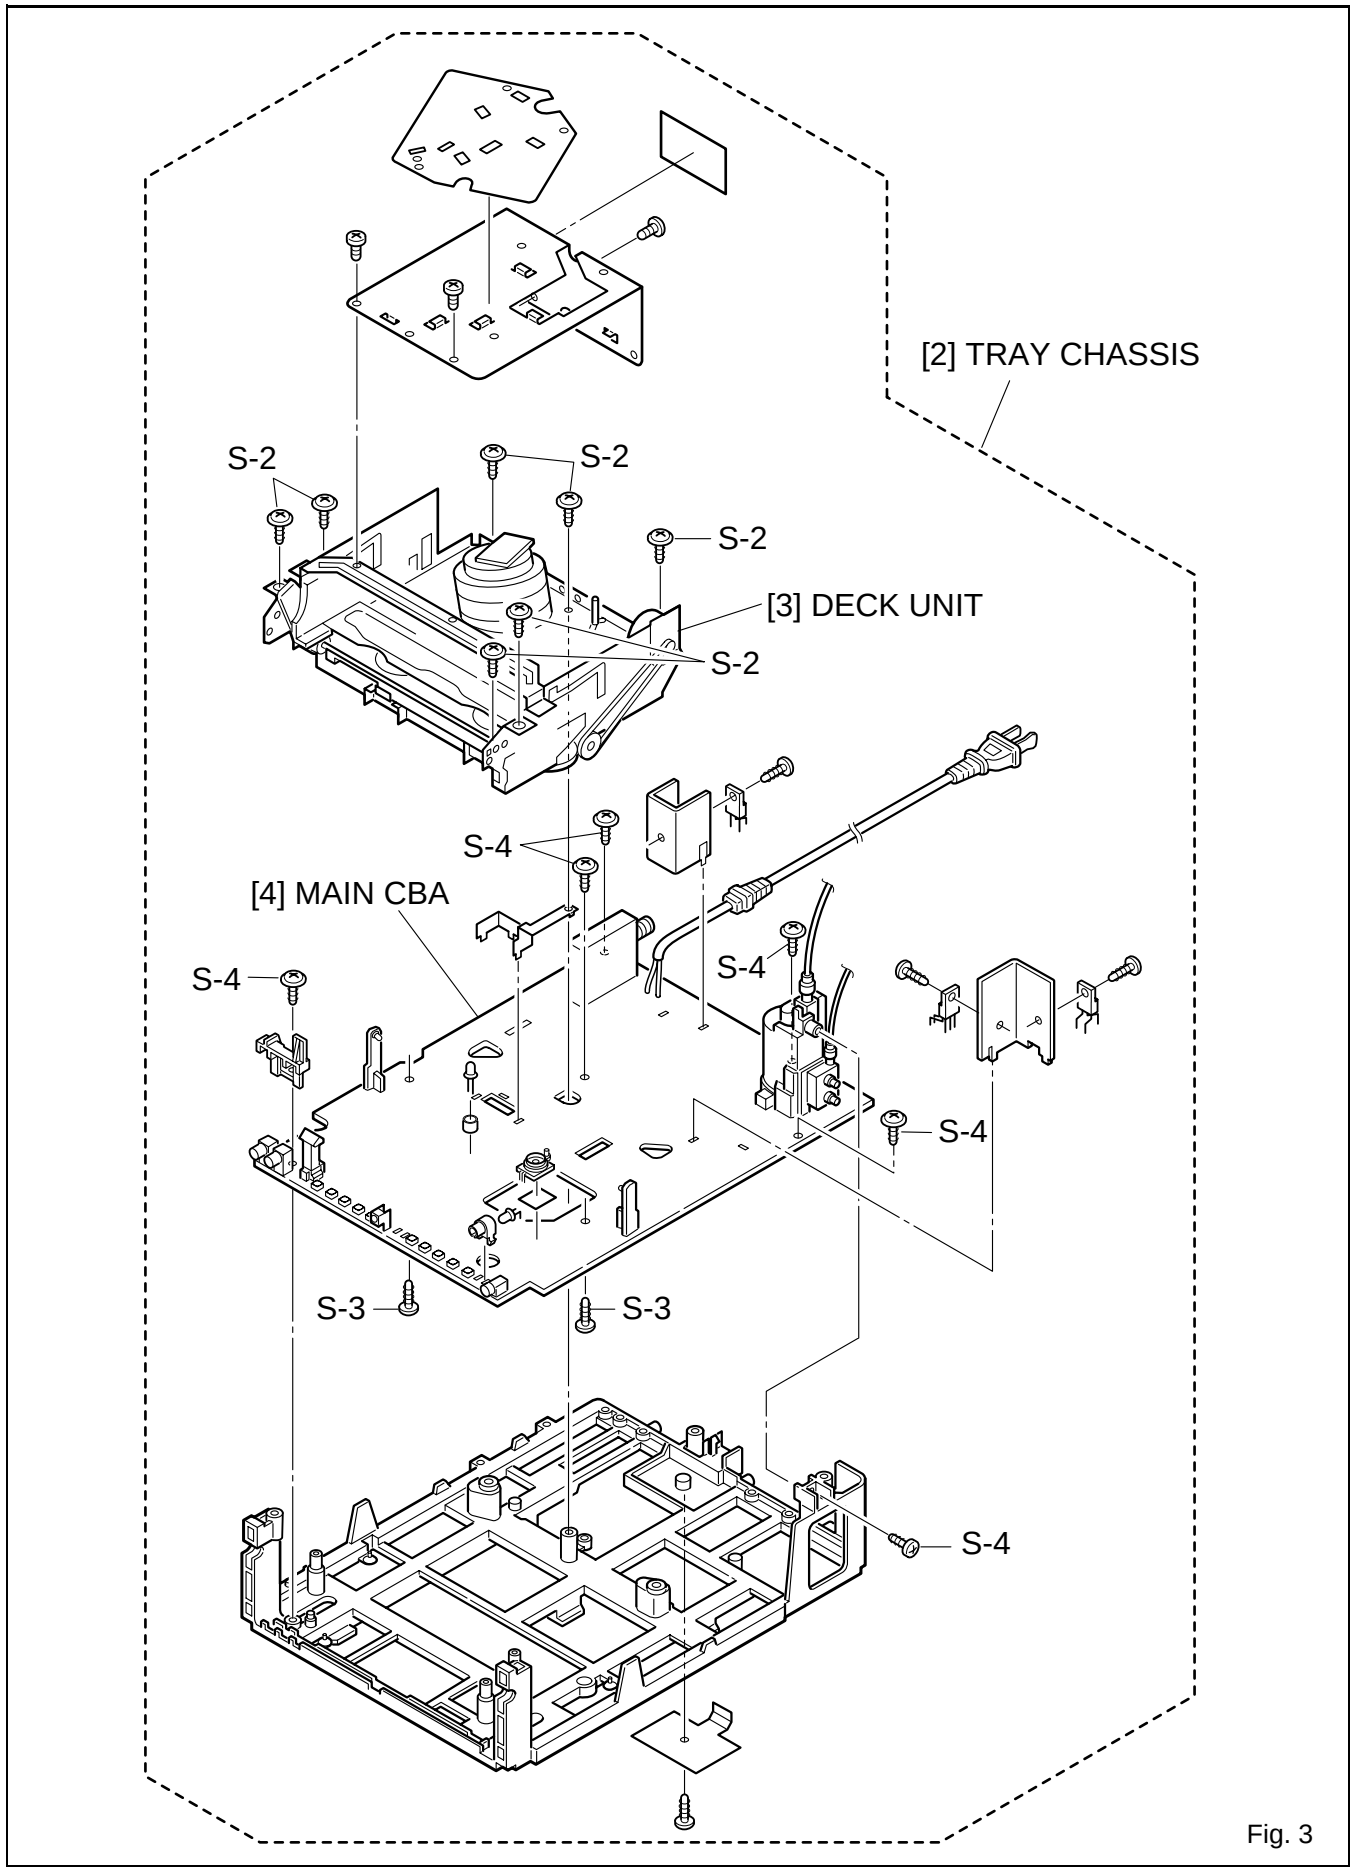
[2] TRAY CHASSIS
S-2
S-2
S-2
[3] DECK UNIT
S-2
S-4
[4] MAIN CBA
S-4
S-4
S-4
S-3
S-3
S-4

Fig. 3

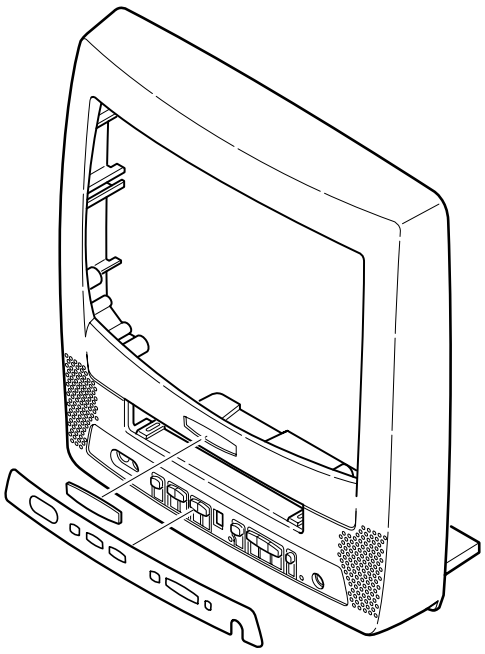

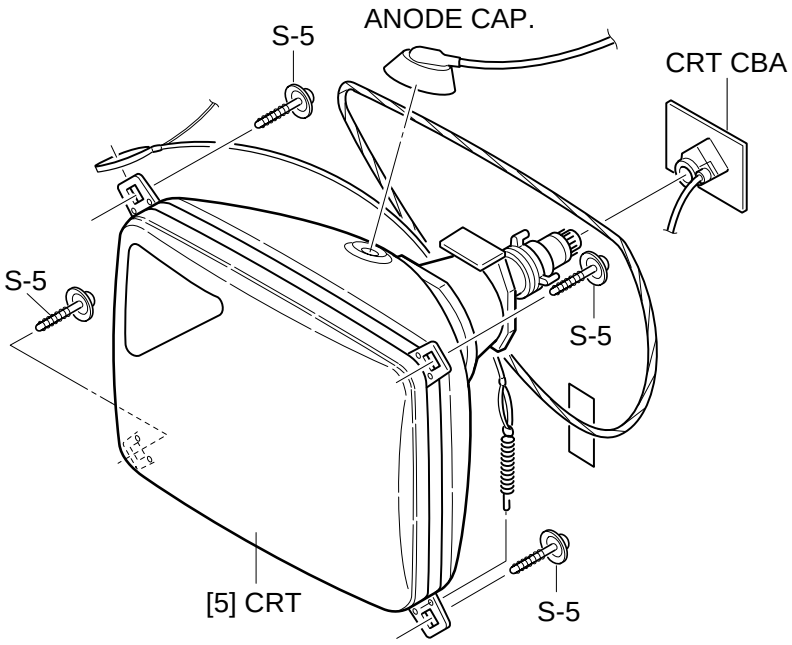

Fig. 4

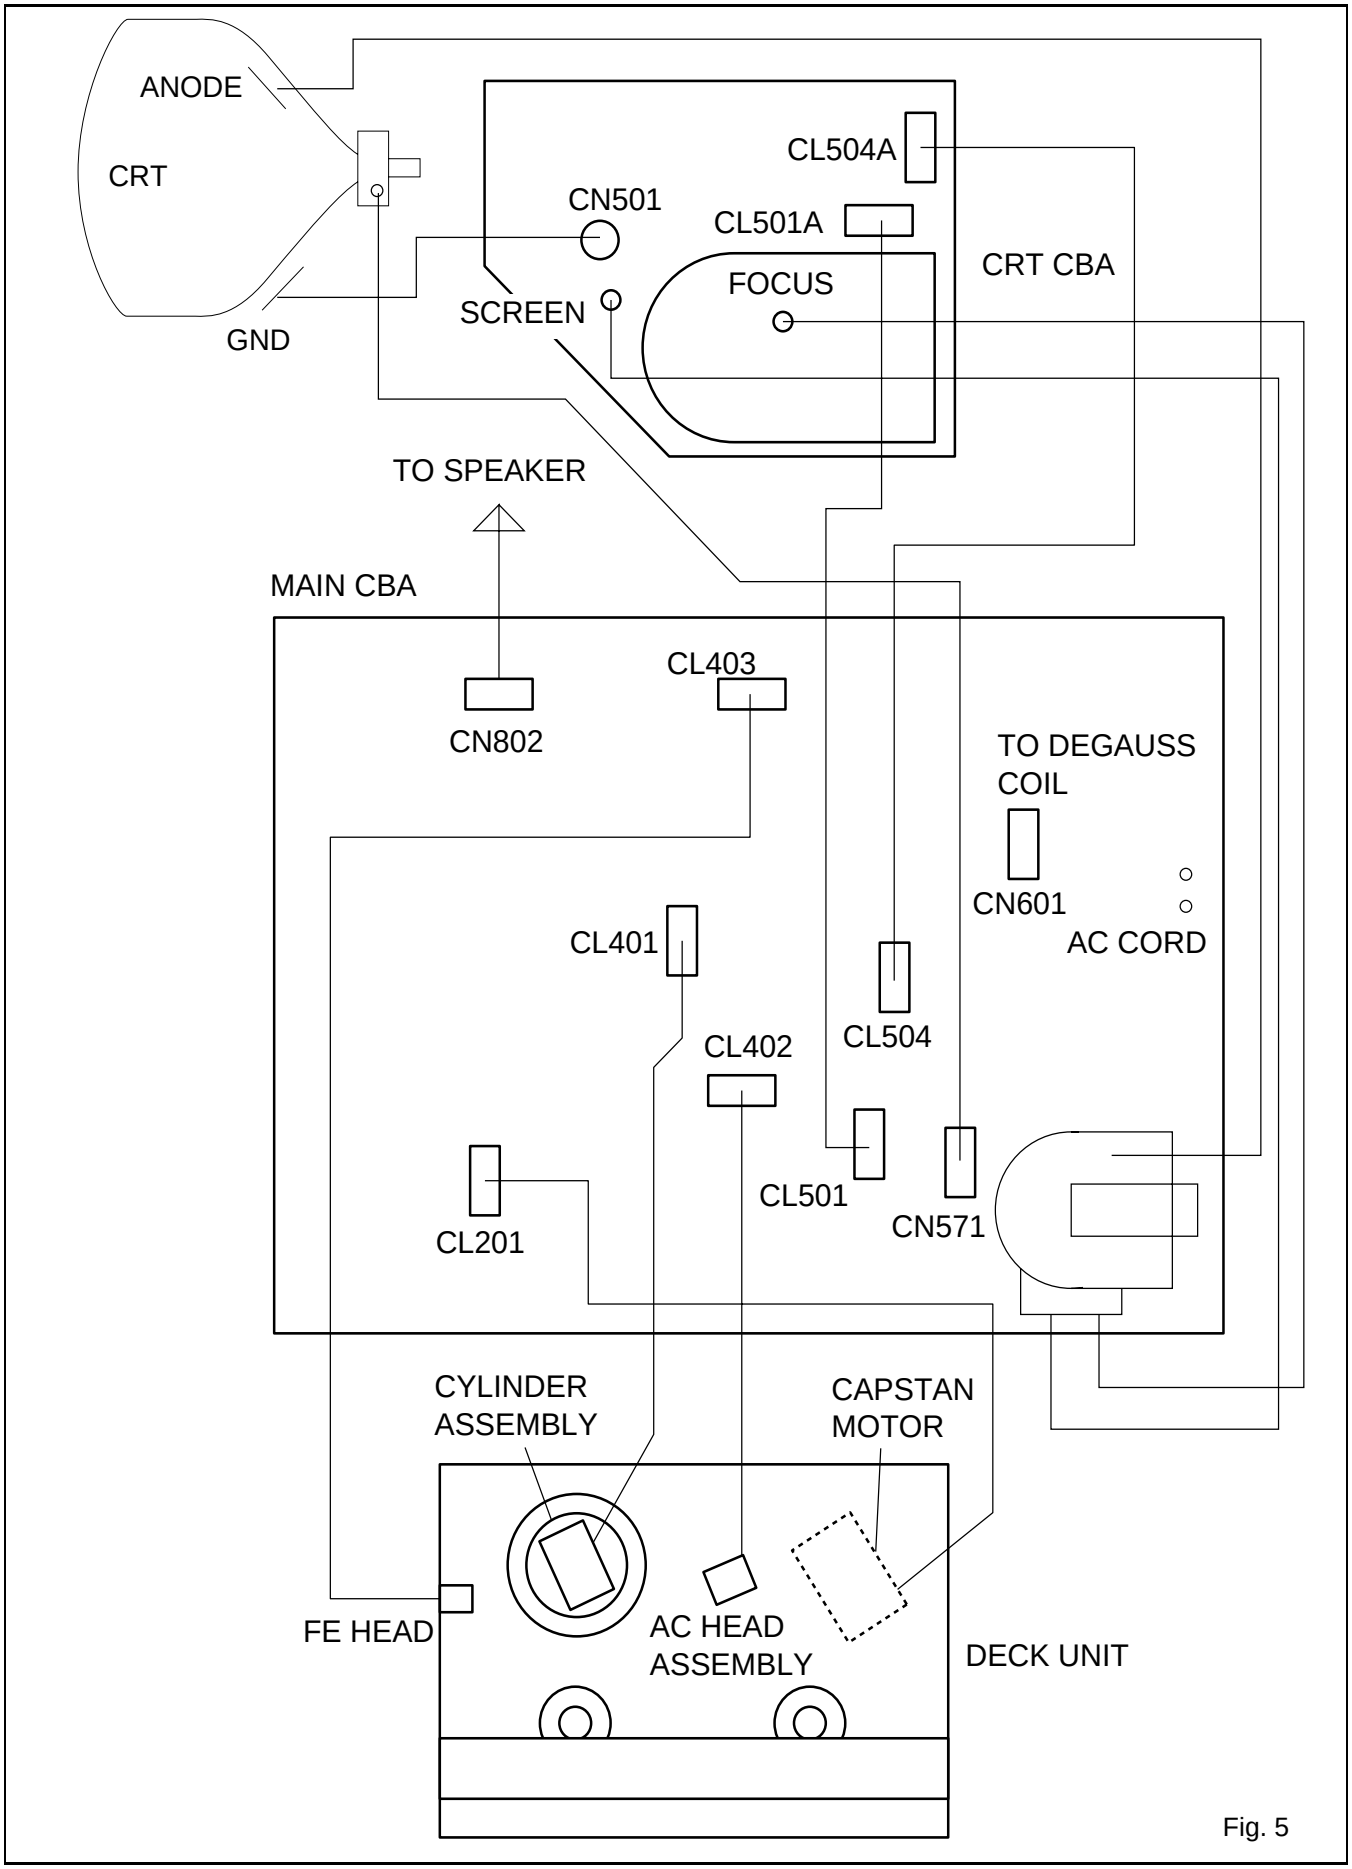
ANODE
CRT
GND
CN501
SCREEN
CL504A
CL501A
FOCUS
CRT CBA
TO SPEAKER
MAIN CBA
CN802
CL403
TO DEGAUSS
COIL
CN601
AC CORD
CL401
CL504
CL402
CL501
CN571
CL201
CYLINDER
ASSEMBLY
CAPSTAN
MOTOR
FE HEAD
AC HEAD
ASSEMBLY
DECK UNIT

Fig. 5

[SRC22194]

1. Disassembly Flowchart

This flowchart indicates the disassembly steps for the cabinet parts, and the CBA in order to gain access to item(s) to be serviced. When reassembling, follow the steps in reverse order. Bend, route and dress the cables as they were.

Caution !!

When removing the CRT, be sure to discharge the Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

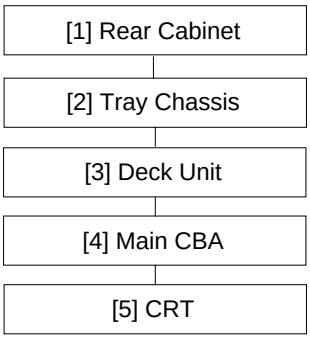

2. Disassembly Method

ID/ LOC. No.	PART	REMOVAL		
		Fig. No.	REMOVE/ *UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOL-DER	Note
[1]	Rear Cabinet	1, 2	4(S-1)	1
[2]	Tray Chassis	3, 4, 5	Anode Cap, CN501, CRT CBA, CN601, CN802, CN571	2
[3]	Deck Unit	3, 5	7(S-2), 2(S-3), Desolder (CL201, CL401, CL402, CL403)	3
[4]	Main CBA	3, 5	6(S-4)	4
[5]	CRT	4	4(S-5)	5
↓ (1)	↓ (2)	↓ (3)	↓ (4)	↓ (5)

(1): Order of steps in Procedure. When reassembling, follow the steps in reverse order.These numbers are also used as the identification (location) No. of parts in Figures.

(2): Parts to be removed or installed.

(3): Fig. No. showing Procedure of Part Location.

(4): Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.
S=Screw, P=Spring, L=Locking Tab, CN=Connector, *=Unhook, Unlock, Release, Unplug, or Desolder
2(S-2) = two Screw (S-2)

(5): Refer to the following"Reference Notes in the Table" following.

Reference Notes in the Table

1. Removal of the Rear Cabinet.
   Remove Screws 4(S-1).

Caution !!

Discharge the Anode Lead of the CRT with the CRT Ground Wire before removing the Anode Cap.

2. Removal of the Tray Chassis.
   Discharge the Anode Lead of the CRT with the CRT Ground before removing the Anode Cap.
   Disconnect the following: Anode Cap, CN501, CRT CBA, CN601, CN571 and CN802. Then, pull the Tray Chassis backward.
3. Removal of the Deck Unit.
   Remove Screws 7(S-2) and 2(S-3). Then, desolder connectors (CL201, CL401, CL402, CL403) and lift up the Deck Unit.
4. Removal of the Main CBA.
   Remove Screws 6(S-4) and pull up the Main CBA.
5. Removal of the CRT.
   Remove Screws 4(S-5) and pull the CRT backward.

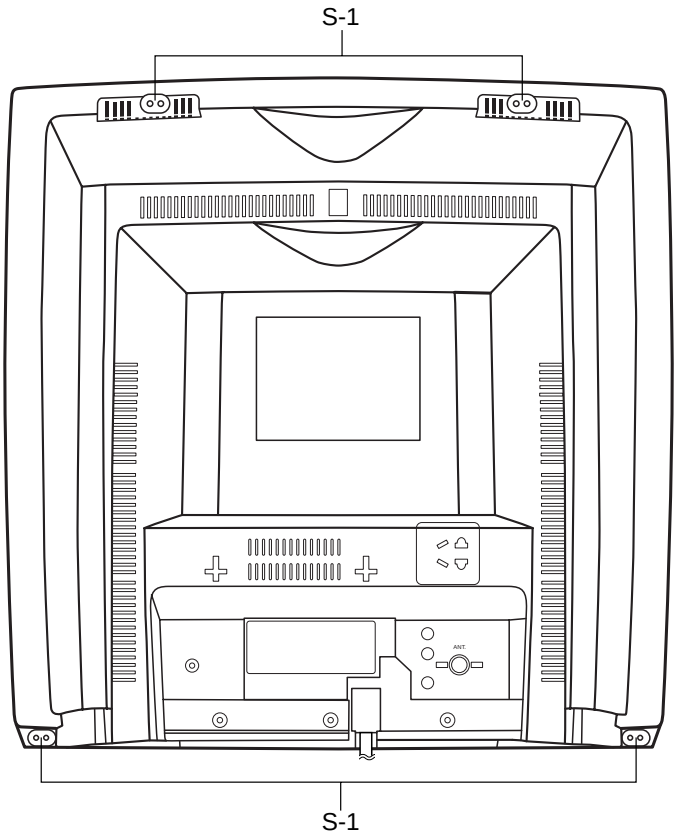

Fig. 1

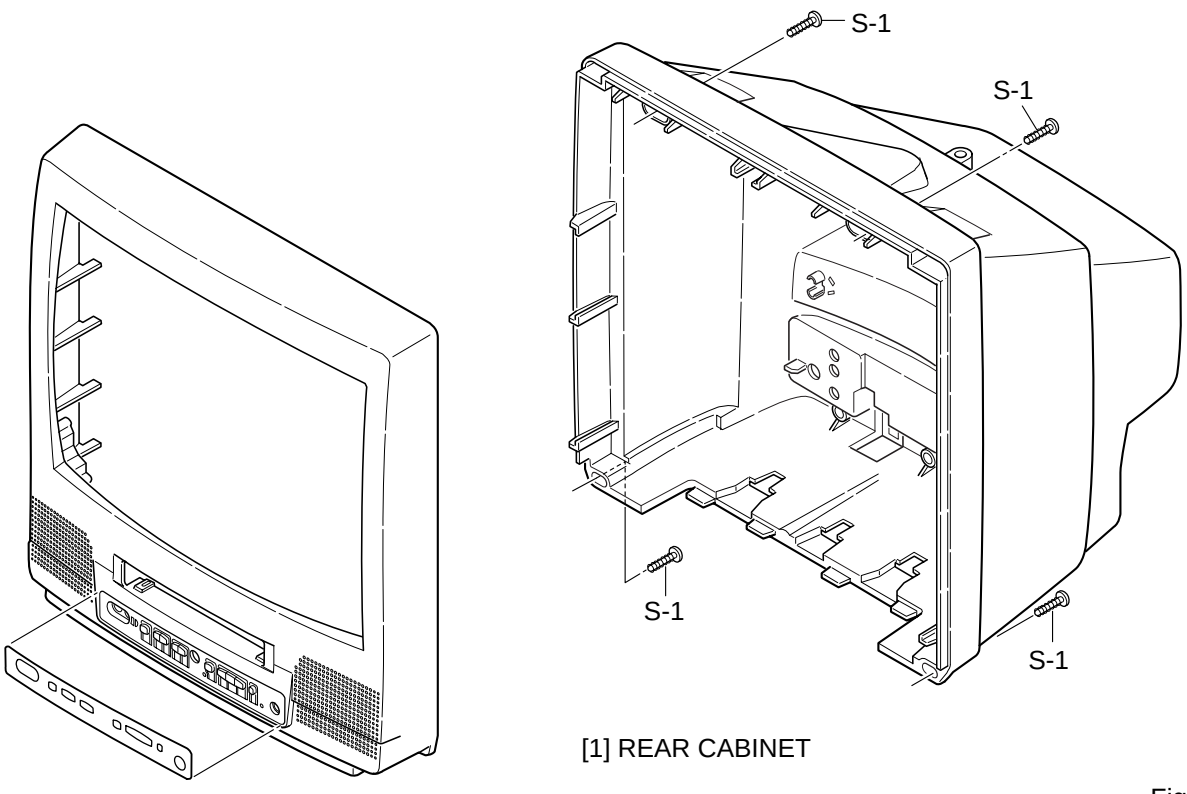

[1] REAR CABINET

Fig. 2

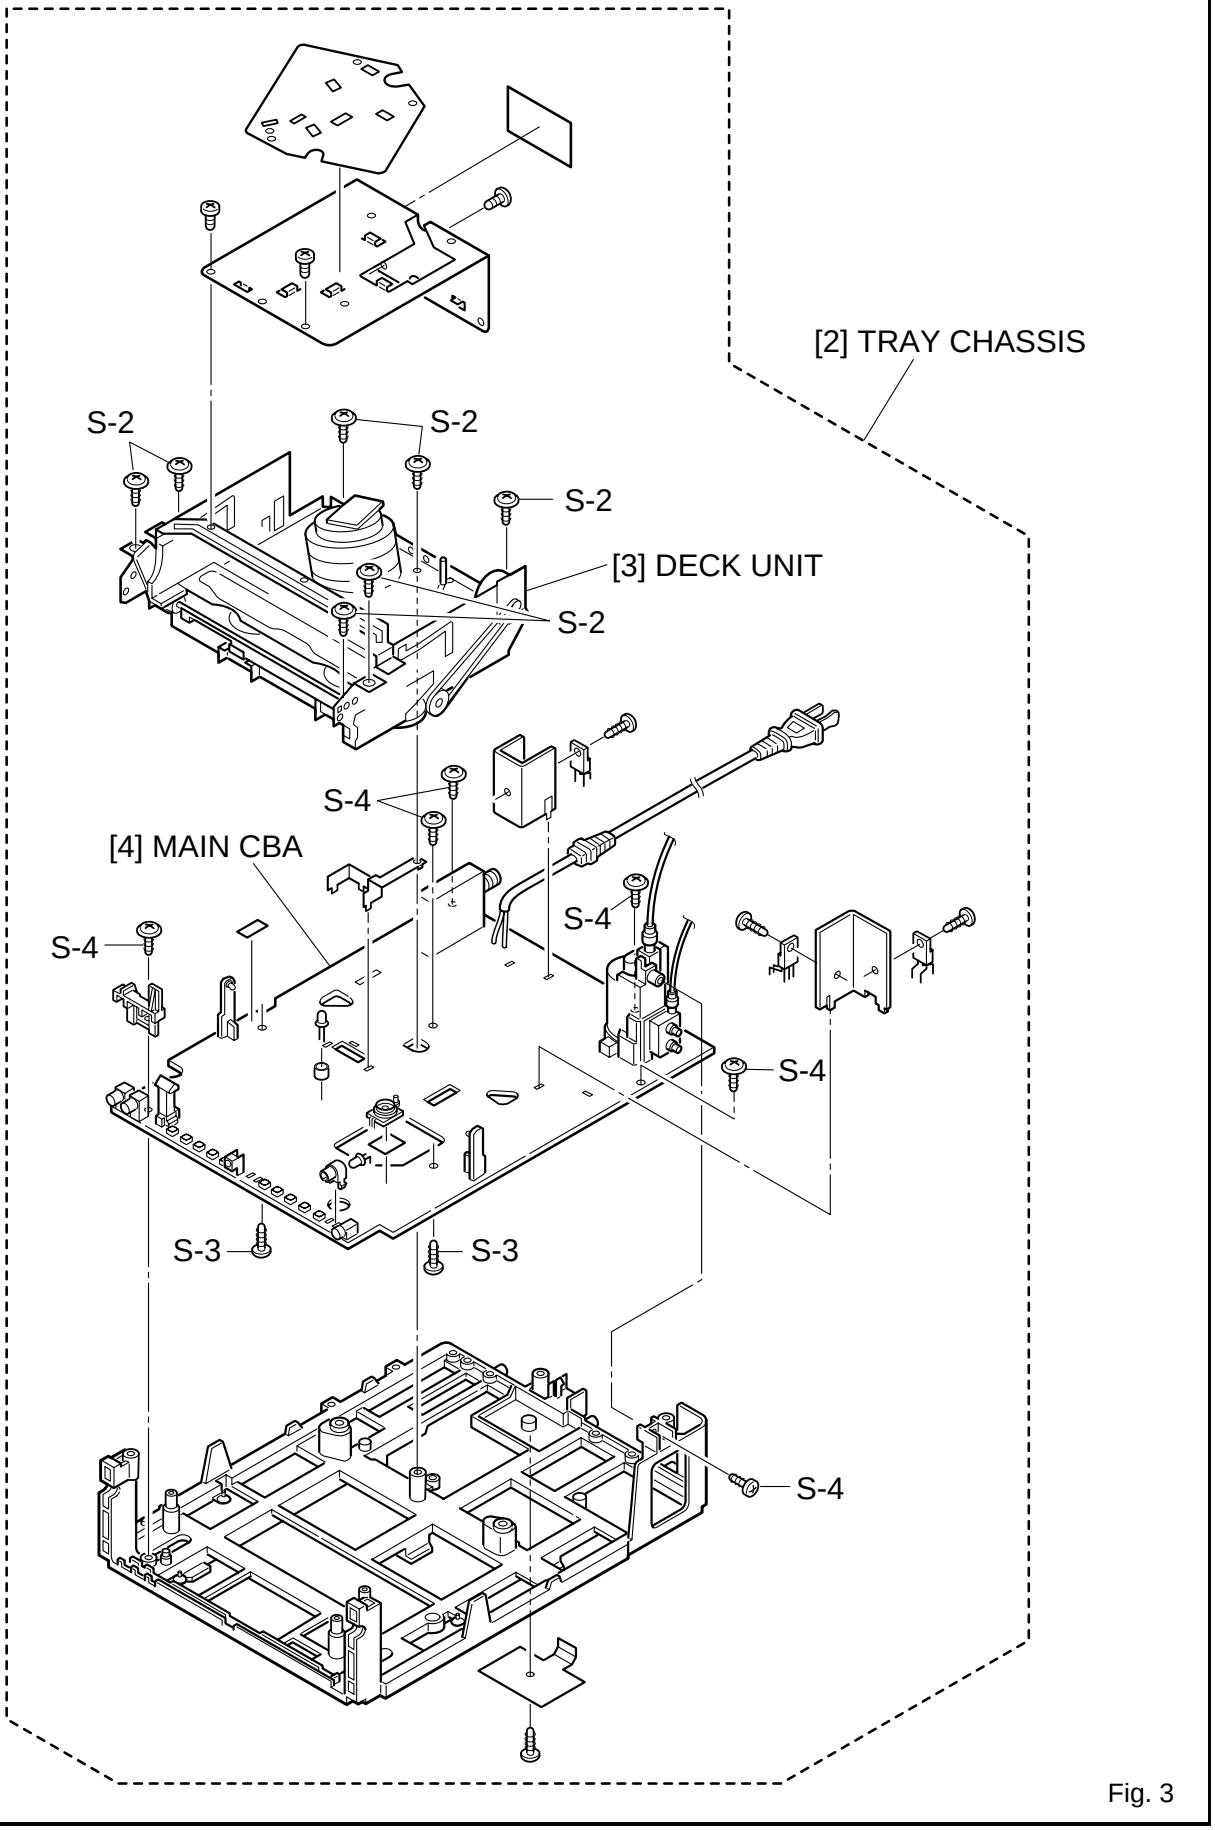
[2] TRAY CHASSIS
S-2
S-2
S-2
[3] DECK UNIT
S-2
S-4
[4] MAIN CBA
S-4
S-4
S-4
S-3
S-3
S-4

Fig. 3

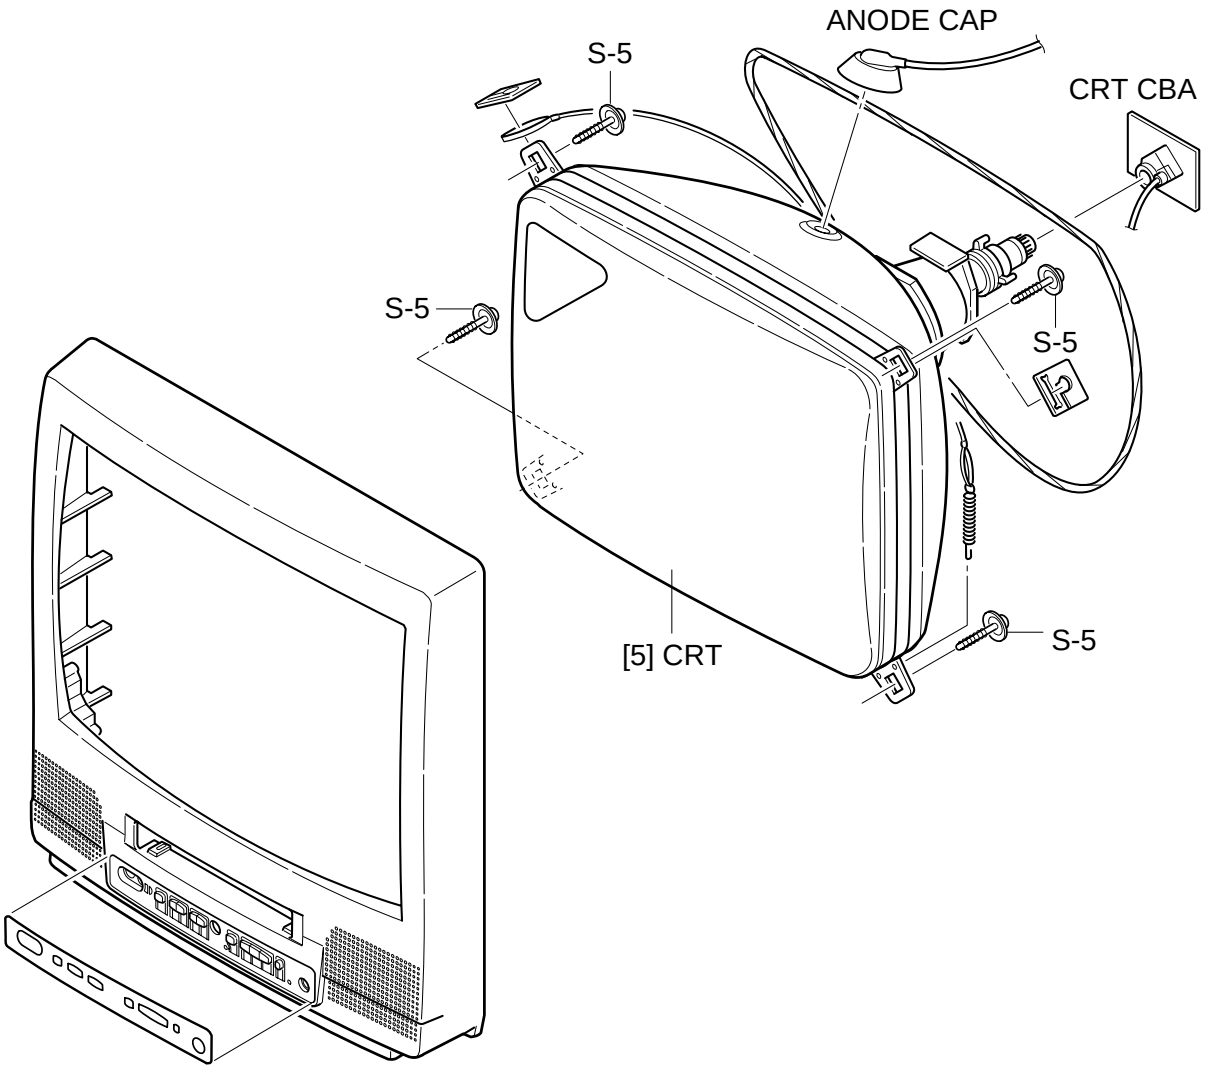

Fig. 4

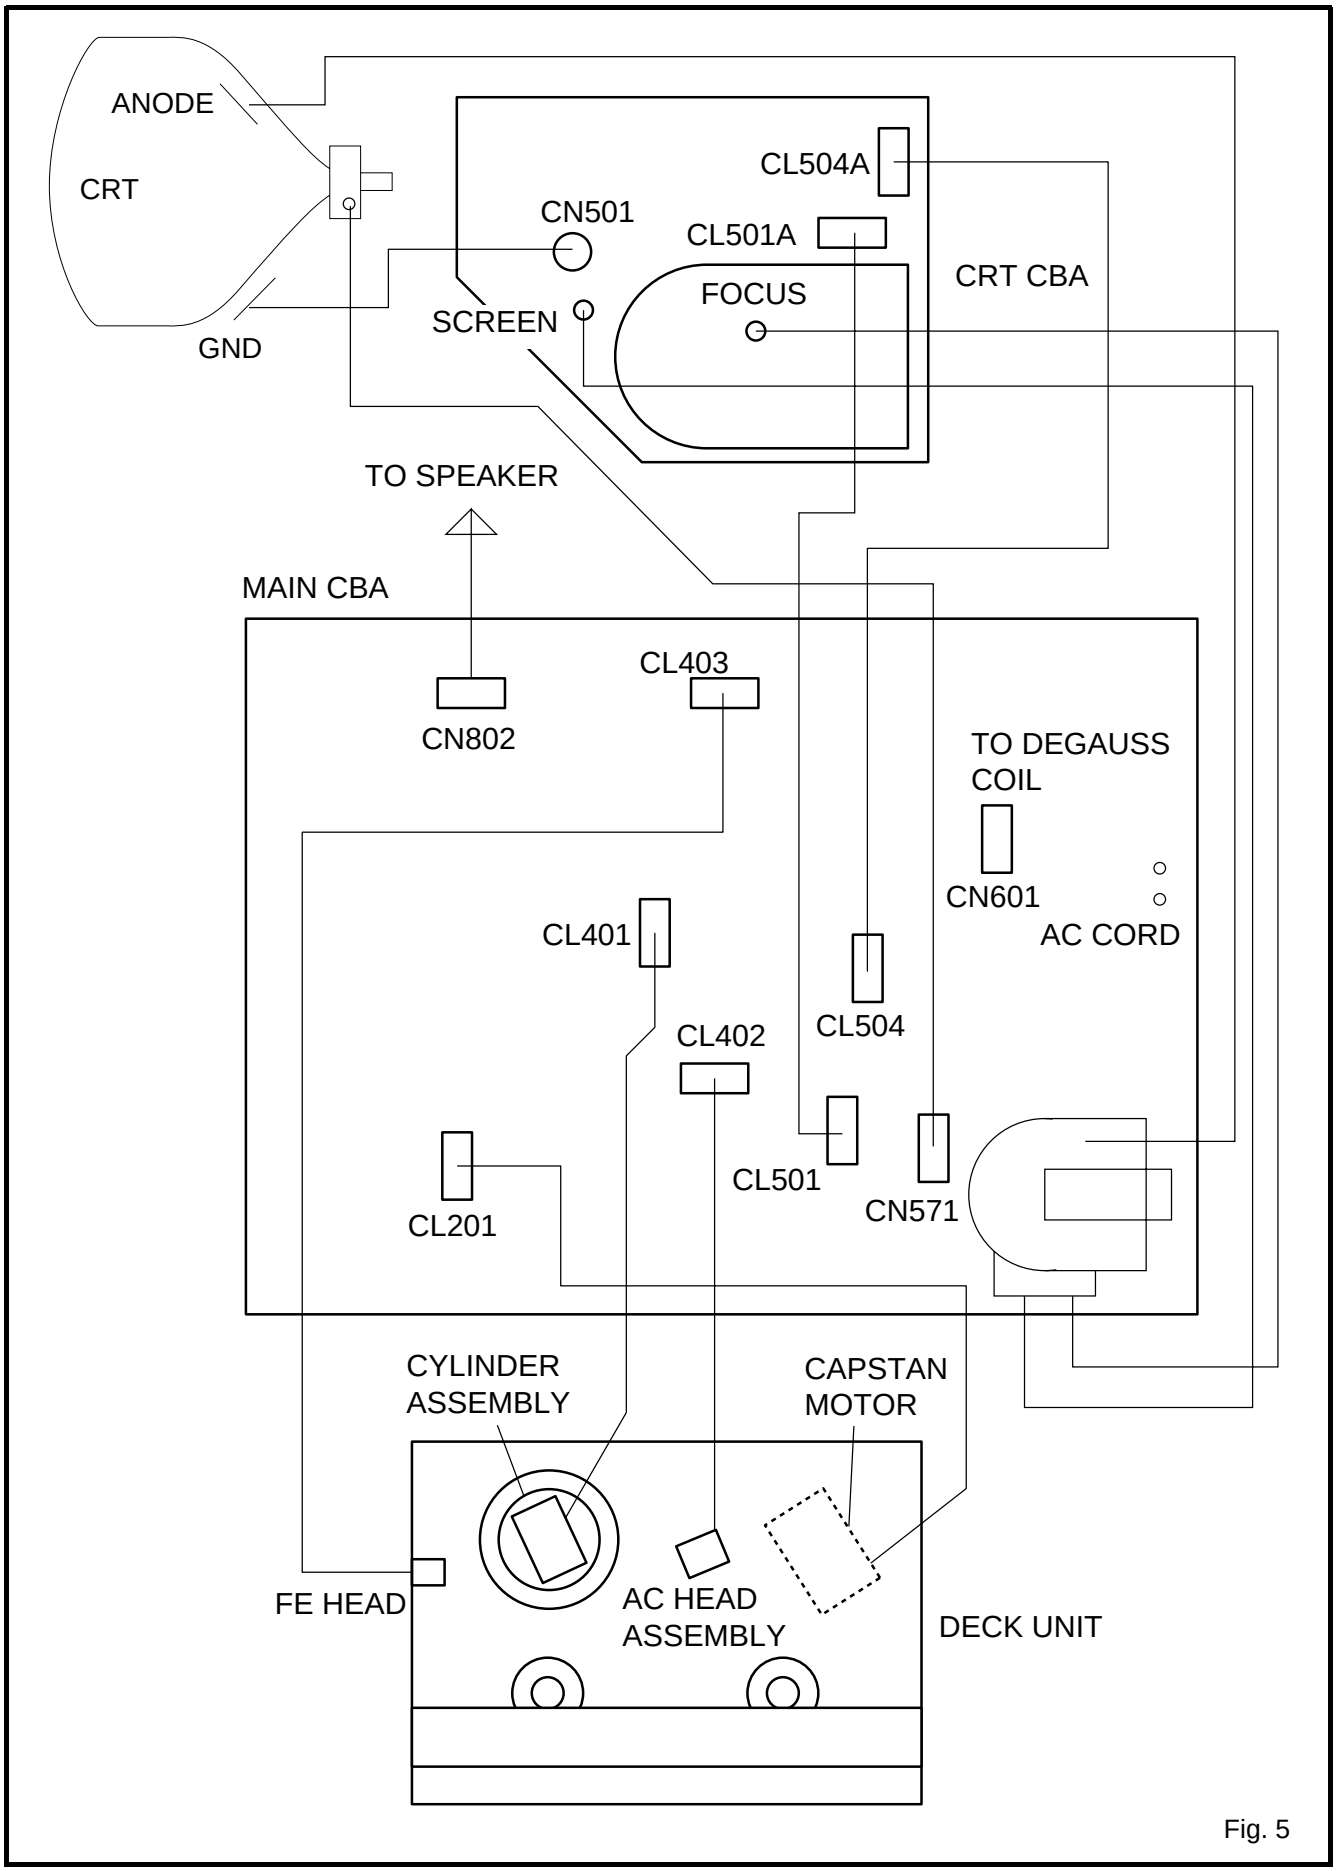
ANODE
CRT
GND
CN501
SCREEN
CL504A
CL501A
FOCUS
CRT CBA
TO SPEAKER
MAIN CBA
CL403
CN802
TO DEGAUSS COIL
CN601
AC CORD
CL401
CL504
CL402
CL501
CN571
CL201
CYLINDER ASSEMBLY
CAPSTAN MOTOR
FE HEAD
AC HEAD ASSEMBLY
DECK UNIT

Fig. 5

ELECTRICAL ADJUSTMENT INSTRUCTIONS

General Note:

"CBA" is abbreviation for "Circuit Board Assembly."

NOTE:

Electrical adjustments are required after replacing circuit components and certain mechanical parts.
It is important to perform these adjustments only after all repairs and replacements have been completed.
Also, do not attempt these adjustments unless the proper equipment is available.

Test Equipment Required

1. NTSC Pattern Generator (Color Bar W/White Window, Red Color, Dot Pattern, Gray Scale, Monoscope, Multi-Burst)
2. AC Milli Voltmeter (RMS)
3. Alignment Tape (FL8A, FL8N), Blank Tape
4. DC Voltmeter
5. Oscilloscope: Dual-trace with 10:1 probe,
   V-Range: 0.001~50V/Div,
   F-Range: DC~AC-60MHz
6. Frequency Counter
7. Plastic Tip Driver

How to make service remote control unit:

1. Prepare normal remote control unit. (Part No. N0107UD) Remove 3 screws from the back lid. (Fig. 1-1)
2. Add J1 (Jumper Wire) to the remote control CBA. (Fig. 1-2)

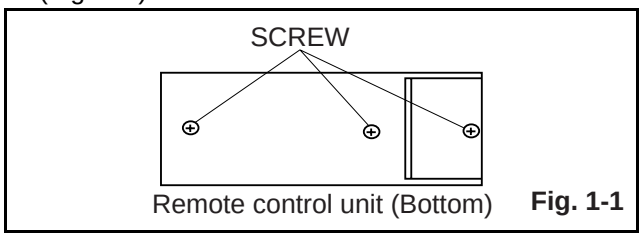

Remote control unit (Bottom) **Fig. 1-1**

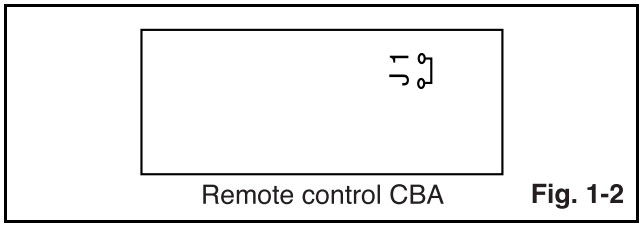

Remote control CBA **Fig. 1-2**

How to Set up the Service mode:

Service Mode:

1. Use the service remote control unit.
2. Turn the power on.
3. Press " WAKE-UP/SLEEP " button on the service remote control unit.

1. DC 105V (+B) Adjustment [SRC2213/SRC22134]

Purpose: To obtain correct operation.

Symptom of Misadjustment: The picture is dark and unit does not operate correctly.

Test point	Adj. Point	Mode	Input
J192 (+B) J213 (GND)	VR601	---	-----
Tape	M. EQ.	Spec.	
---	DC Voltmeter Plastic Tip Driver	+105±0.5V DC	

Note: J192(+B), J213(GND), VR601 --- Main CBA

1. Connect the unit to AC Power Outlet.
2. Connect DC Volt Meter to J192(+B) and J213(GND).
3. Adjust VR601 so that the voltage of J192(+B) becomes +105±0.5V DC.

1. DC 114V (+B) Adjustment [SRC22194]

Purpose: To obtain correct operation.

Symptom of Misadjustment: The picture is dark and unit does not operate correctly.

Test point	Adj. Point	Mode	Input
J192 (+B) J213 (GND)	VR601	---	-----
Tape	M. EQ.	Spec.	
---	DC Voltmeter Plastic Tip Driver	+114±0.5V DC	

Note: J192(+B), J213(GND), VR601 --- Main CBA

1. Connect the unit to AC Power Outlet.
2. Connect DC Volt Meter to J192(+B) and J213(GND).
3. Adjust VR601 so that the voltage of J192(+B) becomes +114±0.5V DC.

2. Auto AFT (VCO) Adjustment

Purpose: To operate AFT correctly.

Symptom of Misadjustment: AFT does not work correctly and/or synchronization is faulty.

Test point	Adj. Point	Mode	Input
---	---	Video	-----
Tape	M. EQ.	Spec.	
---	---	---	

1. Set the unit to the Video mode with no signal input.
2. Enter the Service mode. (See page 1-4-1.) Then press number "3" button on the remote control unit.
3. If the screen color changes to "Green" then this adjustment is finished.
4. If the screen color changes to "Red" then this adjustment is failed. Repeat steps 1 and 2 or check relative circuit or parts (IC).

3. TV AGC Adjustment

Purpose: Set AGC (Auto Gain Control) Level.

Symptom of Misadjustment: AGC does not synchronize correctly when RF input level is too weak and picture distortion may occur if it is too strong.

Test point	Adj. Point	Mode	Input
J191 (AGC)	CH ▲ / ▼ buttons	---	Color Bar 67.25MHz 60dBμV
Tape	M. EQ.	Spec.	
---	Pattern Generator DC Voltmeter	+2.8±0.3V DC	

Note: J191 (AGC) --- Main CBA

1. Enter the Service mode. (See page 1-4-1.) Then press number 2 button on the remote control unit.
2. Receive the Color Bar signal for channel 4 (67.25MHz). (RF Input Level: 60dBμV)
3. Press CH ▲ / ▼ buttons so that the voltage of J191 (AGC) becomes +2.8V±0.3V DC.
4. Turn the power off and on again.

4-1. H Adjustment

Purpose: To get correct horizontal position and size of screen image.

Symptom of Misadjustment: Horizontal position and size of screen image may not be properly displayed.

Test point	Adj. Point	Mode	Input
R583	CH ▲ / ▼ buttons	Video	---
Tape	M. EQ.	Spec.	
---	Frequency Counter	15.734kHz±300Hz	

Note: R583 --- Main CBA

1. Connect Frequency Counter to R583.
2. Set the unit to the VIDEO mode and no input is necessary. Enter the Service mode. (See page 1-4-1.)
3. Operate the unit for at least 20 minutes.
4. Press "2" button on the remote control unit and select H-Adj Mode. (Press "2" button, then display will change H-Adj and AGC.)
5. Press CH ▲ / ▼ buttons on the remote control unit so that the display will change "0" to "7." At this moment, choose display "0" to "7" when the Frequency counter display is closest to 15.734kHz±300Hz.
6. Turn the power off and on again.

4-2. C-Trap Adjustment

Purpose: To get minimum leakage of the color signal carrier.

Symptom of Misadjustment: If C-Trap Adjustment is incorrect, stripes will appear on the screen.

Test point	Adj. Point	Mode	Input
J233 (B-OUT)	CH ▲ / ▼ buttons	---	Color Bar
Tape	M. EQ.	Spec.	
---	Oscilloscope Pattern Generator	---	
Figure			

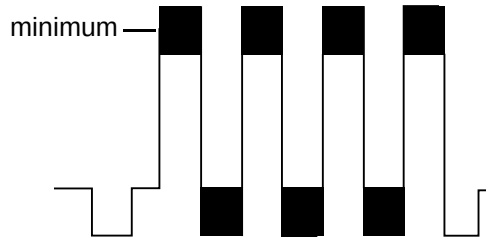

Fig. 2

Note: J233 (B-Out)--- Main CBA

1. Connect Oscilloscope to J233.
2. Input a color bar signal from RF input.
   Enter the Service mode. (See page 1-4-1.)
3. Press "0" button on the remote control unit and select C-TRAP Mode.
4. Press CH ▲ / ▼ buttons on the remote control unit so that the carrier leakage B-Out (3.58MHz) value becomes minimum on the oscilloscope.
5. Turn the power off and on again.

4-3. Y DL Time Adjustment

Purpose: To get minimum leakage of the color signal carrier.

Symptom of Misadjustment: If Y DL Time Adjustment is incorrect, stripes will appear on the screen.

1. Enter the Service mode. (See page 1-4-1.)
2. Press "0" button on the remote control unit twice to show "D-T" on the display.
3. Select "2" by pressing CH ▲ / ▼ buttons on the remote control to enter Y DL Time Adjustment mode.
4. If needed, perform the following.

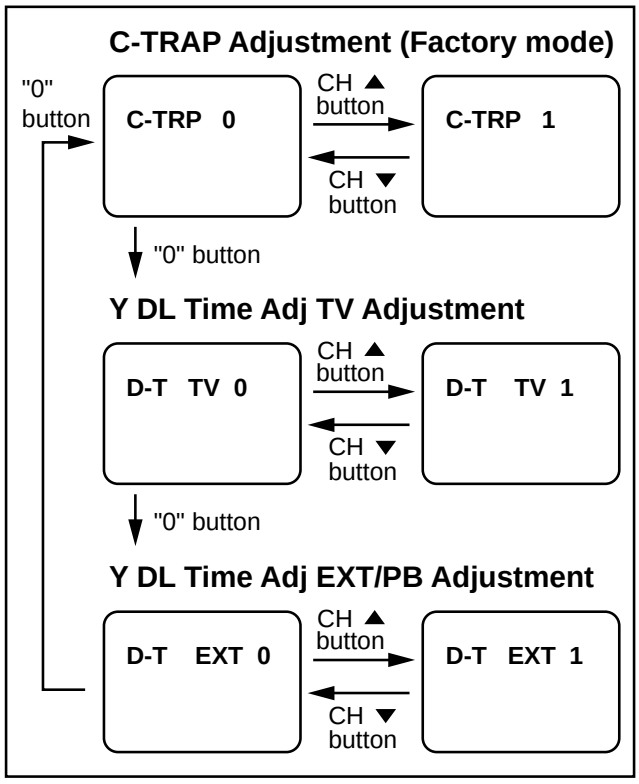

5. V. Size Adjustment

Purpose: To obtain correct vertical height of screen image.

Symptom of Misadjustment: If V. Size is incorrect, vertical height of image on the screen may not be properly displayed.

Test point	Adj. Point	Mode	Input
---	CH ▲ / ▼ buttons	---	Monoscope
Tape	M. EQ.	Spec.	
---	Pattern Generator	90±5%	

1. Enter the Service mode. (See page 1-4-1.)
   Press "9" button on the remote control unit and select V-S Mode. (Press "9" button then display will change to V-P and V-S).
2. Input monoscope pattern.
3. Press CH ▲ / ▼ buttons on the remote control unit so that the monoscope pattern is 90±5% of display size and the circle is round.

6. V. Shift Adjustment

Purpose: To obtain correct vertical position of screen image.

Symptom of Misadjustment: If V. position is incorrect, vertical position of image on the screen may not be properly displayed.

Test point	Adj. Point	Mode	Input
---	CH ▲ / ▼ buttons	---	Monoscope
Tape	M. EQ.	Spec.	
---	Pattern Generator	90±5%	

1. Enter the Service mode. (See page 1-4-1.)
   Press "9" button on the remote control unit and select V-P Mode. (Press "9" button then display will change to V-P and V-S).
2. Input monoscope pattern.
3. Press CH ▲ / ▼ buttons on the remote control unit so that the top and bottom of the monoscope pattern are equal to each other.

7. H. Shift Adjustment

Purpose: To obtain correct horizontal position and size of screen image.

Symptom of Misadjustment: Horizontal position and size of screen image may not be properly displayed.

Test point	Adj. Point	Mode	Input
---	CH ▲ / ▼ buttons	---	Monoscope
Tape	M. EQ.	Spec.	
---	Pattern Generator	90±5%	

1. Enter the Service mode. (See page 1-4-1.)
   Press "8" button on the remote control unit and select H-P Mode.
2. Input monoscope pattern.
3. Press CH ▲ / ▼ buttons on the remote control unit so that the left and right side of the monoscope pattern are equal to each other.
4. Turn the power off and on again.

8. Cut-off Adjustment

Purpose: To adjust the beam current of R, G, B, and screen voltage.

Symptom of Misadjustment: White color may be reddish, greenish or bluish.

Test point	Adj. Point	Mode	Input
---	Screen-Control	Ext.	Black Raster / White Raster
Tape	M. EQ.	Spec.	
---	Pattern Generator	See Reference Notes below	

Figure

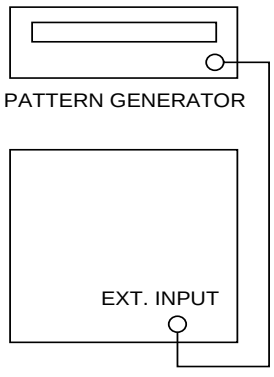

Fig. 3

Notes: Screen Control FBT --- MAIN CBA
F.B.T= Fly Back Transformer
Use the Remote Control Unit

1. Degauss the CRT and allow CRT to operate for 20 minutes before starting the alignment.
2. Set the screen control to minimum position. Input the Black raster signal from RF input.
3. Enter the Service Mode. (See page 1-4-1.)
   Dimmed horizontal line appears on the CRT.
4. Press the "VOL ▼" button.
   (Press "VOL ▼" then display will change CUT OFF/ DRIVE, VCO adjustment, Analog OSD adjustment).
5. Choose CUT OFF/DRIVE Mode then press "1" button. This adjustment mode is CUT OFF (R).
6. Press the "CH ▲ / ▼" button until the horizontal line becomes white.
7. Choose CUT OFF/DRIVE mode then press "2" button. This adjustment mode is CUT OFF (G). Press "CH ▲ / ▼" until the horizontal line becomes white.
8. Choose CUT OFF/DRIVE Mode then press "3" button. This adjustment mode is CUT OFF (B). Press "CH ▲ / ▼" until the horizontal line becomes white.
9. Input the White Raster Signal from Video In.
10. Choose CUT OFF/DRIVE mode then press "4." Adjust the RED DRIVE as needed with the CH ▲ / ▼ buttons to get the following value, X= 286, Y= 294.
11. Choose CUT OFF/DRIVE mode then press "5." Adjust the BLUE DRIVE as needed with the CH ▲ / ▼ buttons to get the following value, X= 286.
12. Turn the power off and on again.

9. Sub-Brightness Adjustment

Purpose: To get proper brightness.

Symptom of Misadjustment: If Sub-Brightness is incorrect, proper brightness cannot be obtained by adjusting the Brightness Control.

Test point	Adj. Point	Mode	Input
---	CH ▲ / ▼ buttons	---	SYMPTE 7.5IRE
Tape	M. EQ.	Spec.	
---	Pattern Generator	See below	
Figure			

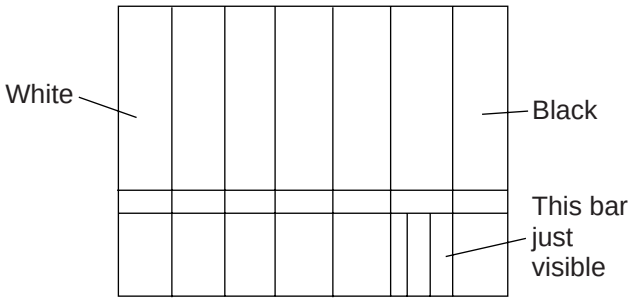

Fig. 4

Note: SYMPTE Setup level --- 7 IRE

1. Enter the Service Mode. (See page 1-4-1.)
   Then input SYMPTE signal from RF input.
2. Press MENU button. (Press MENU button then display will change B R T, C N T, T N T, V-T and SHP). Select BRT and press CH ▲ / ▼ buttons so that the bar is just visible (See above figure).
3. Turn the power off and on again.

10. Focus Adjustment

Purpose: Set the optimum Focus.

Symptom of Misadjustment: If Focus Adjustment is incorrect, blurred images are shown on the display.

Test point	Adj. Point	Mode	Input
---	Focus Control	---	Monoscope
Tape	M. EQ.	Spec.	
---	Pattern Generator	See below.	

Note: Focus VR (FBT) --- MAIN CBA

FBT= Fly Back Transformer

1. Operate the unit more than 30 minutes.
2. Face the unit to the East and degauss the CRT using a Degaussing Coil.
3. Input the monoscope pattern.
4. Adjust the Focus Control on the FBT to obtain clear picture.

11. Head Switching Position Adjustment

Purpose: Determine the Head Switching Point during Playback.

Symptom of Misadjustment: May cause Head Switching Noise or Vertical Jitter in the picture.

Note: Unit reads Head Switching Position automatically and displays it on the screen (Upper Left Corner).

1. Playback test tape (FL8A, FL8N).
2. Enter the Service Mode. (See page 1-4-1.)
   Then press the number 5 button on the remote control unit.
3. The Head Switching position will display on the screen; if adjustment is necessary follow step 4. 6.5H(412.7µs) is preferable.
4. Press "CH ▲" or "CH ▼" button on the remote control unit if necessary. The value will be changed in 0.5H steps up or down. Adjustable range is up to 9.5H. If the value is beyond adjustable range, the display will change as:
   Lower out of range: 0.0H
   Upper out of range: -.-H
5. Turn the power off and on again.

12. CCS Text Box Location

When replacing the CRT, the CCS Box might not stay in appropriate position. Then, replace micro computer.

Note: This adjustment automatically done by the microcomputer.

The following 2 adjustments normally are not attempted in the field. They should be done only when replacing the CRT then adjust as a preparation.

13.Purity Adjustment

Purpose: To obtain pure color.

Symptom of Misadjustment: If Color Purity Adjustment is incorrect, large areas of color may not be properly displayed.

Test point	Adj. Point	Mode	Input
---	Deflection Yoke Purity Magnet	---	*Red Color
Tape	M. EQ.	Spec.	
---	Pattern Generator	See below.	

Figure

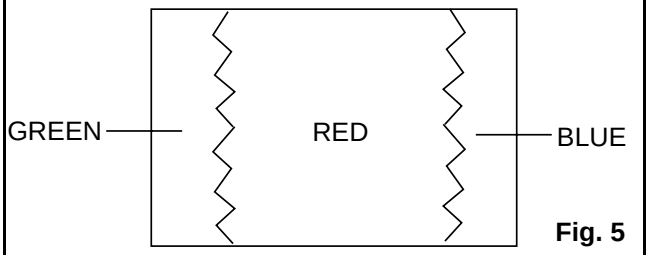

Fig. 5

* This becomes RED COLOR if push 7KEY with a service mode.

1. Set the unit facing east.
2. Operate the unit for over 30 minutes before adjusting.
3. Fully degauss the unit using an external degaussing coil.
4. Set the unit to the AUX Mode which is located before CH2 then input a red raster from video in.
5. Loosen the screw on the Deflection Yoke Clamper and pull the Deflection Yoke back away from the screen. (See Fig. 6.)
6. Loosen the Ring Lock and adjust the Purity Magnets so that a red field is obtained at the center of the screen. Tighten Ring Lock. (See Fig. 5,6.)
7. Slowly push the Deflection Yoke toward the bell of the CRT and set it where a uniform red field is obtained.
8. Tighten the clamp screw on the Deflection Yoke.

14. Convergence Adjustment

Purpose: To obtain proper convergence of red, green and blue beams.

Symptom of Misadjustment: If Convergence Adjustment is incorrect, the edge of white letters may have color edges.

Test point	Adj. Point	Mode	Input
---	C.P. Magnet (RB), C.P. Magnet (RB-G), Deflection Yoke	---	Dot Pattern or Crosshatch
Tape	M. EQ.	Spec.	
---	Pattern Generator	See below.	
Figure			

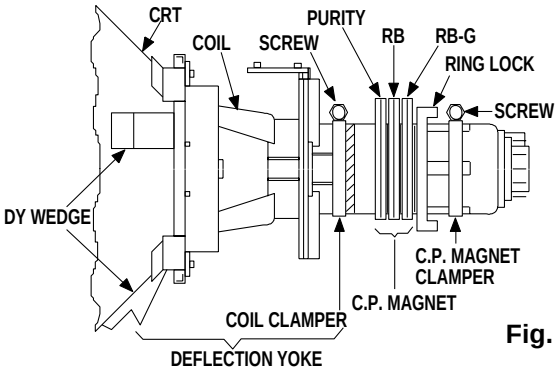

Fig. 6

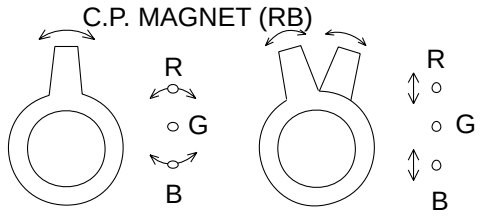

Fig. 7

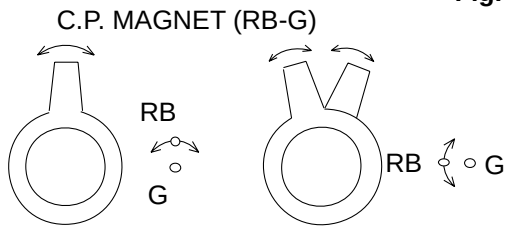

Fig. 8

1. Set the unit to the AUX Mode which is located before CH2 then input a Dot or crosshatch pattern.
2. Loosen the Ring Lock and align red with blue dots or Crosshatch at the center of the screen by rotating (RB) C.P. Magnets. (See Fig. 7.)
3. Align red / blue with green dots at the center of the screen by rotating (RB-G) C.P. Magnet. (See Fig. 8.)
4. Fix the C.P. Magnets by tightening the Ring Lock.
5. Remove the DY Wedges and slightly tilt the Deflection Yoke horizontally and vertically to obtain the best overall convergence.
6. Fix the Deflection Yoke by carefully inserting the DY Wedges between CRT and Deflection Yoke.

BLOCK DIAGRAMS

Servo/System Control Block Diagram

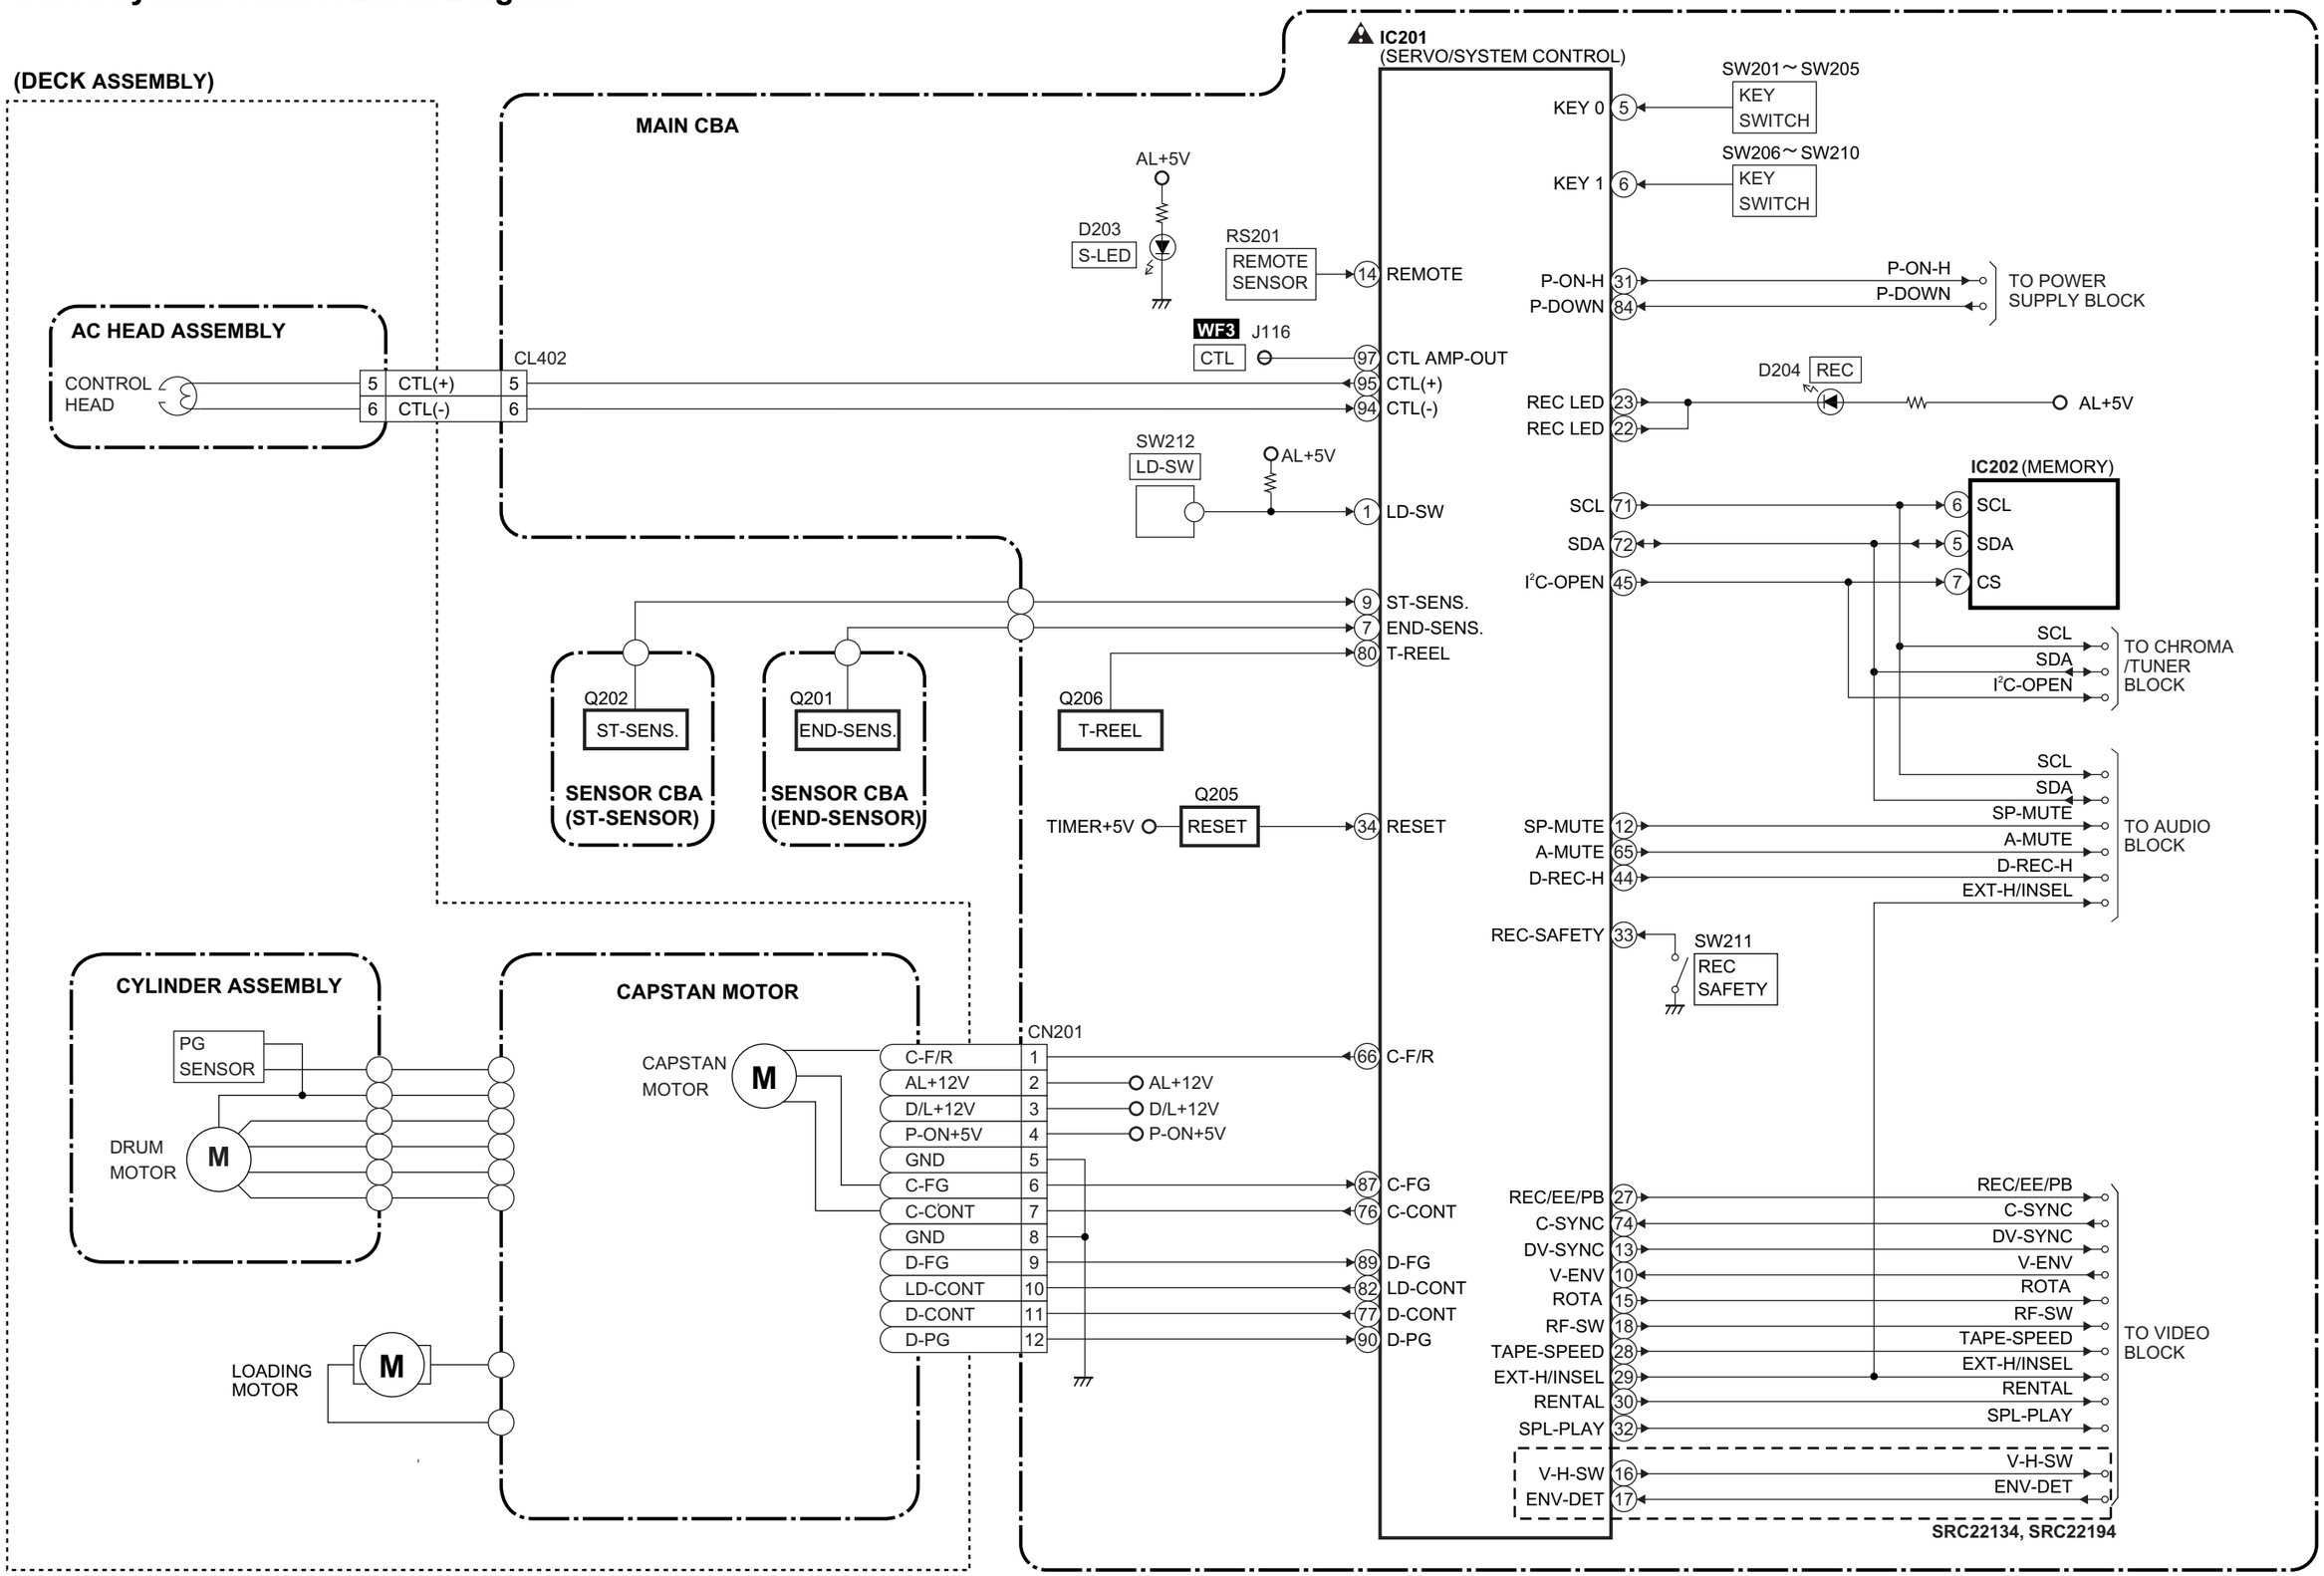

Video Block Diagram (SRC2213)

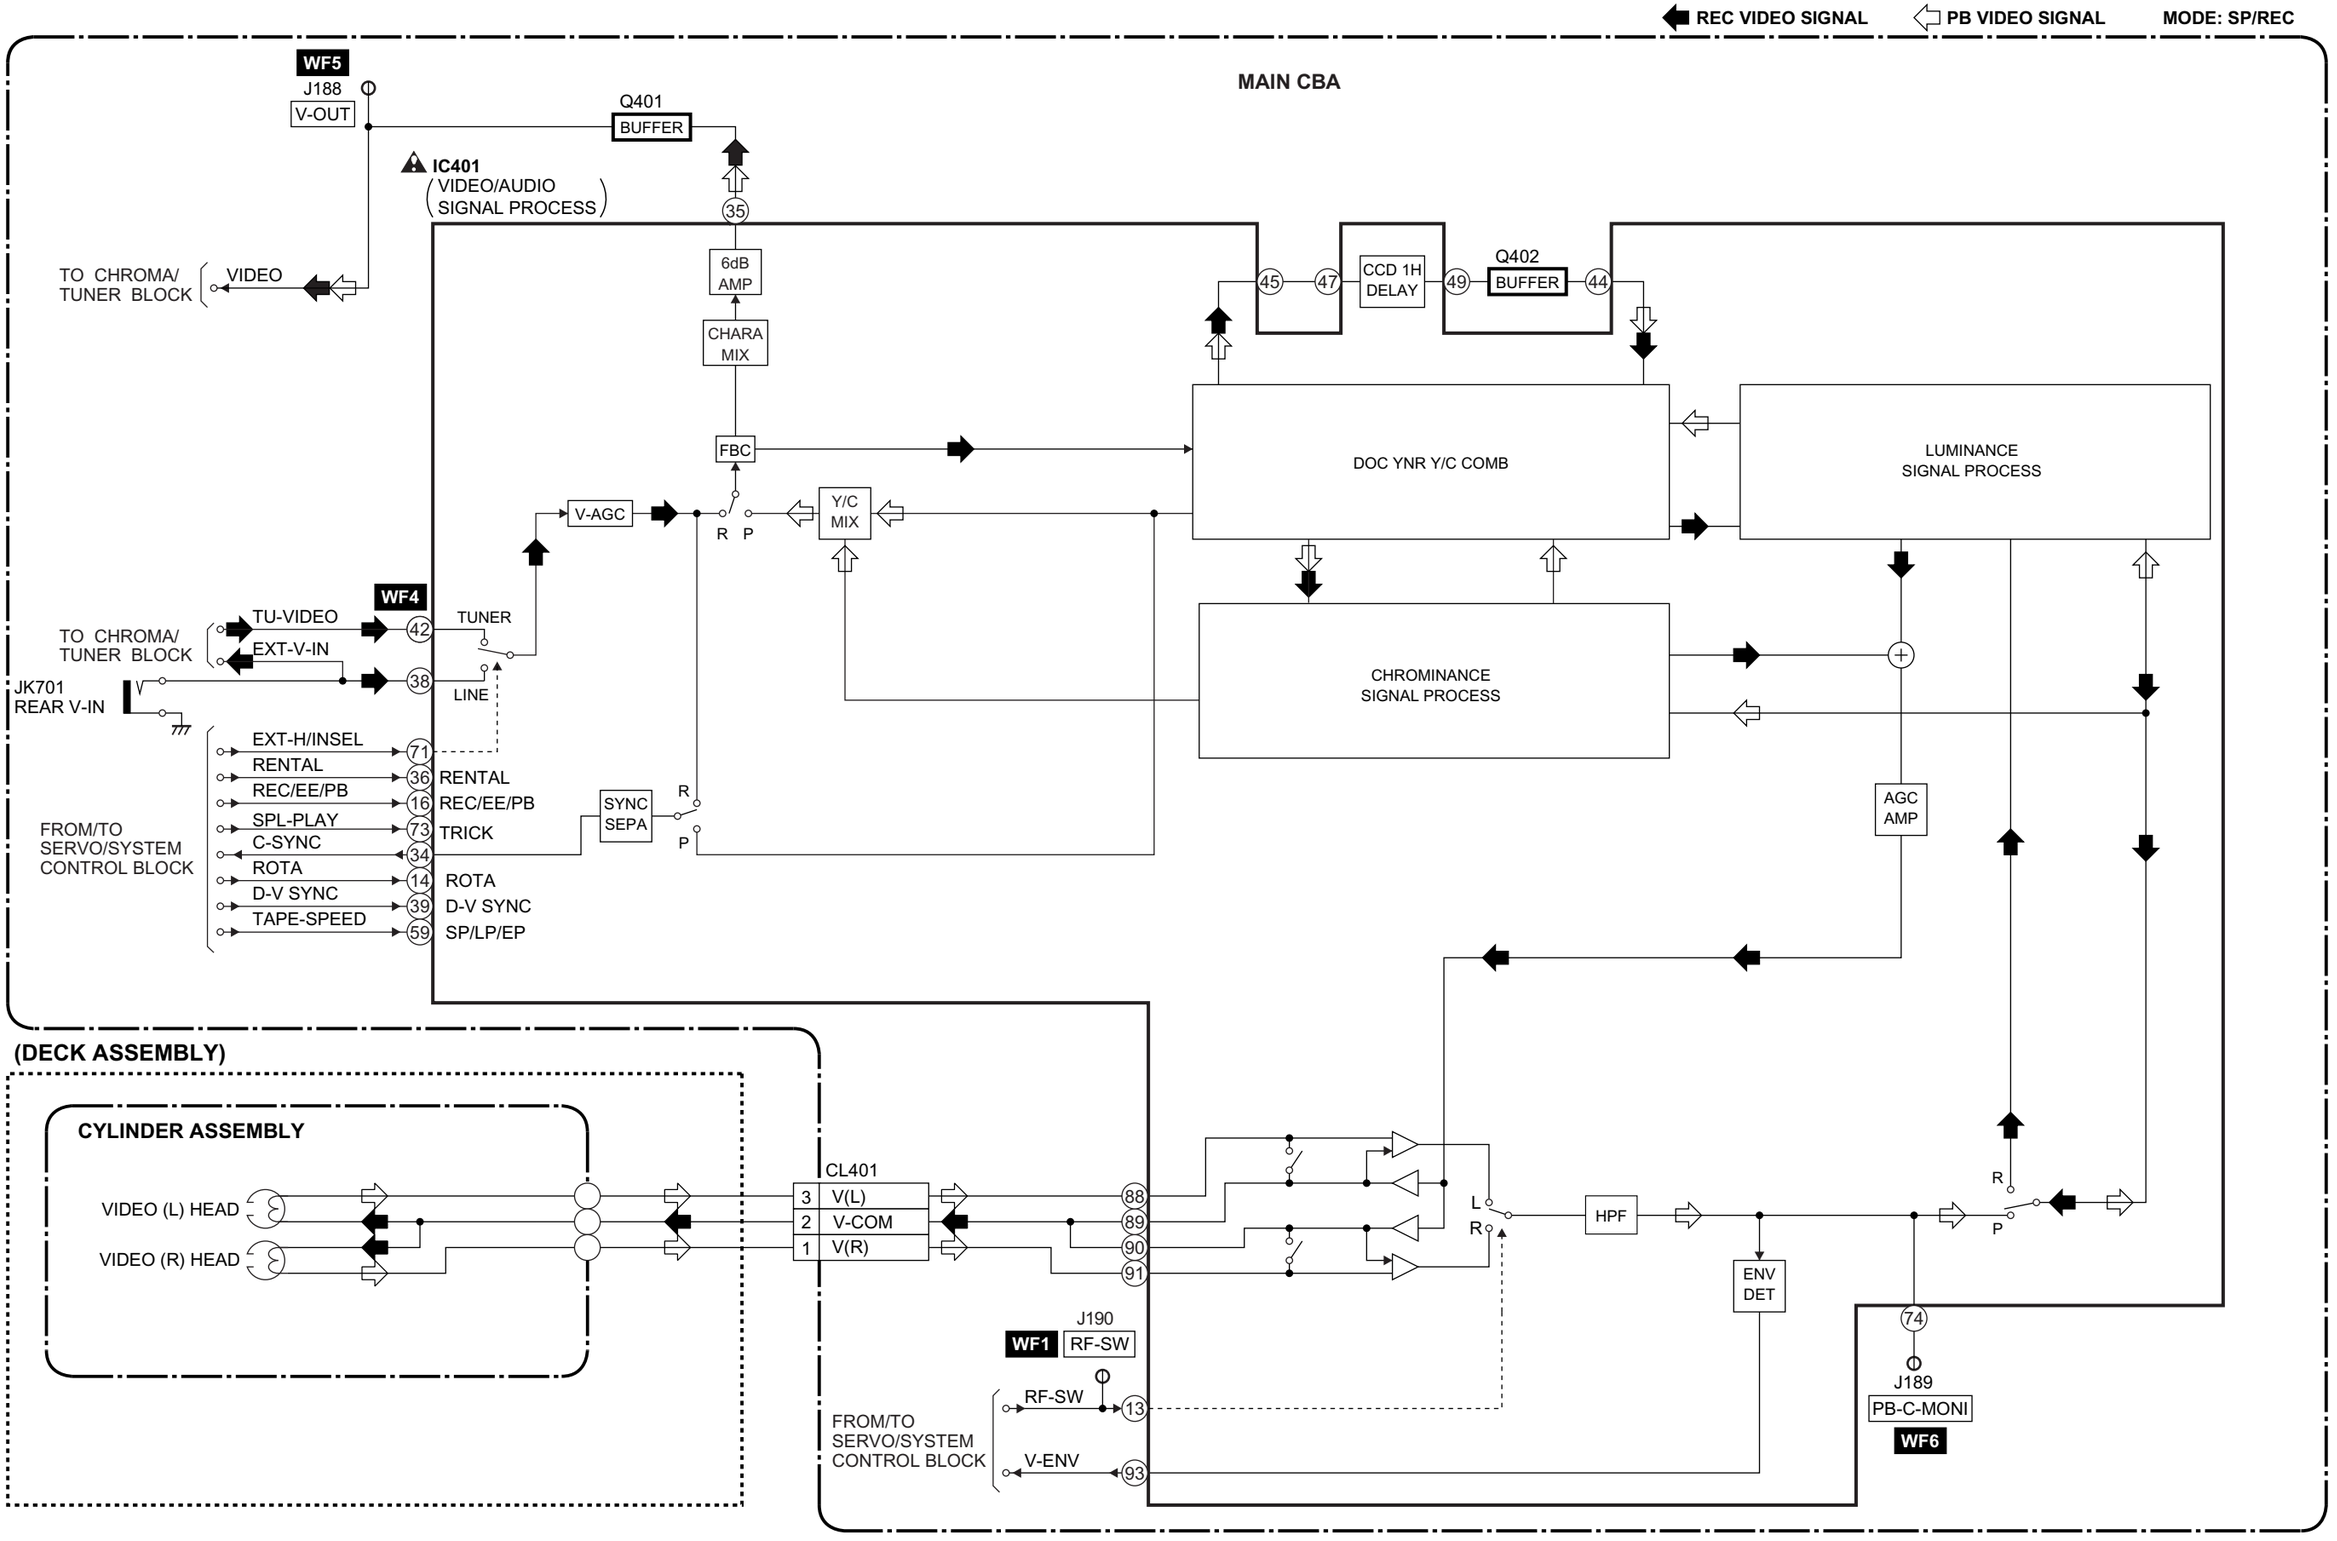

Video Block Diagram (SRC22134, SRC22194)

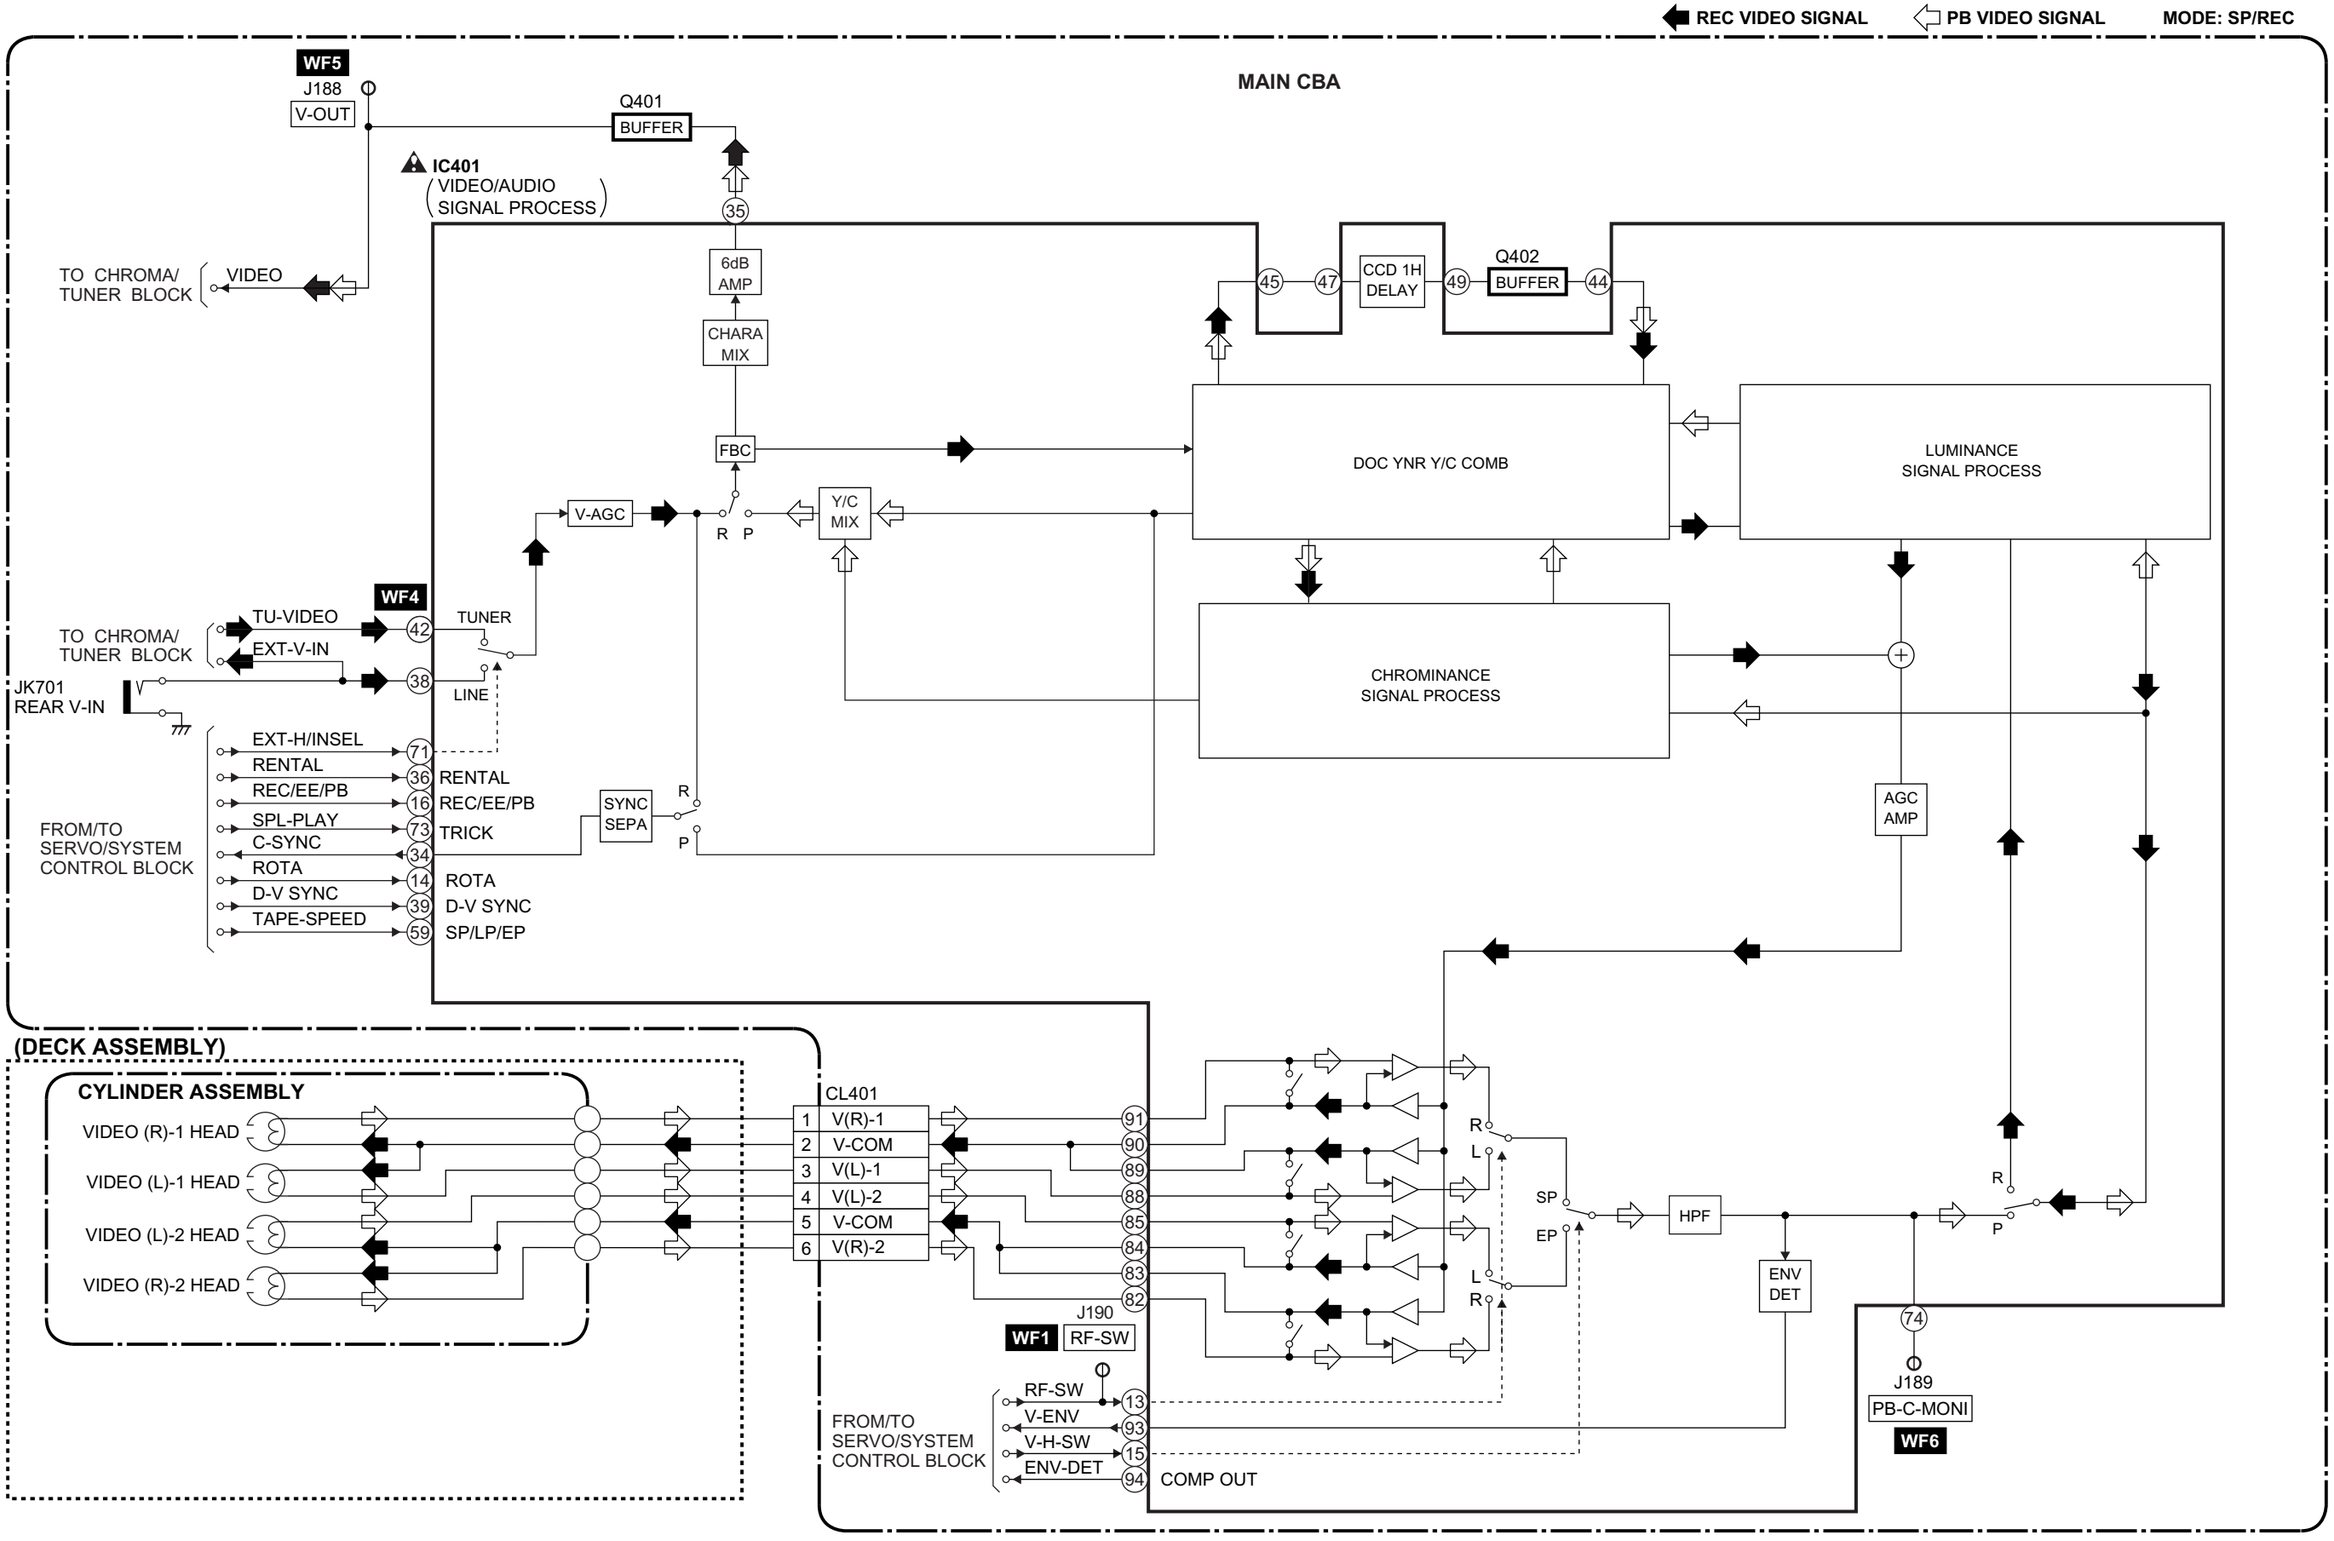

Audio Block Diagram

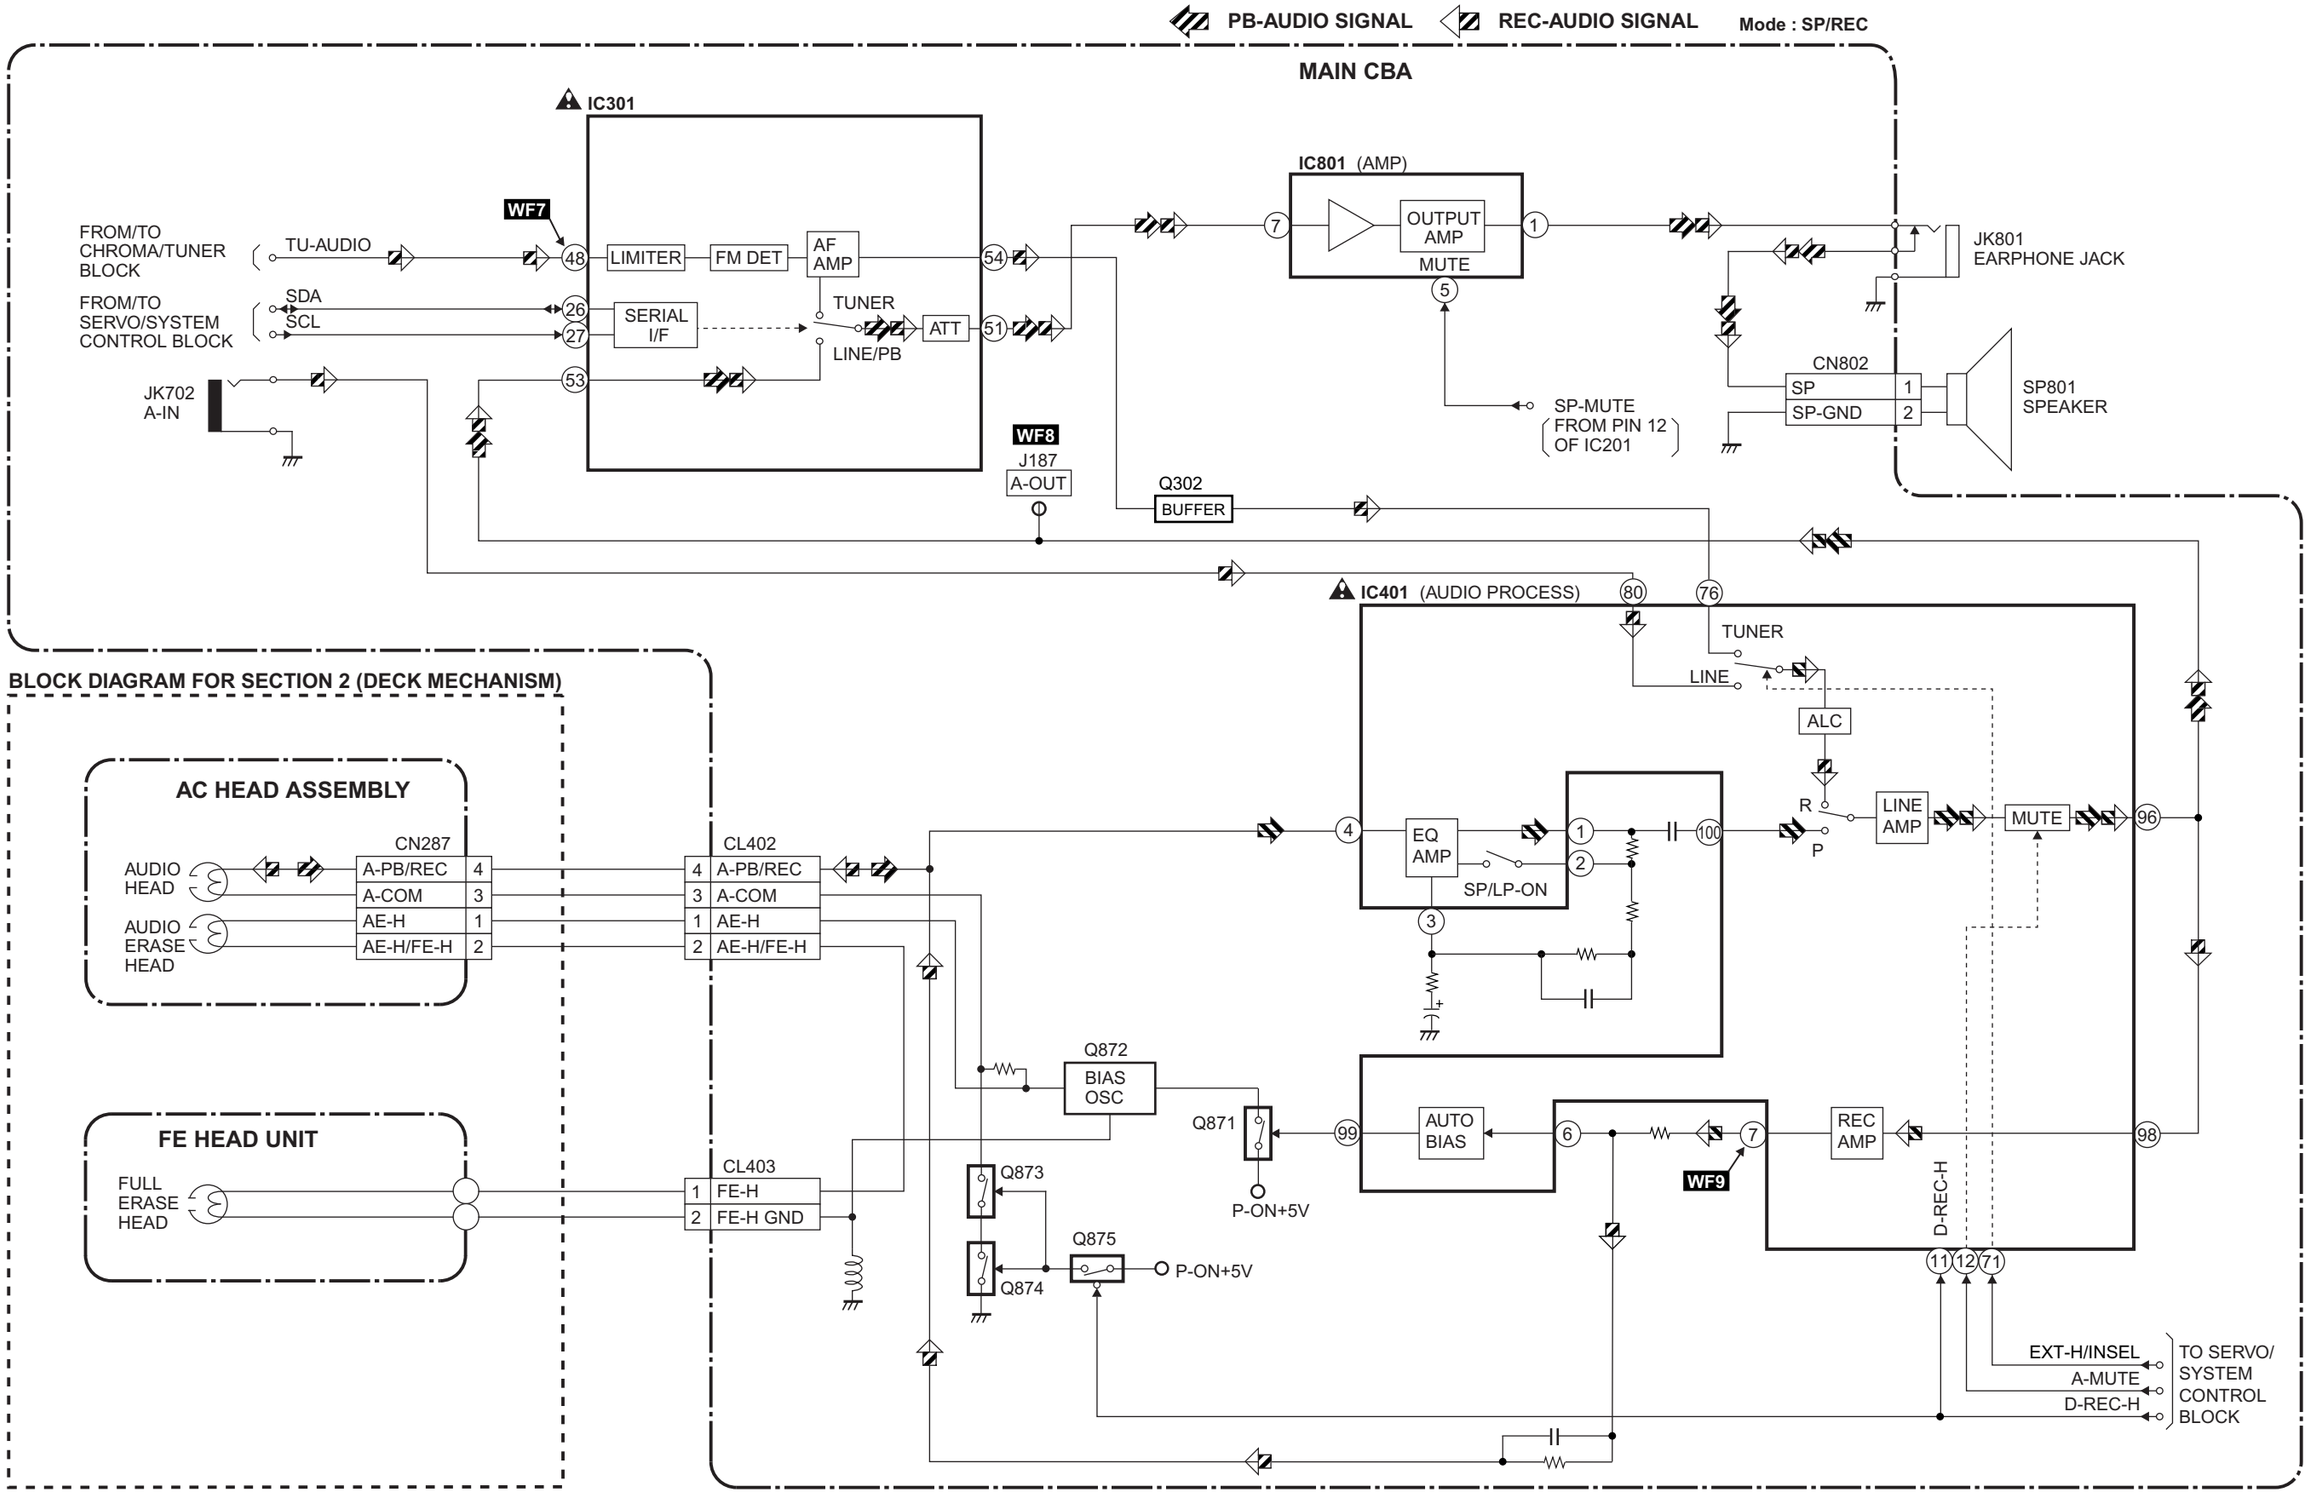

Chroma/Tuner Block Diagram

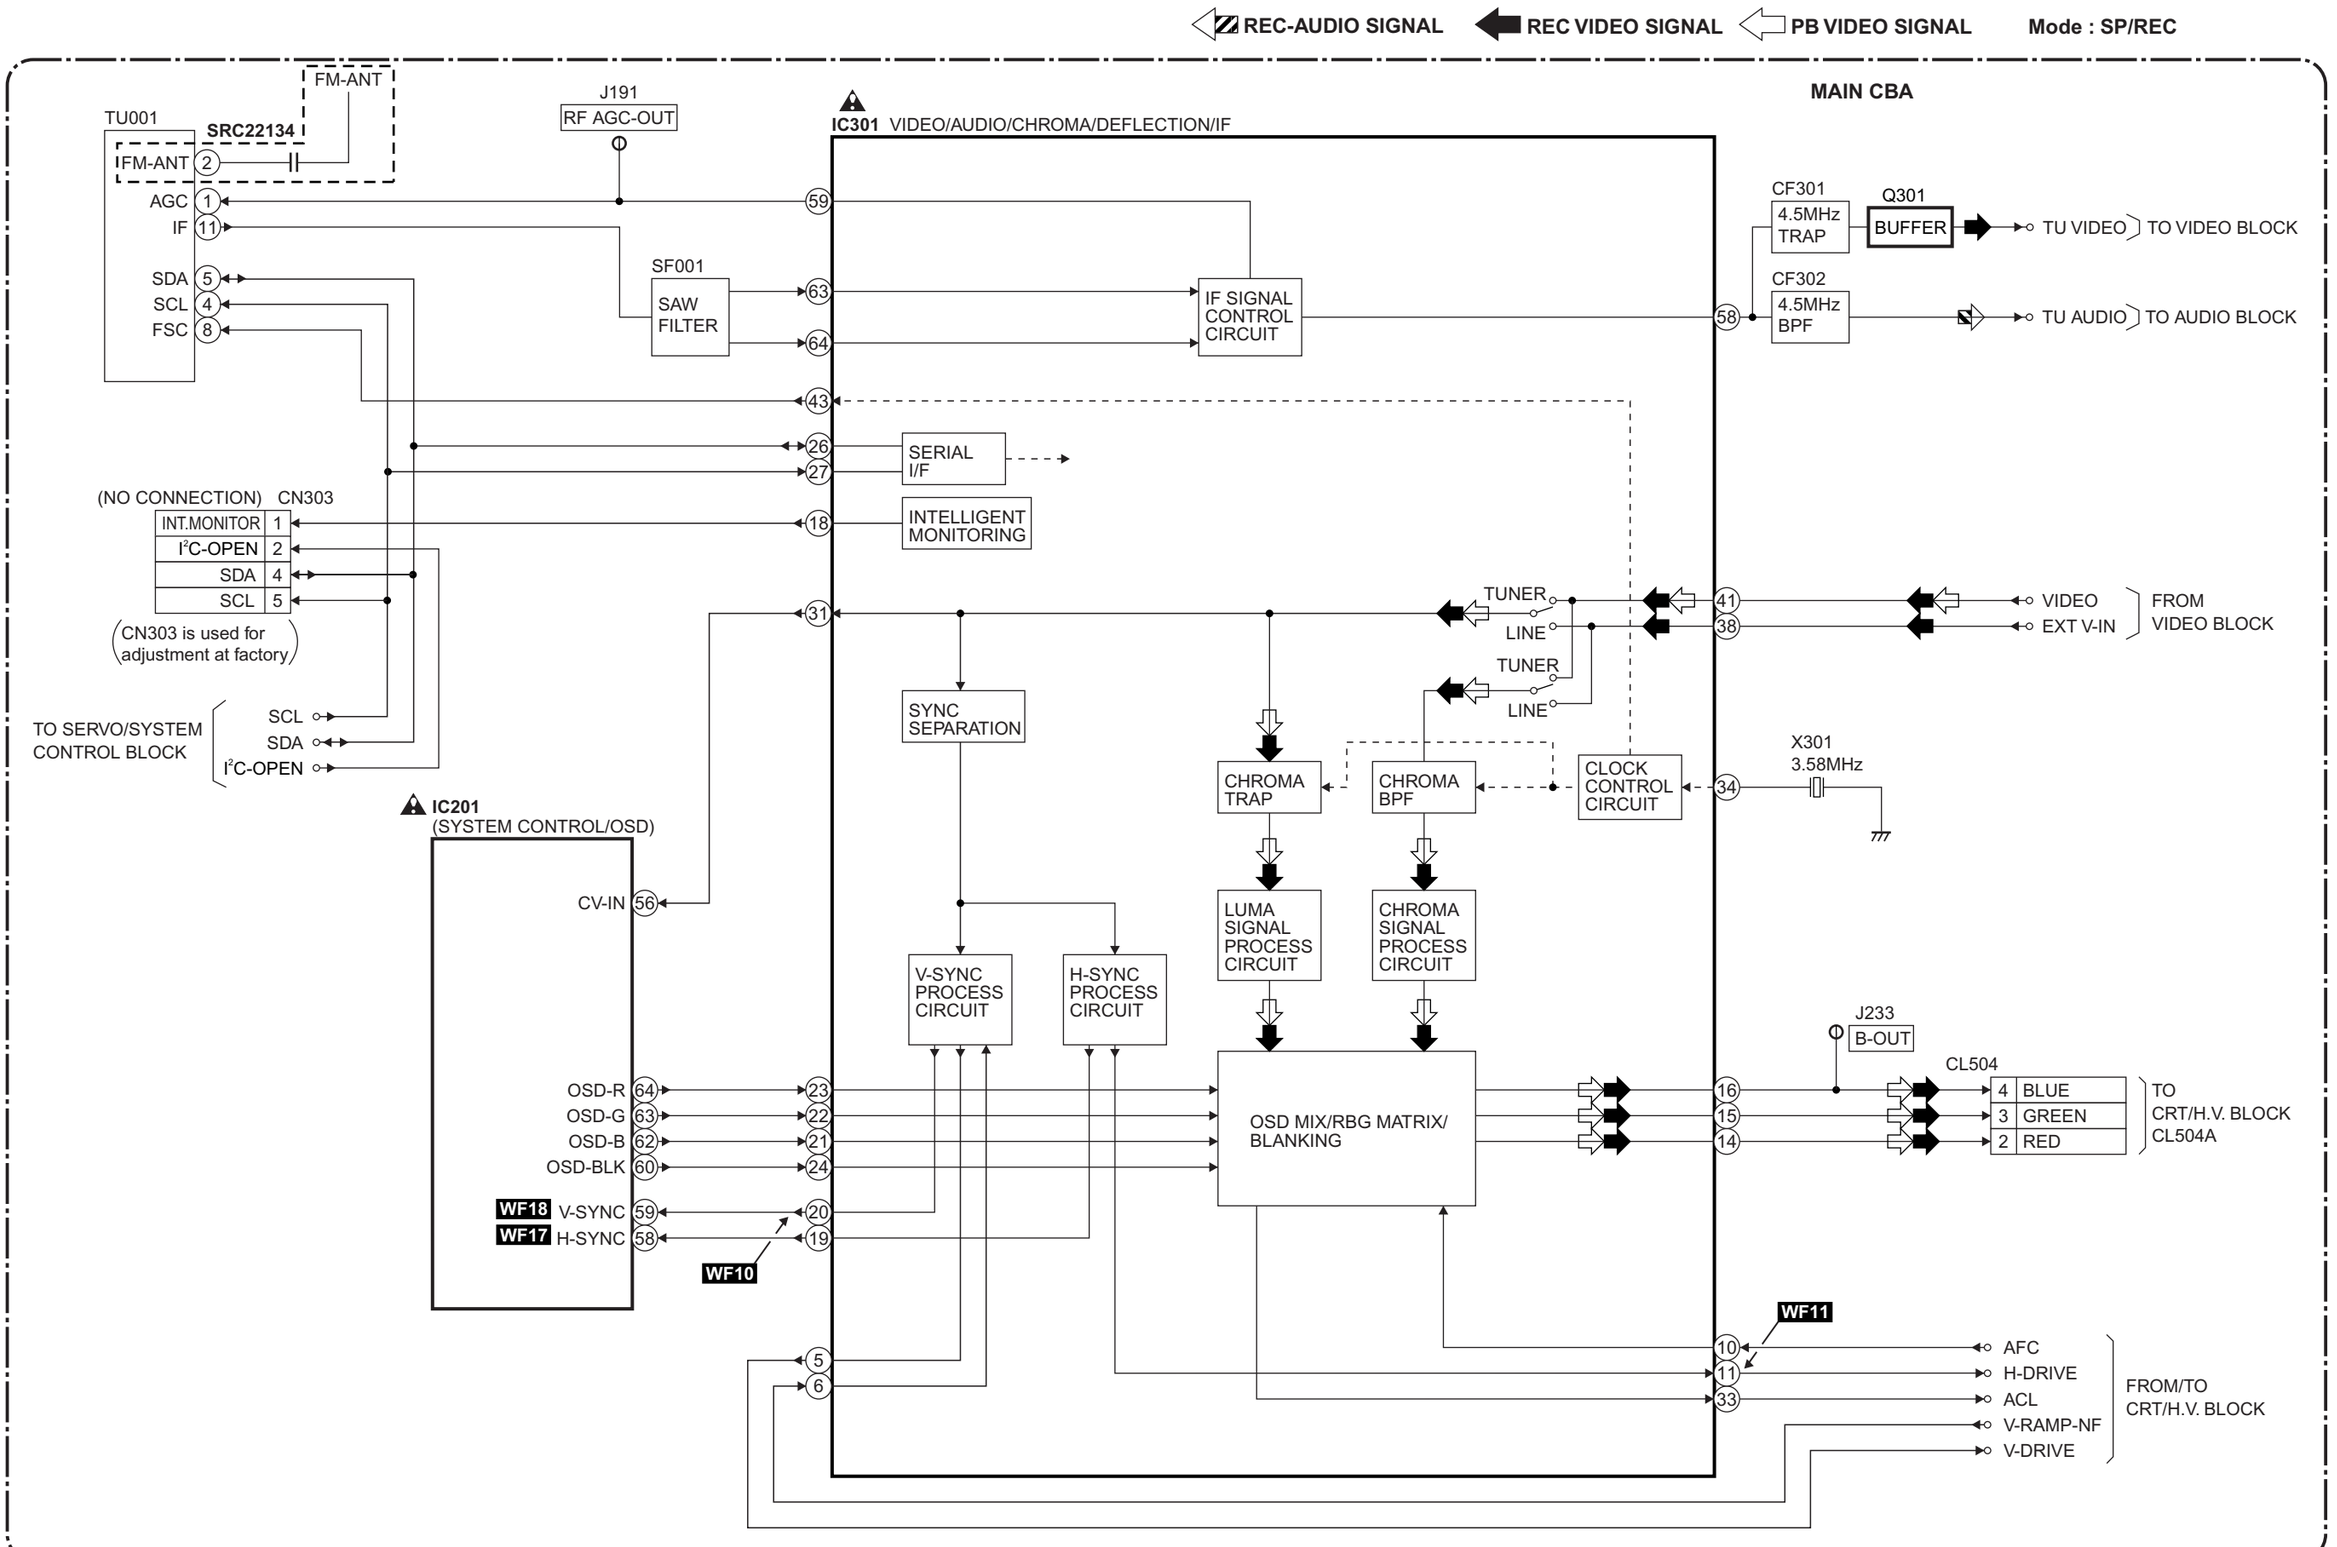

CRT/H.V. Block Diagram

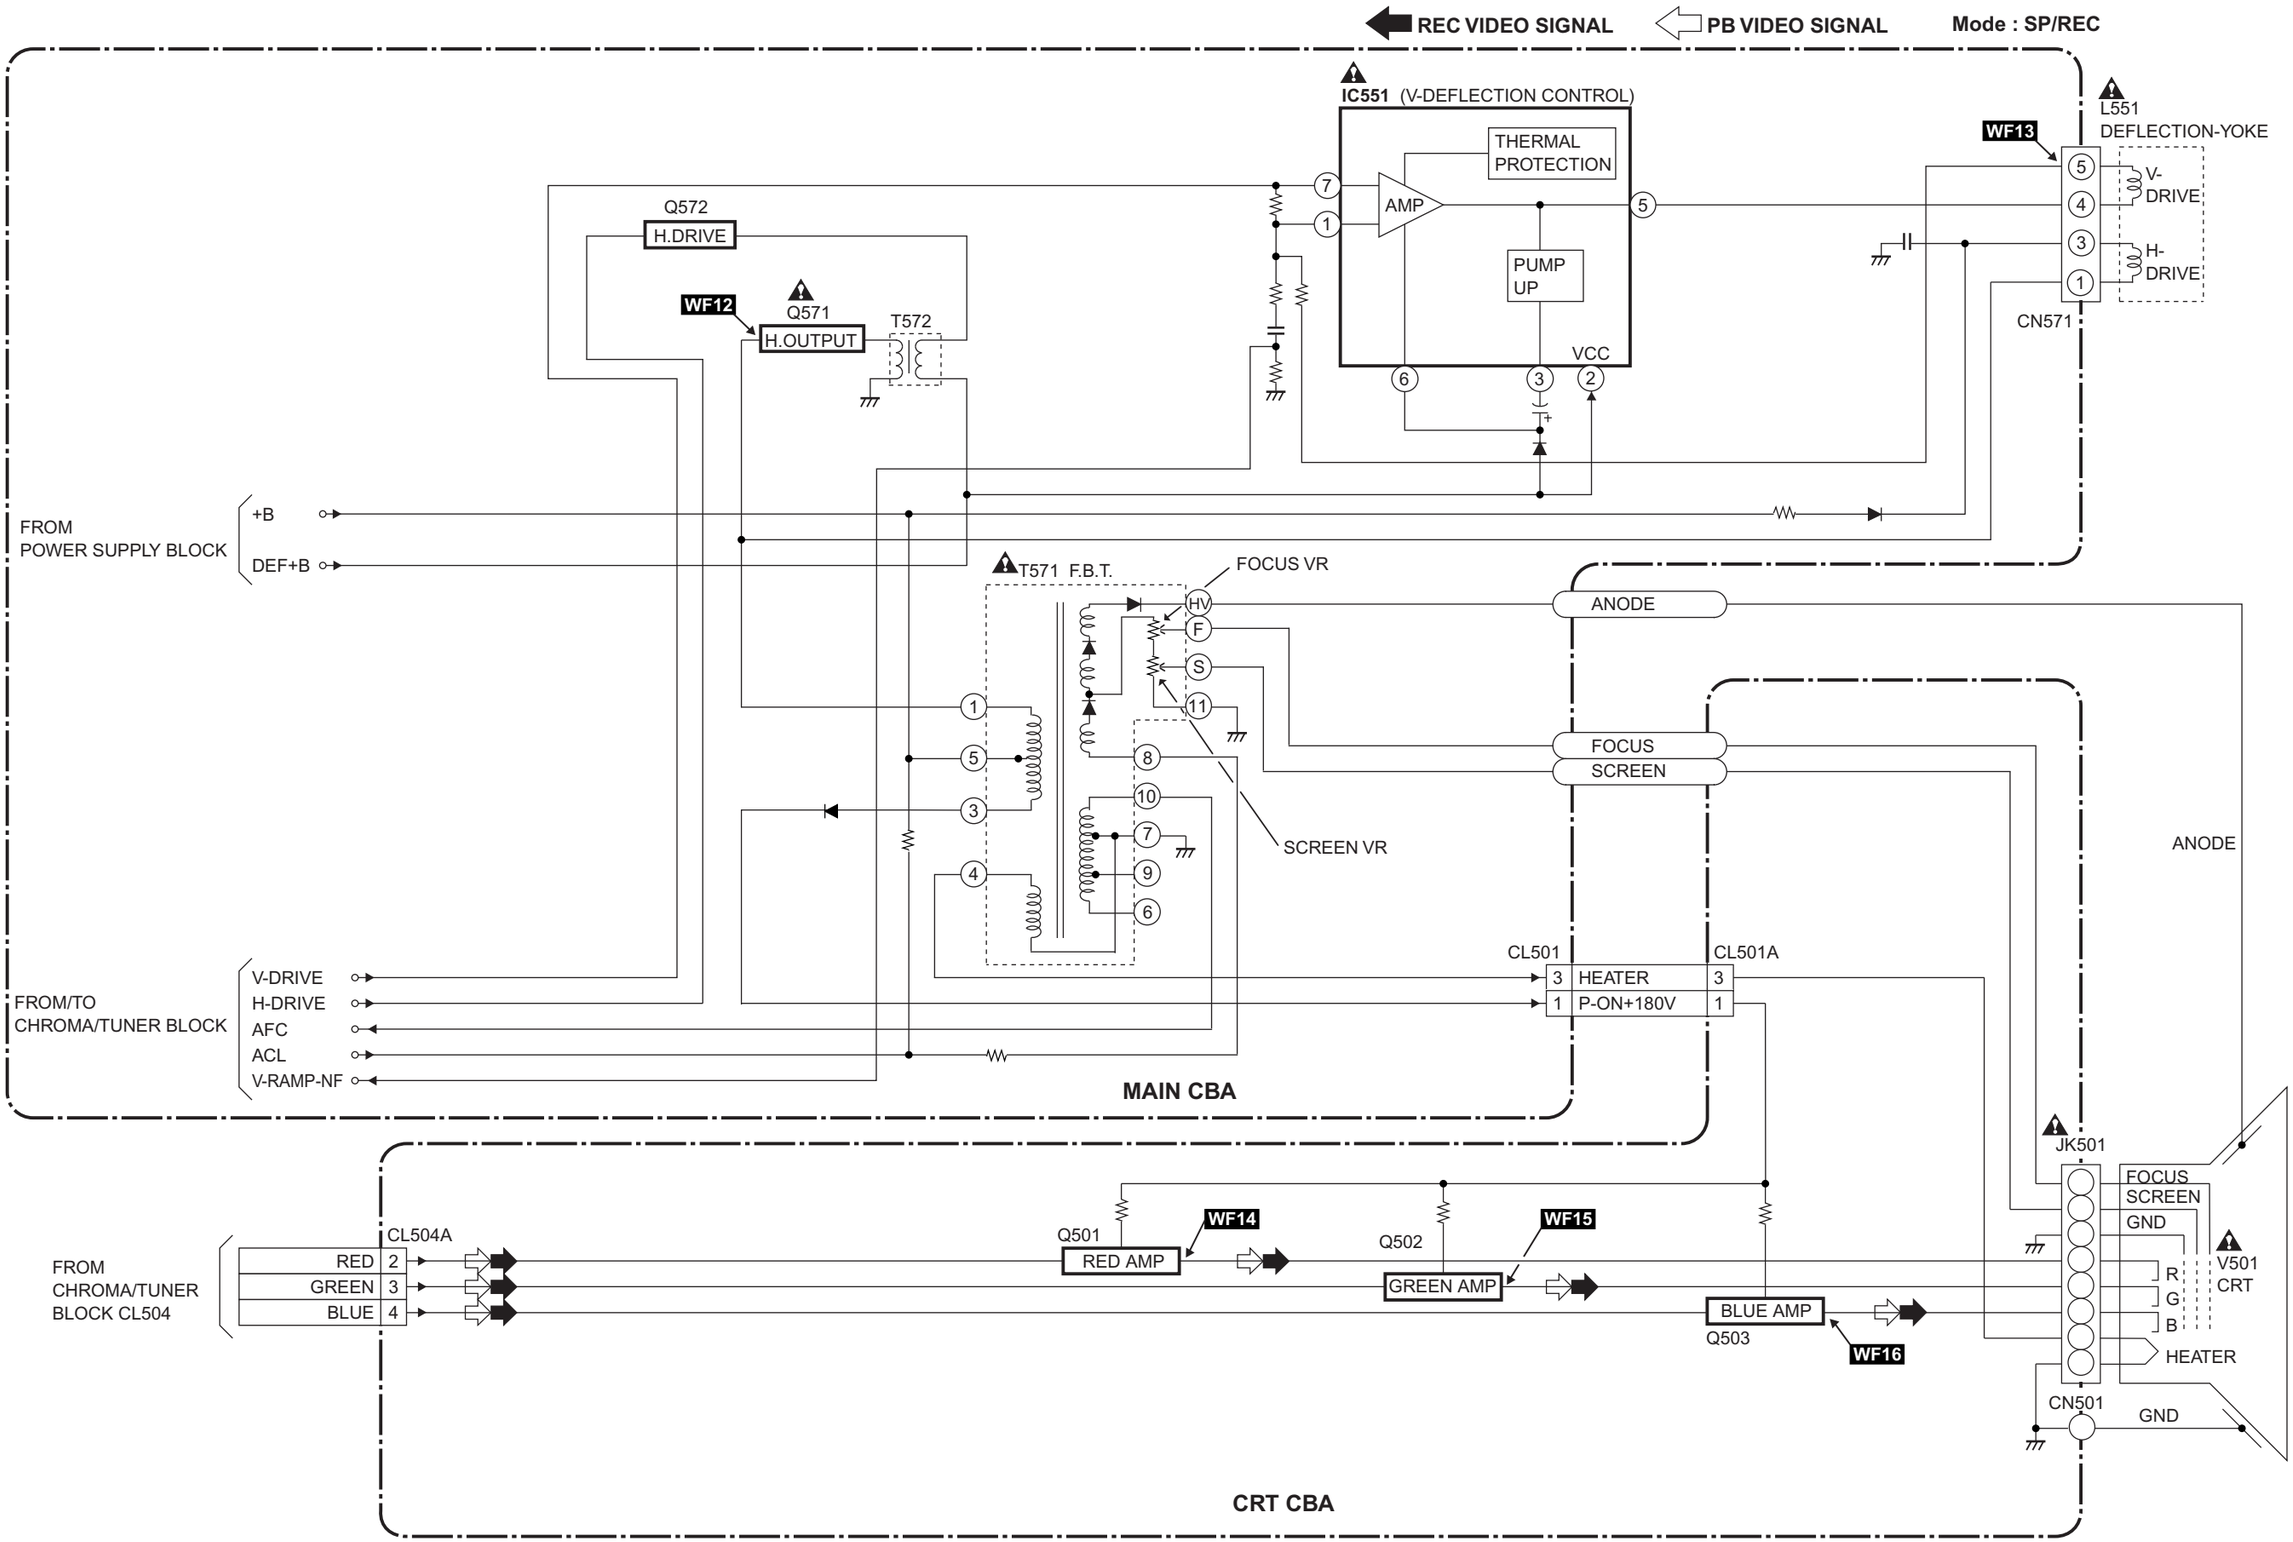

Power Supply Block Diagram

CAUTION !
Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F601) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

4A/125V

CAUTION
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.
RISK OF FIRE-REPLACE FUSE AS MARKED.
"This symbol means fast operating fuse."
"Ce symbole représente un fusible à fusion rapide."

NOTE :
The voltage for parts in hot circuit is measured using hot GND as a common terminal.

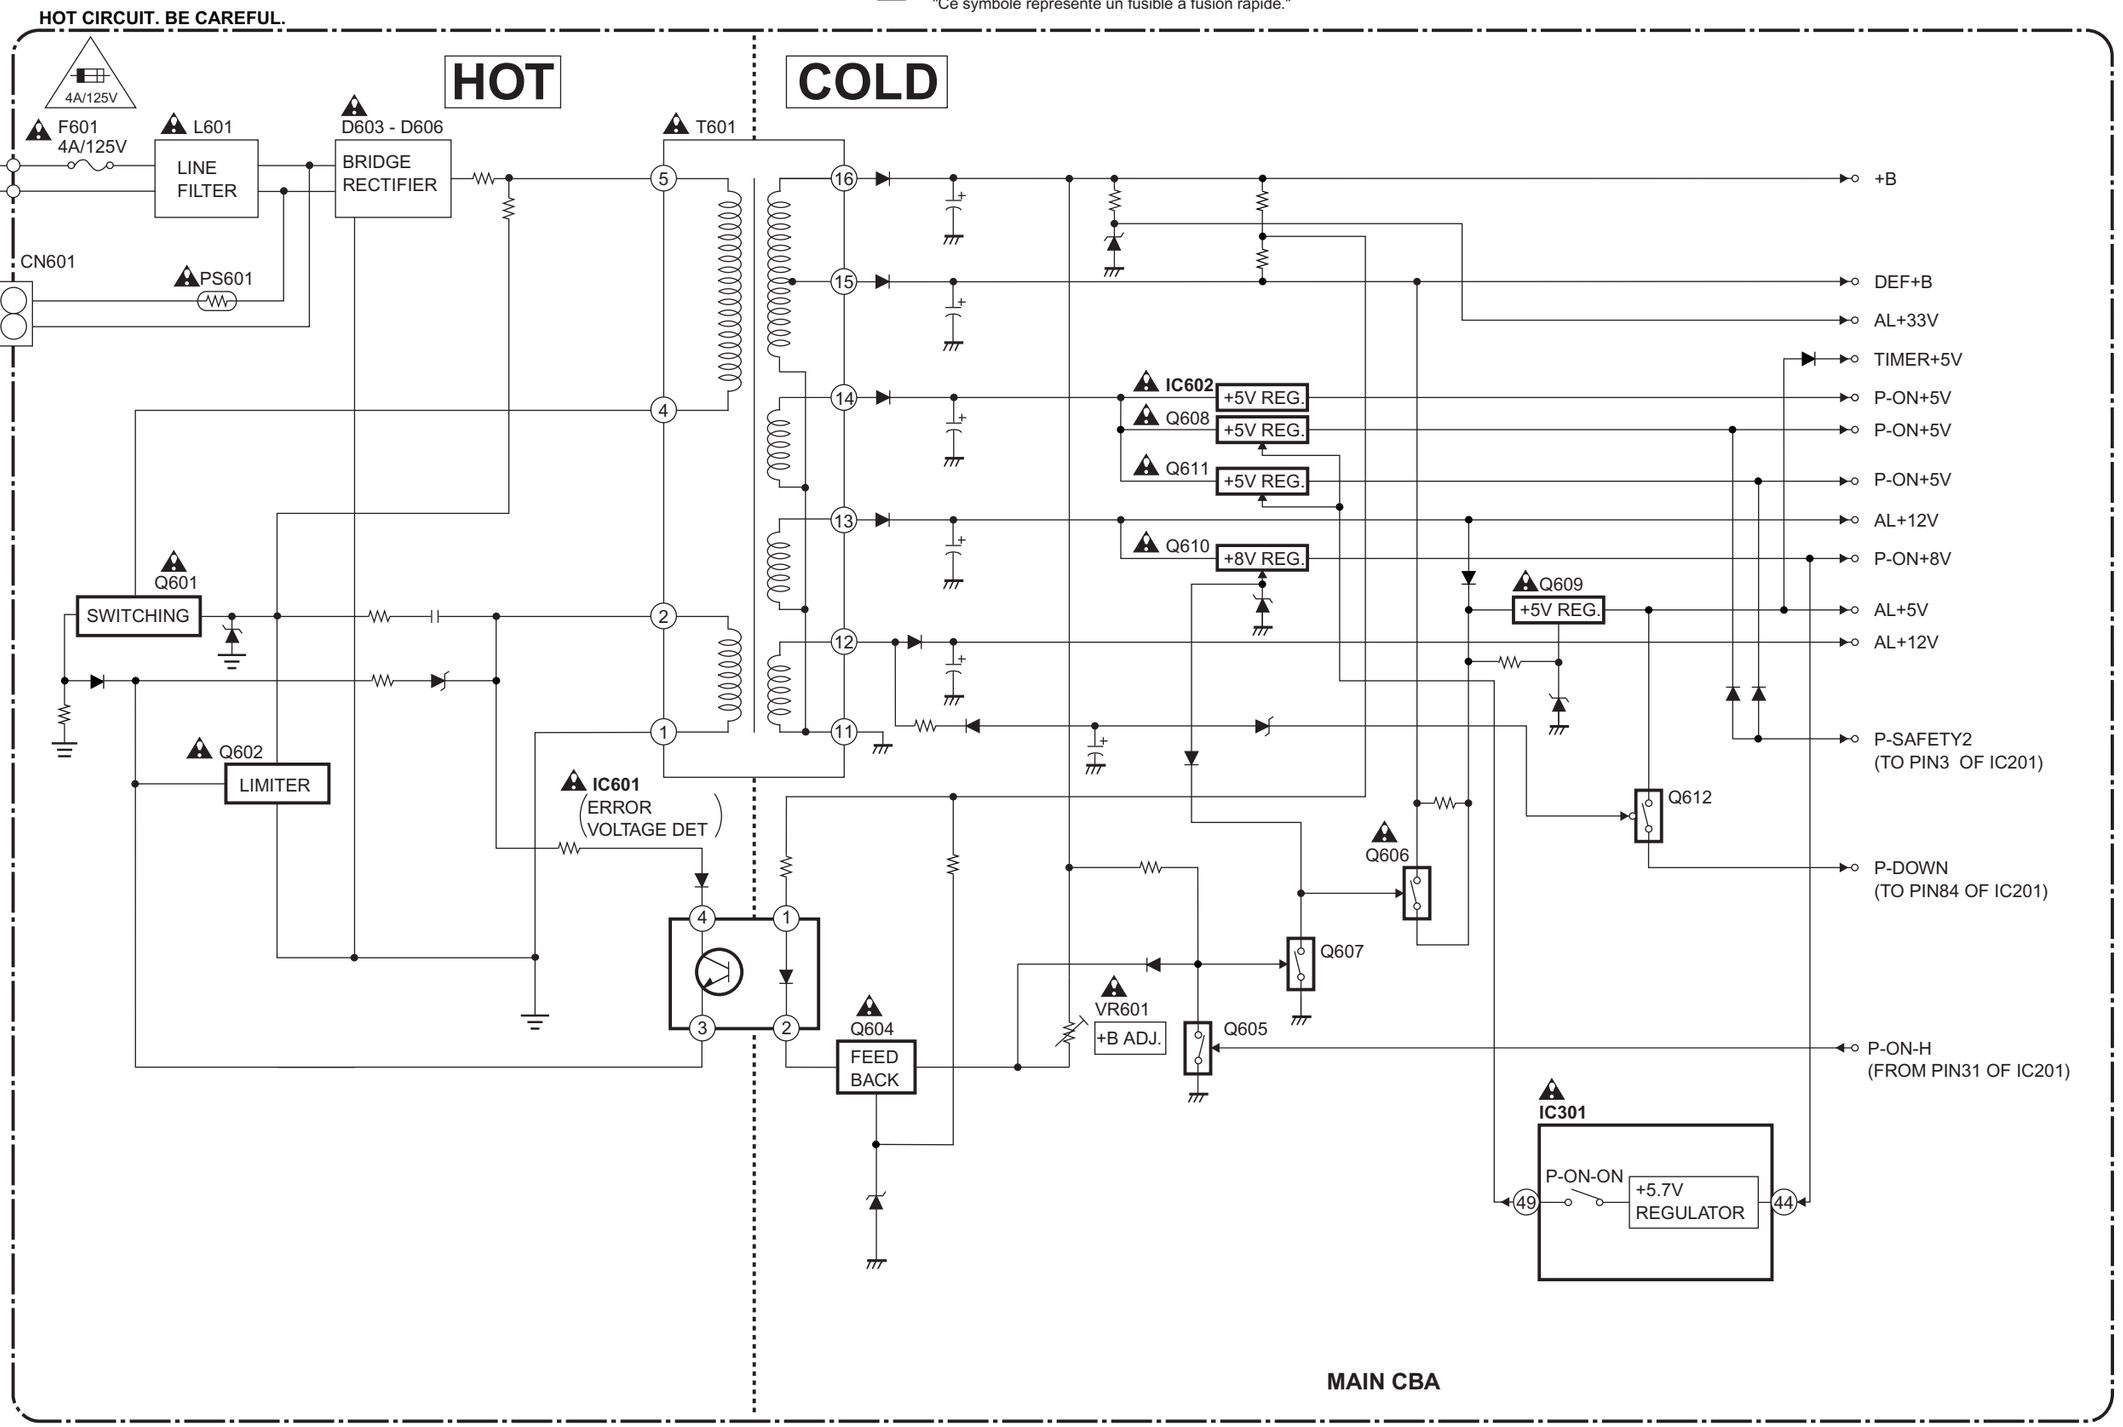

MECHANICAL TROUBLE INDICATOR

1, Each Malfunction Indication

If the MONITOR is turned ON right after the Mechanical Malfunction occurs or POWER SAFETY/X-RAY is turned ON, display the following character to show Malfunction after the EJECT display.

Immediately preceding Malfunction	Display character
REEL Malfunction	R
DRUM Malfunction	D
CASSETTE LOADING Malfunction	C
TAPE LOADING Malfunction	T
P-SAFETY 1	1
P-SAFETY 2	2
P-SAFETY 3	3
X-RAY	X

Example: If REEL Malfunction



2, Each Malfunction evaluation method

X-RAY protect

If X-RAY port becomes continuously 2.5V or more for 120 msec. (4 times 40 msec. interval), the unit shall immediately turn OFF the POWER/MONITOR and switch over to the Mechanical Malfunction mode with POWER OFF.

(To return from this mode shall become possible only by POWER Key as in the case of the Mechanical Malfunction).

POWER SAFETY

1) POWER SAFETY 1

   If P-SAFETY 1 port becomes continuously 2.5V or less for 120 msec. (4 times 40 msec. interval) when MONITOR is ON, the unit shall be assumed to be the Power Malfunction 1 and immediately turn OFF the POWER/MONITOR and switch over the Mechanical Malfunction mode with POWER OFF.

   (Shall not unload)

   (To return from this mode shall become possible only by POWER Key as in the case of the Mechanical Malfunction).

   * However the POWER SAFETY 1 function shall be disabled during 500 msec. right after the MONITOR turns ON.

2) POWER SAFETY 2

   If P-SAFETY 2 port becomes continuously 2.5V or less for 120 msec. (4 times 40 msec. interval) when P-ON-H port is ON, the unit shall be assumed to be the Power Malfunction 2 and immediately turn OFF the POWER/MONITOR and switch over the Mechanical Malfunction mode with POWER OFF.

   (Shall not unload)

   (To return from this mode shall become possible only by POWER Key as in the case of the Mechanical Malfunction).

   * However the POWER SAFETY 2 function shall be disabled during 500 msec. right after the P-ON-H turns ON.

3) POWER SAFETY 3

   If P-SAFETY 3 port becomes continuously 2.5V or over for 120 msec. (4 times 40 msec. interval) when MONITOR is ON, P-SAFETY 3 function is available. After that, if P-SAFETY 3 port becomes continuously 2.5V or less for 120 msec. (4 times 40 msec. interval), the unit shall be assumed to be the Power Malfunction 3 and immediately turn OFF the POWER/MONITOR and switch over the Mechanical Malfunction mode with POWER OFF.

   (Shall not unload)

   (To return from this mode shall become possible only by POWER Key as in the case of the Mechanical Malfunction).

   * However the POWER SAFETY 3 function shall be disabled during 500 msec. right after the MONITOR turns ON.

Mechanical Malfunction determination

1) REEL Malfunction detection

Countermeasure for REEL and CAPSTAN motor rotation malfunction (Except CASSETTE LOADING function)

After the Malfunction detection with REEL/CAPSTAN sensor, the unit shall switch over to STOP (B) and be REEL Mechanical Malfunction.

a) If the T-REEL pulse is not impressed after a lapse of 5 sec. at SP, 10 sec. at LP, 14 sec. at SLP, or more in the REEL Rotation Mode like PLAY/REC, FS/RS Mode, and the T-REEL or S-REEL pulse is not impress after a lapse of 4 sec. or more in REEL Rotation Mode of FF/REW, it shall be assumed to stop the rotation and switch over to STOP (B) position, then POWER be turned OFF and the unit be REEL Mechanical Malfunction. (T-REEL and S-REEL for the models on S-REEL and only T-REEL for other models)

b) If the C-FG pulse is not impressed for a lapse of 1 sec. or more during the CAPSTAN MOTOR rotation, it shall be MOTOR Rotation Malfunction (REEL Malfunction).

2) DRUM Malfunction detection

Detect the DRUM rotation at the D-FG input terminal.

If the variation of D-FG input level is not detected for a lapse of 1 sec. or more when D-CONT is "H", it shall be assumed to be Rotation Malfunction and be DRUM Malfunction.

When detect Drum Malfunction, POWER shall be turned OFF after the unit switches over to STOP (B) Mode.

3) Countermeasure for TAPE LOADING Malfunction

Detect the Malfunction with the LOADING Switch.

a) TAPE LOADING Malfunction

If LD-SW does not go to the established position after a lapse of 7 sec. or more from TAPE LOADING or TAPE UNLOADING start, the LOADING function shall immediately be stopped and POWER be turned OFF, and inform the Timer about the LOADING Mechanical Malfunction.

b) LD-SW Position Malfunction at each mode

When the unit operates at each mode, even if the LD-SW position changes from the established one in its mode, it keeps the function according to its mode.

4) Countermeasure for CASSETTE LOADING Malfunction

a) CASSETTE IN operating Malfunction

If LD-SW does not go to SB position after a lapse of 5 sec. or more from the CASSETTE insertion start, the unit starts the CASSETTE OUT operation.

After switch over to CASSETTE OUT operation and then a laps of 5 sec. or more from the CASSETTE OUT operation start, if LD-SW does not go to the EJ position or if START Sensor and END Sensor does not turn "ON" at the EJ position, the unit starts again to insert CASSETTE.

(However in S-INH state, the START/END Sensor shall be disabled).

b) CASSETTE OUT operating Malfunction

After a lapse of 5 sec. or more from CASSETTE OUT operation start, if LD-SW does not go to the EJ position or if START Sensor and END Sensor does not turn "ON" at the EJ position, the unit starts to insert CASSETTE.

(However in S-INH state, the START/END Sensor shall be disabled).

When the unit switches over to CASSETTE insertion at CASSETTE IN or CASSETTE OUT Malfunction, if LD-SW does not go to the SB position after a lapse of 5 sec. or more from CASSETTE insertion start, the function shall immediately be stopped and POWER be turned OFF, and the unit be CASSETTE LOADING Malfunction.

c) When POWER is turned ON, if the CL position or GC position cannot be detected after 5 sec. LD-REV operation and 5 sec. LD-FWD operation, the function shall immediately be stopped and POWER be turned OFF, and the unit be CASSETTE LOADING Malfunction.

d) When POWER is turned ON without CASSETTE (EJ position) and LD-SW is monitored all the time, if the CL or GC position is detected continuously for 1 sec. or more, the POWER shall be turned OFF and the unit be CASSETTE LOADING Malfunction.

Countermeasure for Mechanical Malfunction

If the unit detects Mechanical Malfunction, turn the POWER OFF. If the unit is Mechanical Malfunction, Key input except POWER key shall be disabled and CASSETTE insertion disabled. When POWER Key is entered, the POWER is turned ON and the unit switches over the EJECT Mode. (Return with POWER ON)

Power Supply Trouble Shooting Guide

It is highly recommended that a variable isolation transformer which can monitor current be used. (Alternatively a variable AC source which monitors current will do). Read directions below before power is added!

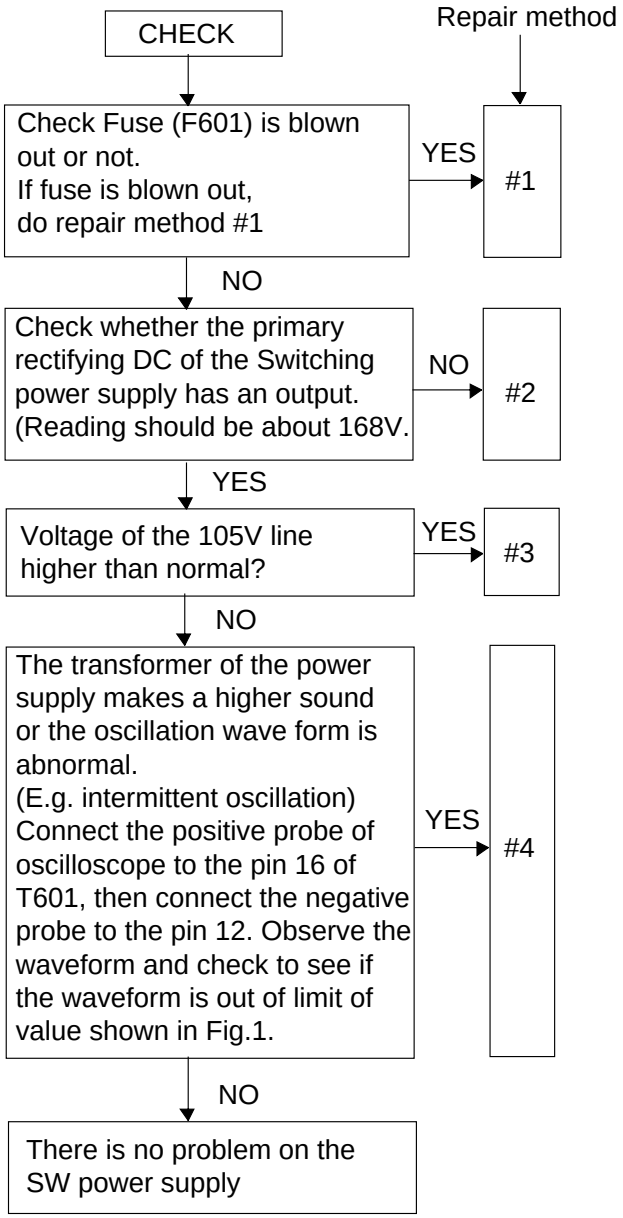
CHECK
Repair method
Check Fuse (F601) is blown out or not.
If fuse is blown out, do repair method #1
YES
#1
NO
Check whether the primary rectifying DC of the Switching power supply has an output. (Reading should be about 168V.
NO
#2
YES
Voltage of the 105V line higher than normal?
YES
#3
NO
The transformer of the power supply makes a higher sound or the oscillation wave form is abnormal.
(E.g. intermittent oscillation)
Connect the positive probe of oscilloscope to the pin 16 of T601, then connect the negative probe to the pin 12. Observe the waveform and check to see if the waveform is out of limit of value shown in Fig.1.
YES
#4
NO
There is no problem on the SW power supply

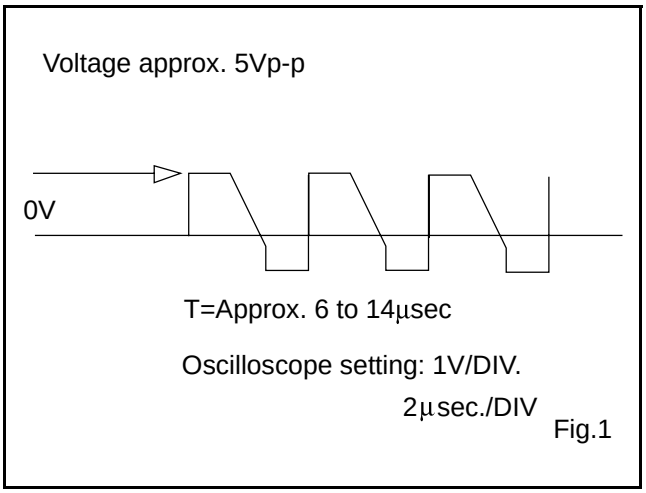

Fig.1

Repair method #1

(Power must be off)

Short circuit in the secondary side. check diode D613, D614, D616, D617 and D618, switching transistor (Q601), control transistor (Q602), diode and resistor replace as necessary.

Disconnect 105V diode (D613), 25V diode (D614), 8V diode (D616), 12V diode (D617), 12V diode (D618) and Check the load continuity of 105V line, 25V line, 8V line, 12V line through a tester (resistance range).

If the tester indicates a lower resistance value around 0 ohm, the line is short-circuited.

Before repairing the switching power supply, find out the short-circuited area of such line and repair it.

If the tester does not indicate any low resistance value (around 0 ohm), no load is short-circuited and there is no problem.

Check for any defective parts while the secondary rectifying diodes are disconnected (D613, D614, D616, D617 and D618) perform a diode check in both forward and reverse directions through a tester.

Repair method #2

Check the primary rectifying diodes (D603-D606) as possible problems. Remove the above mentioned parts and check them. Perform check according to the step 1 and 2 of repair method #1 and check for defects following parts, then if necessary replace with factory originals.

R602 is open or not.

Q601, Q602, D607, D608 and D611 are short or not.

Repair method #3

The feedback circuit which is monitored by the output of D613 105V may not work and this may be regarded as a possible cause, remove IC601 (Photo Coupler), diode (D620) and transistor (Q604) check for defects.

Repair method #4

Check control circuitly which is connecting to Pin 2 and 1 of Switching Transformer T601.

SCHEMATIC DIAGRAMS / CBA'S AND TEST POINTS

Standard Notes

Warning

Many electrical and mechanical parts in this chassis have special characteristics. These characteristics often pass unnoticed and the protection afforded by them cannot necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts that have these special safety characteristics are identified in this manual and its supplements; electrical components having such features are identified by the mark " ⚠ " in the schematic diagram and the parts list. Before replacing any of these components, read the parts list in this manual carefully. The use of substitute replacement parts that do not have the same safety characteristics as specified in the parts list may create shock, fire, or other hazards.

Capacitor Temperature Markings

Mark	Capacity change rate	Standard temperature	Temperature range
(B)	±10%	20°C	-25~+85°C
(F)	+30 -80%	20°C	-25~+85°C
(SR)	±15%	20°C	-25~+85°C
(Z)	+30 -80%	20°C	-10~+70°C

Capacitors and transistors are represented by the following symbols.

Note:

1. Do not use the part number shown on these drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since these drawings were prepared.
2. All resistance values are indicated in ohms ($K=10^3$, $M=10^6$).
3. Resistor wattages are 1/4W or 1/6W unless otherwise specified.
4. All capacitance values are indicated in μF ($P=10^{-6}\mu F$).
5. All voltages are DC voltages unless otherwise specified.

CBA Symbols

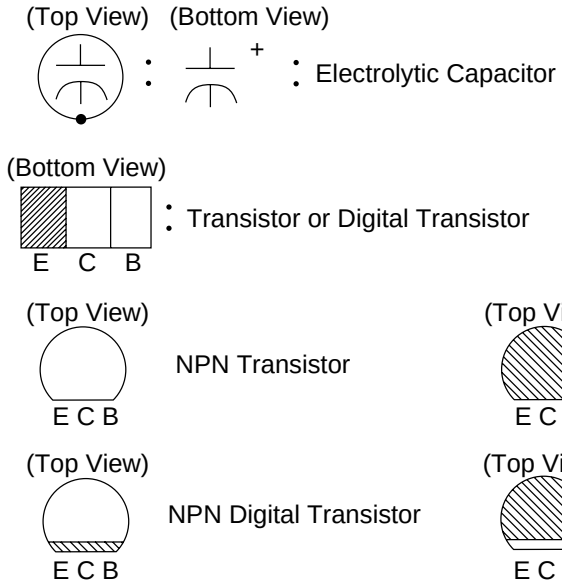

Schematic Diagram Symbols

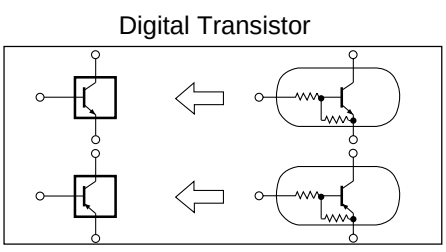

LIST OF CAUTION, NOTES, AND SYMBOLS USED IN THE SCHEMATIC DIAGRAMS ON THE FOLLOWING PAGES:

1. **CAUTION:**

FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE.

2. **CAUTION:**

Fixed Voltage (or Auto voltage selectable) power supply circuit is used in this unit.
If Main Fuse (F601) is blown, first check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

3. **Note:**

(1) Do not use the part number shown on the drawings for ordering. The correct part number is shown in the parts list, and may be slightly different or amended since the drawings were prepared.

(2) To maintain original function and reliability of repaired units, use only original replacement parts which are listed with their part numbers in the parts list section of the service manual.

4. Wire Connectors

(1) Prefix symbol "CN" means "connector" (can disconnect and reconnect).

(2) Prefix symbol "CL" means "wire-solder holes of the PCB" (wire is soldered directly).

5. Note: Mark "•" is a leadless (chip) component.

6. Mode: SP/REC

7. Voltage indications for PLAY and REC modes on the schematics are as shown below:

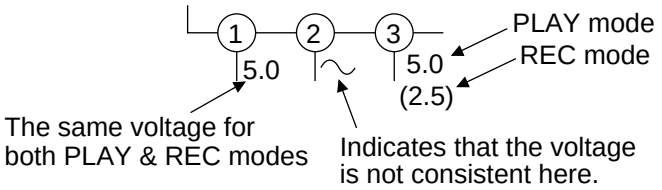

Unit: Volts

8. How to read converged lines



Examples:
1. "1-D3" means that line number "1" goes to area "D3".
2. "1-B1" means that line number "1" goes to area "B1".

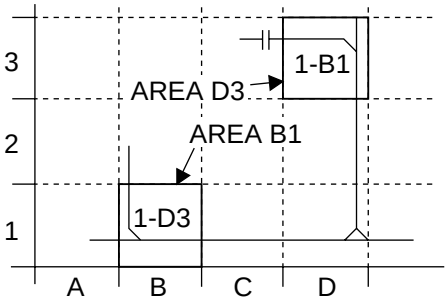

9. Test Point Information

: Indicates a test point with a jumper wire across a hole in the PCB.

: Used to indicate a test point with a component lead on foil side.

: Used to indicate a test point with no test pin.

: Used to indicate a test point with a test pin.

Main 1/4 Schematic Diagram

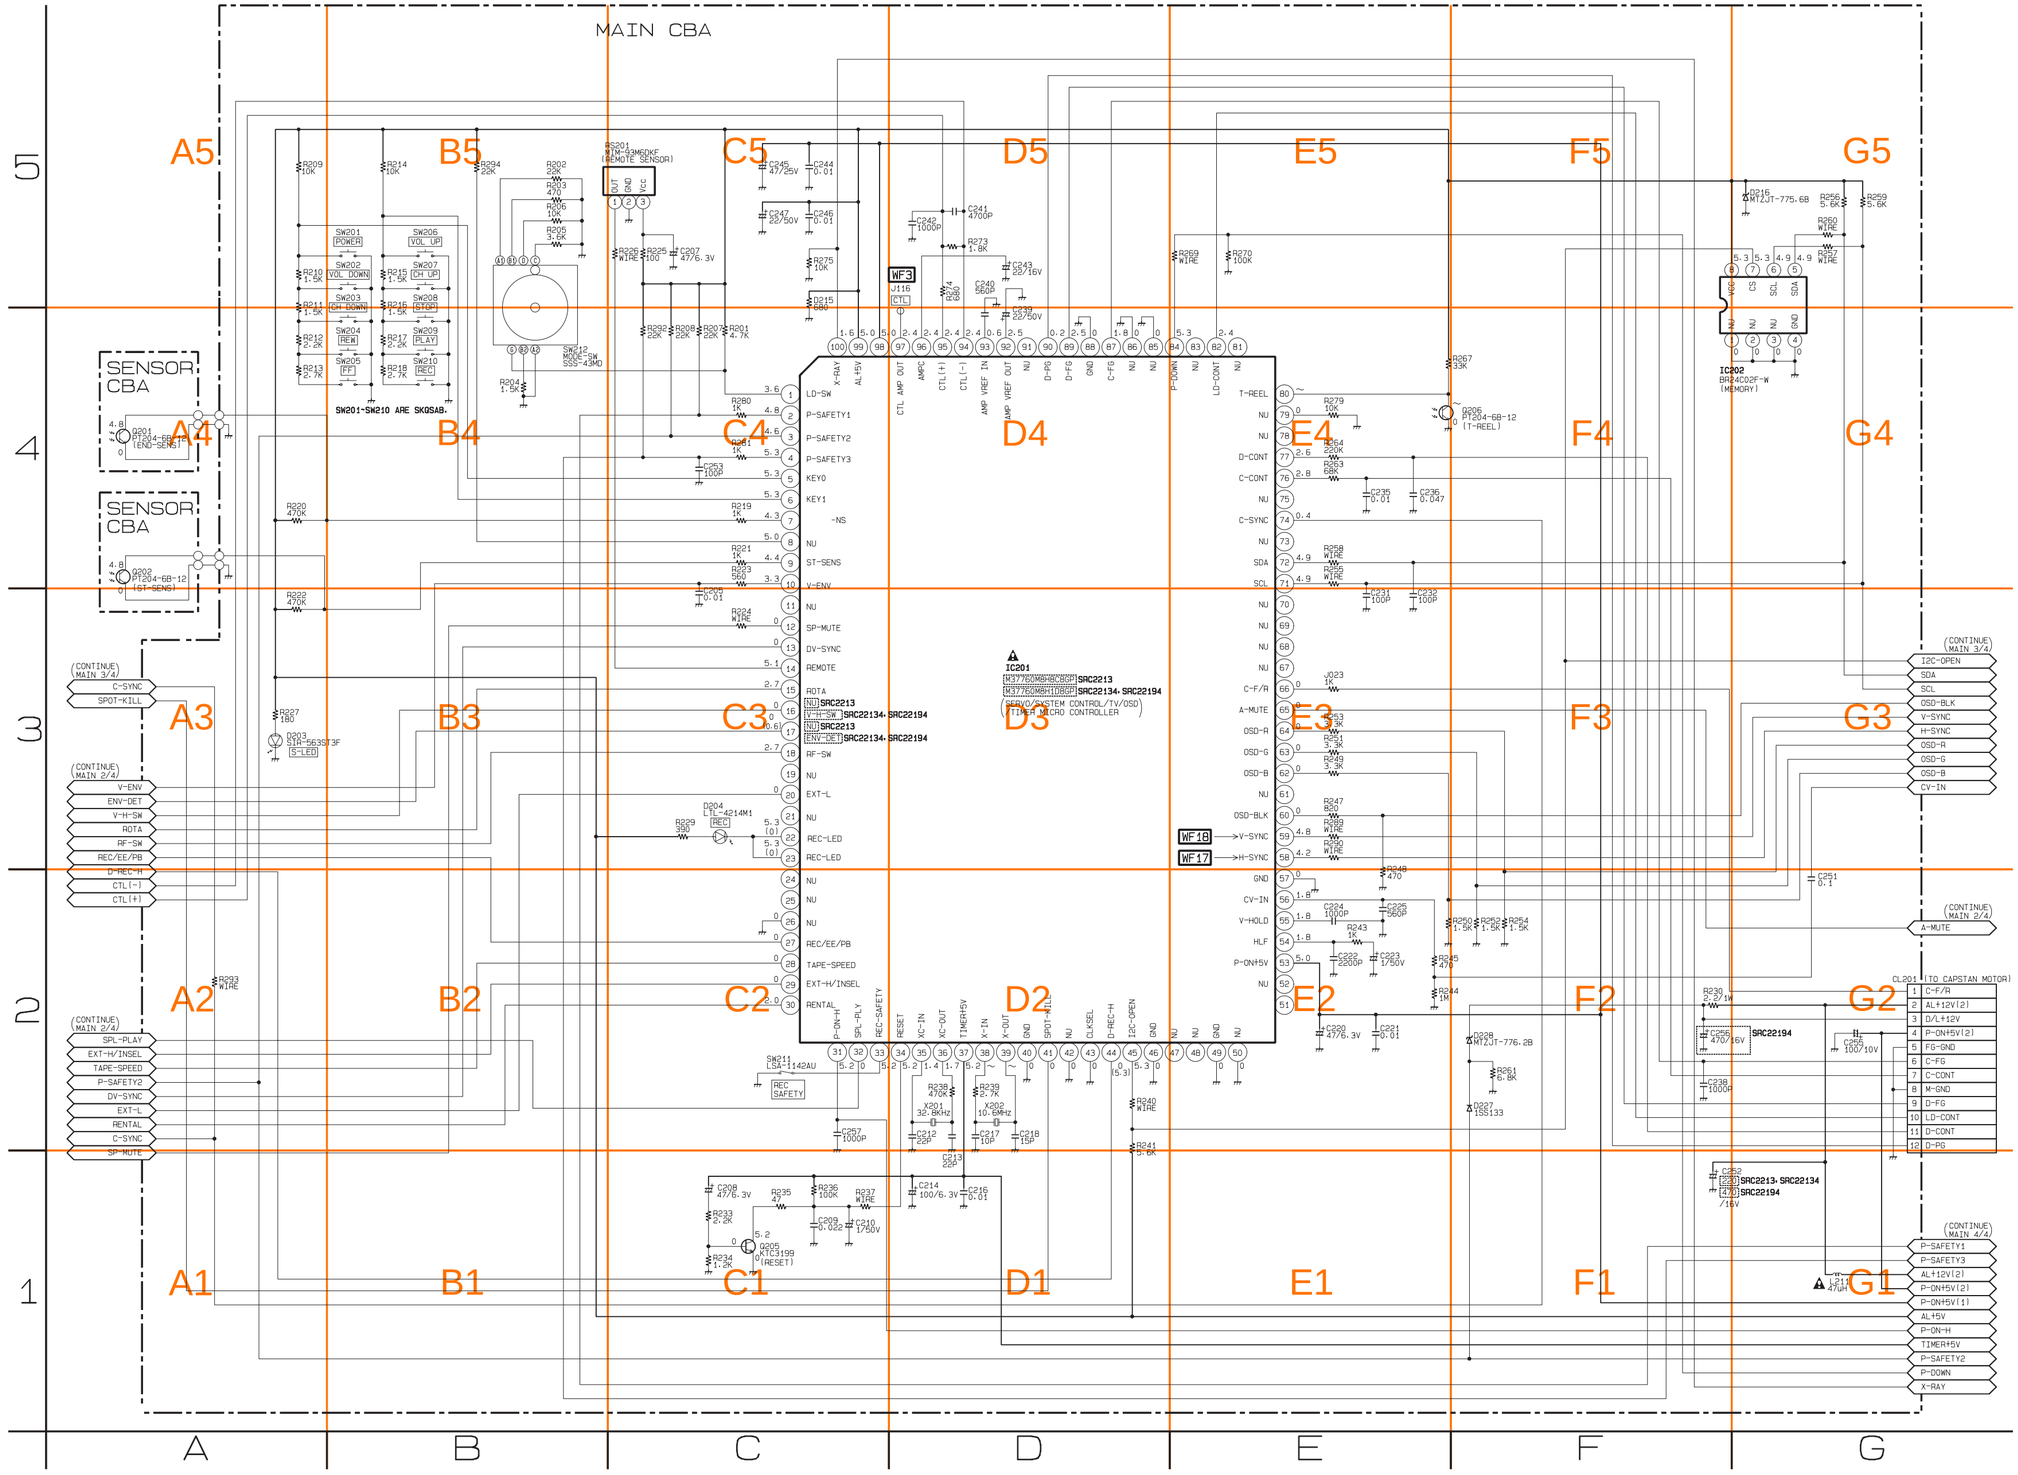

MAIN 1/4

Ref No.	Position
ICS	
IC201	D-3
IC202	F-4
TRANSISTORS	
Q205	C-1
Q206	F-4
TEST POINTS	
J116	D-5
CONNECTORS	
CL201	G-2

Main 2/4 Schematic Diagram

REC Video Signal
REC Audio Signal
PB Video Signal
PB Audio Signal

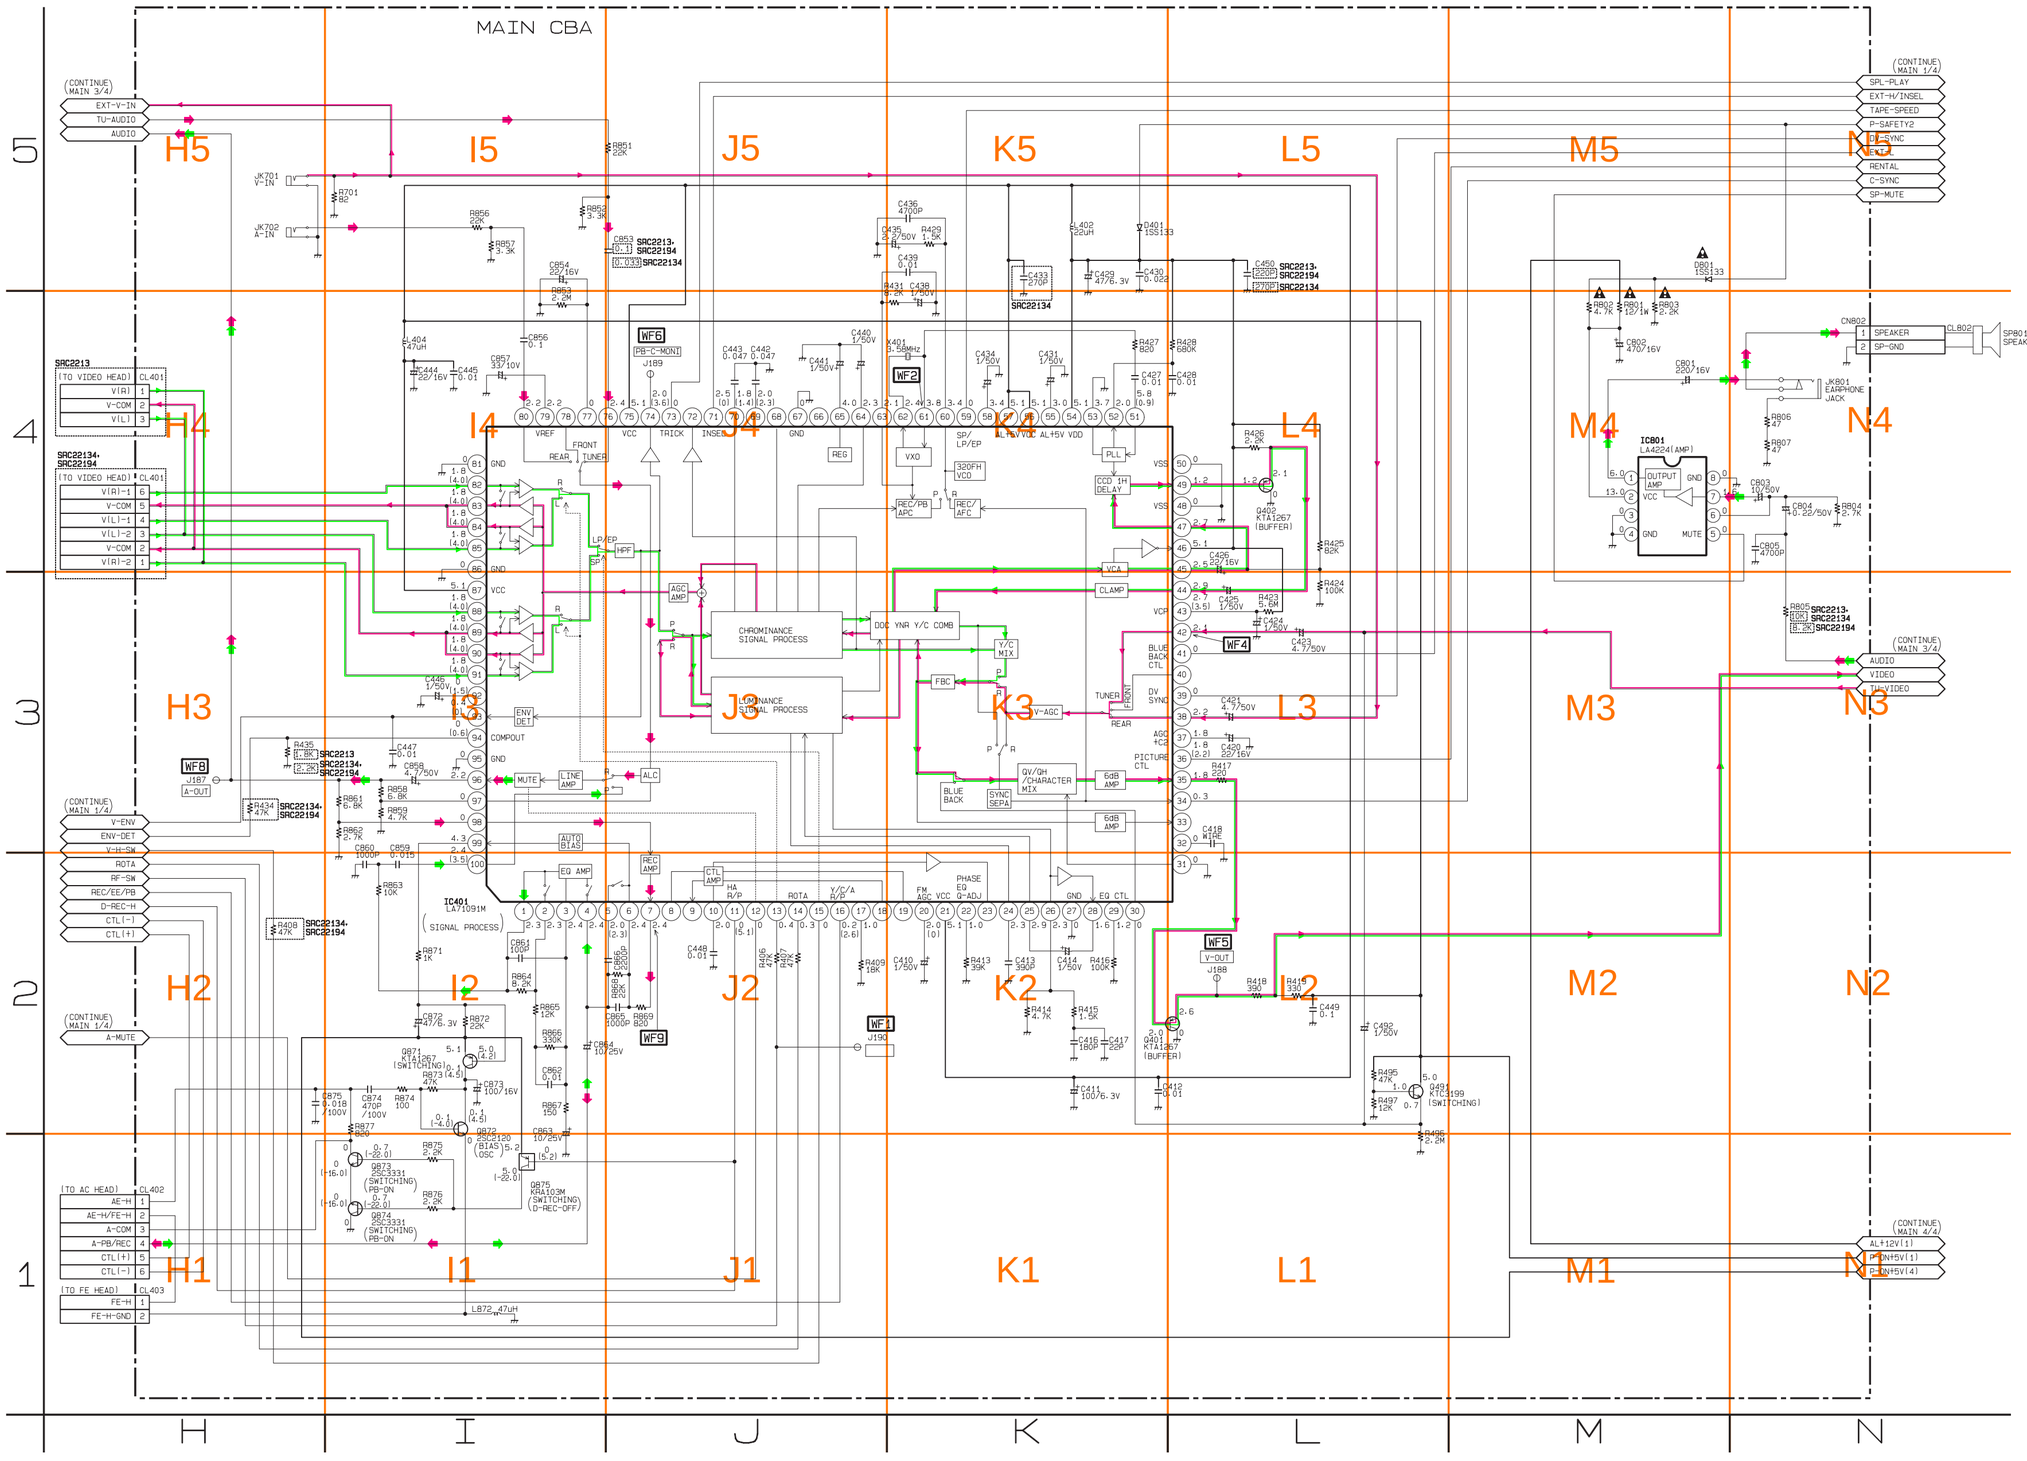

MAIN 2/4

Ref No.	Position
ICS	
IC401	I-2
IC801	M-4
TRANSISTORS	
Q401	K-2
Q402	L-4
Q491	L-2
Q871	I-2
Q872	I-2
Q873	I-1
Q874	I-1
Q875	I-1
TEST POINTS	
J187	H-3
J188	L-2
J189	J-4
J190	J-2
CONNECTORS	
CL401	H-4
CL402	H-1
CL403	H-1
CN802	N-4

Main 3/4 Schematic Diagram

REC Video Signal
REC Audio Signal
PB Video Signal
PB Audio Signal

MAIN CBA
CHROMA BLOCK

MAIN 3/4

Ref No.	Position
ICS	
IC301	R-2
TRANSISTORS	
Q301	R-5
Q302	Q-3
TEST POINTS	
J191	Q-3
J233	T-2
J234	T-2
J239	T-2
J262	T-1
J264	T-1
CONNECTORS	
CN303	U-5

Main 4/4 Schematic Diagram

NOTE :
THE VOLTAGE FOR PARTS IN HOT CIRCUIT IS MEASURED USING HOT GND AS A COMMON TERMINAL.

CAUTION !
Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F601) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.
Otherwise it may cause some components in the power supply circuit to fail.

CAUTION
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.
RISK OF FIRE-REPLACE FUSE AS MARKED.
4A/125V
"This symbol means fast operating fuse."
"Ce symbole représente un fusible à fusion rapide."

REC Video Signal
PB Video Signal

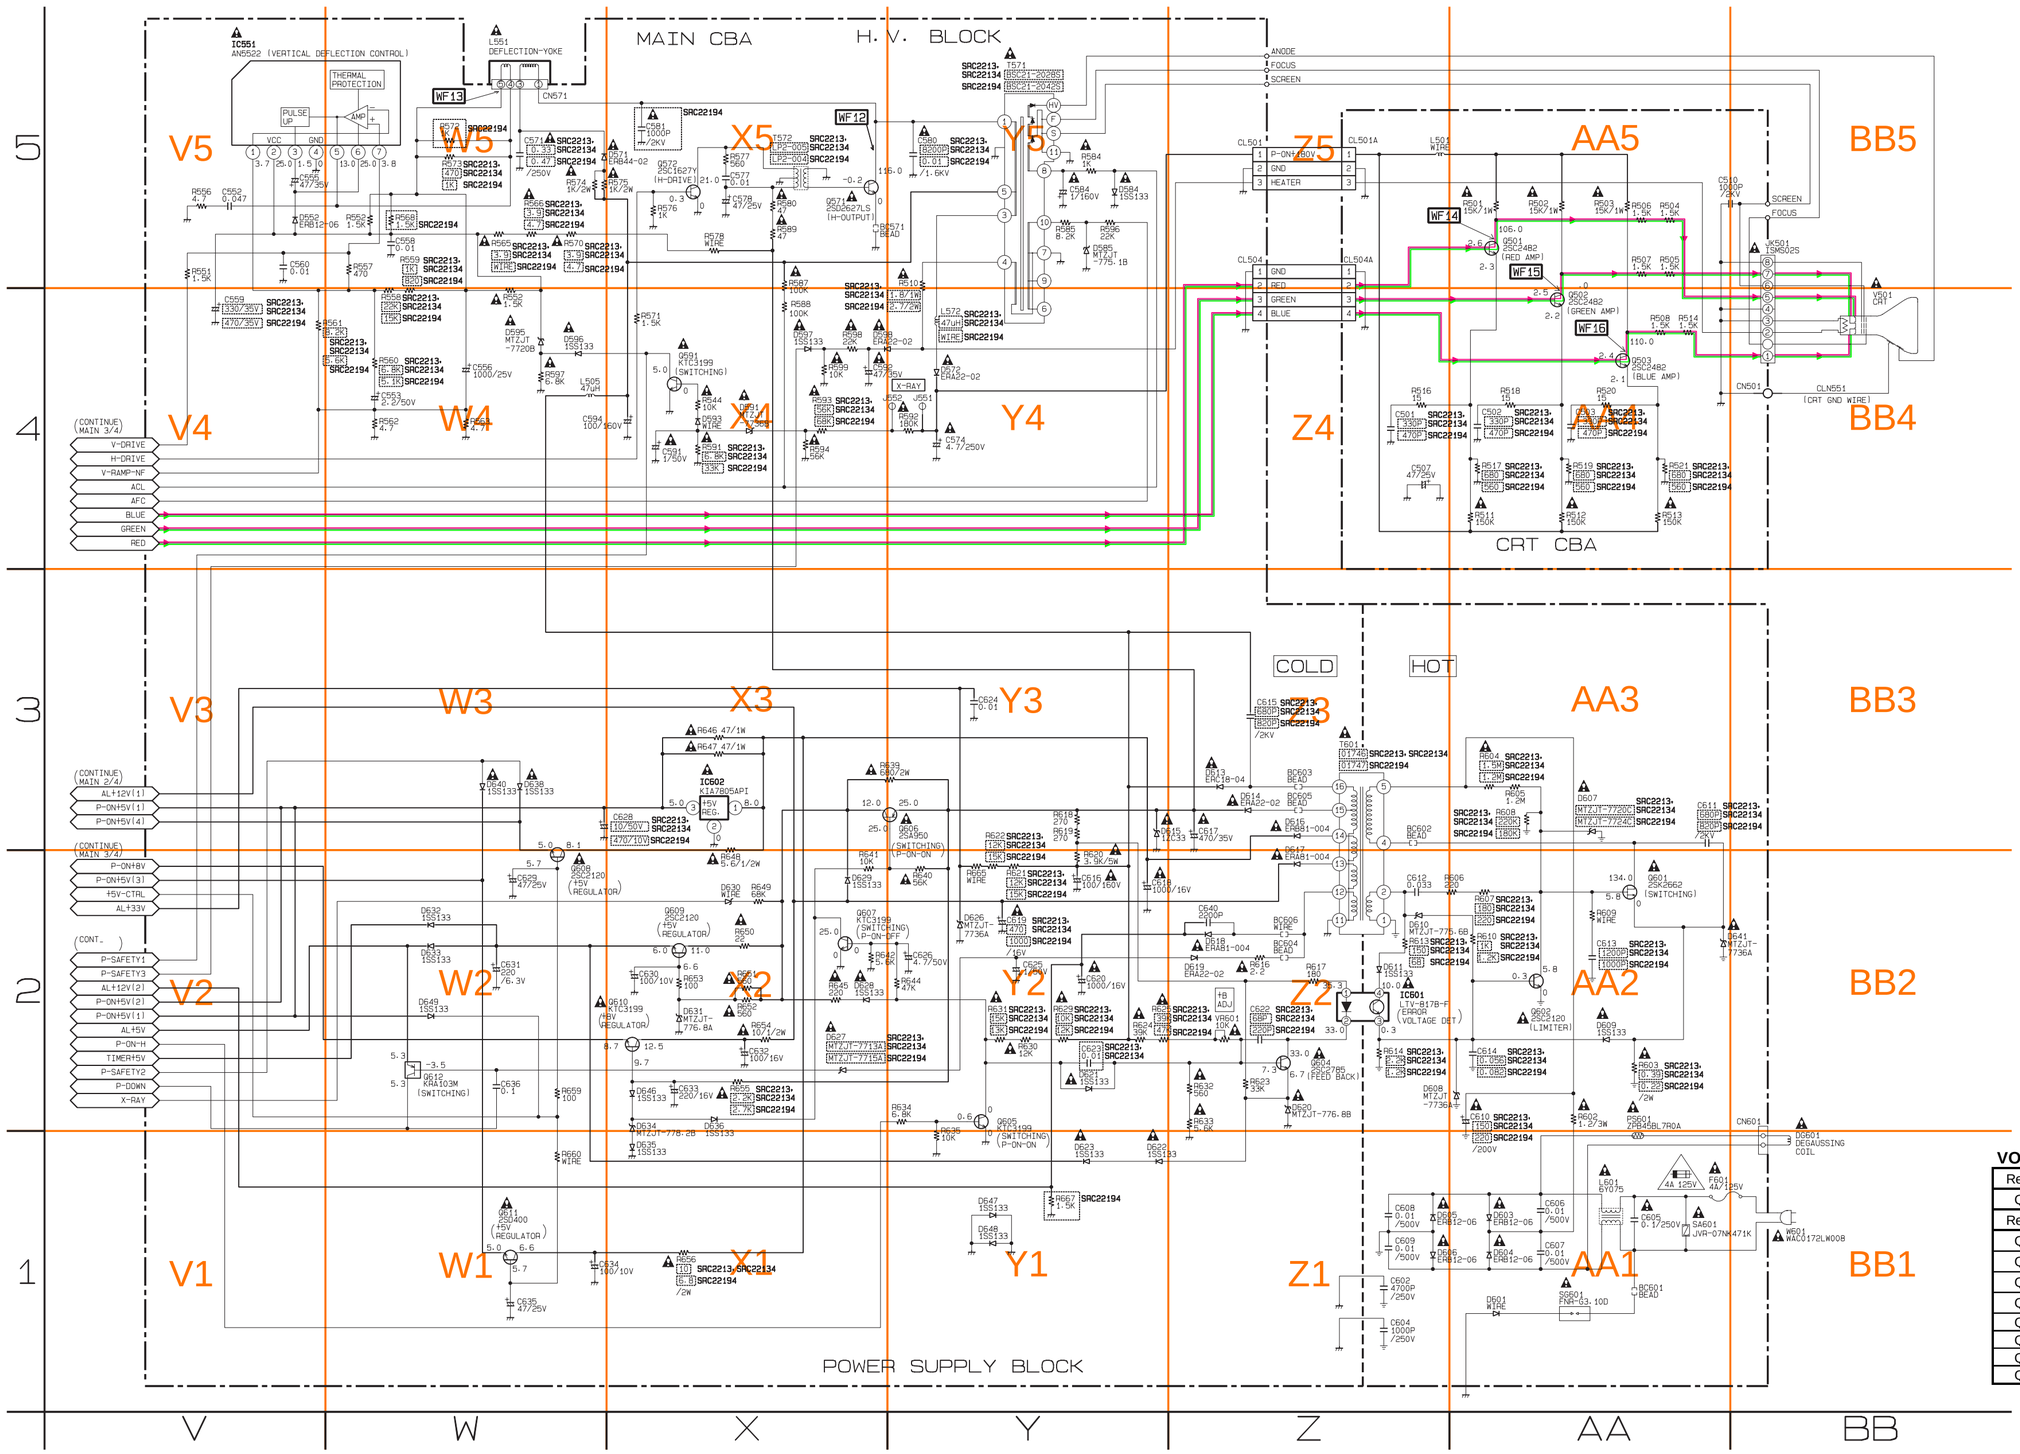

CRT

Ref No.	Position
TRANSISTORS	
Q501	AA-5
Q502	AA-4
Q503	AA-4
CONNECTORS	
CL501A	Z-5
CL504A	Z-5
CN501	BB-4

MAIN 4/4

Ref No.	Position
ICS	
IC551	V-5
IC601	Z-2
IC602	X-3
TRANSISTORS	
Q571	Y-5
Q572	X-5
Q591	X-4
Q601	AA-2
Q602	AA-2
Q604	Z-2
Q605	Y-2
Q606	Y-3
Q607	X-2
Q608	W-2
Q609	X-2
Q610	X-2
Q611	W-1
Q612	W-2
TEST POINTS	
J551	Y-4
J552	Y-4
CONNECTORS	
CL501	Z-5
CL504	Z-5
CN571	W-5
CN601	BB-2
ADJUSTMENT	
VR601	Z-2

VOLTAGE CHART (Power off mode)

Ref. No.	S	D	G
Q601	0.0	137.0	1.8
Ref. No.	E	C	B
Q602	0	3.2	0.5
Q605	0	7.0	0
Q606	7.0	7.0	7.0
Q608	5.0	7.5	5.7
Q609	6.0	6.5	6.6
Q610	0.7	4.7	1.3
Q611	0	2.4	0
Q612	5.3	5.3	0.8

Main CBA Top View

CAUTION !
Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F601) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply.
Otherwise it may cause some components in the power supply circuit to fail.

4A/125V

CAUTION
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQES
D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.
RISK OF FIRE-REPLACE FUSE AS MARKED.

"This symbol means fast operating fuse."
"Ce symbole reprèsente un fusible à fusion rapide."

Sensor CBA Top View (END-SENSOR)

BHB300F01011-A

BHB300F01011-B

BECAUSE A HOT CHASSIS GROUND IS PRESENT IN THE POWER SUPPLY CIRCUIT, AN ISOLATION TRANSFORMER MUST BE USED. ALSO, IN ORDER TO HAVE THE ABILITY TO INCREASE THE INPUT SLOWLY, WHEN TROUBLESHOOTING THIS TYPE POWER SUPPLY CIRCUIT, A VARIABLE ISOLATION TRANSFORMER IS REQUIRED.

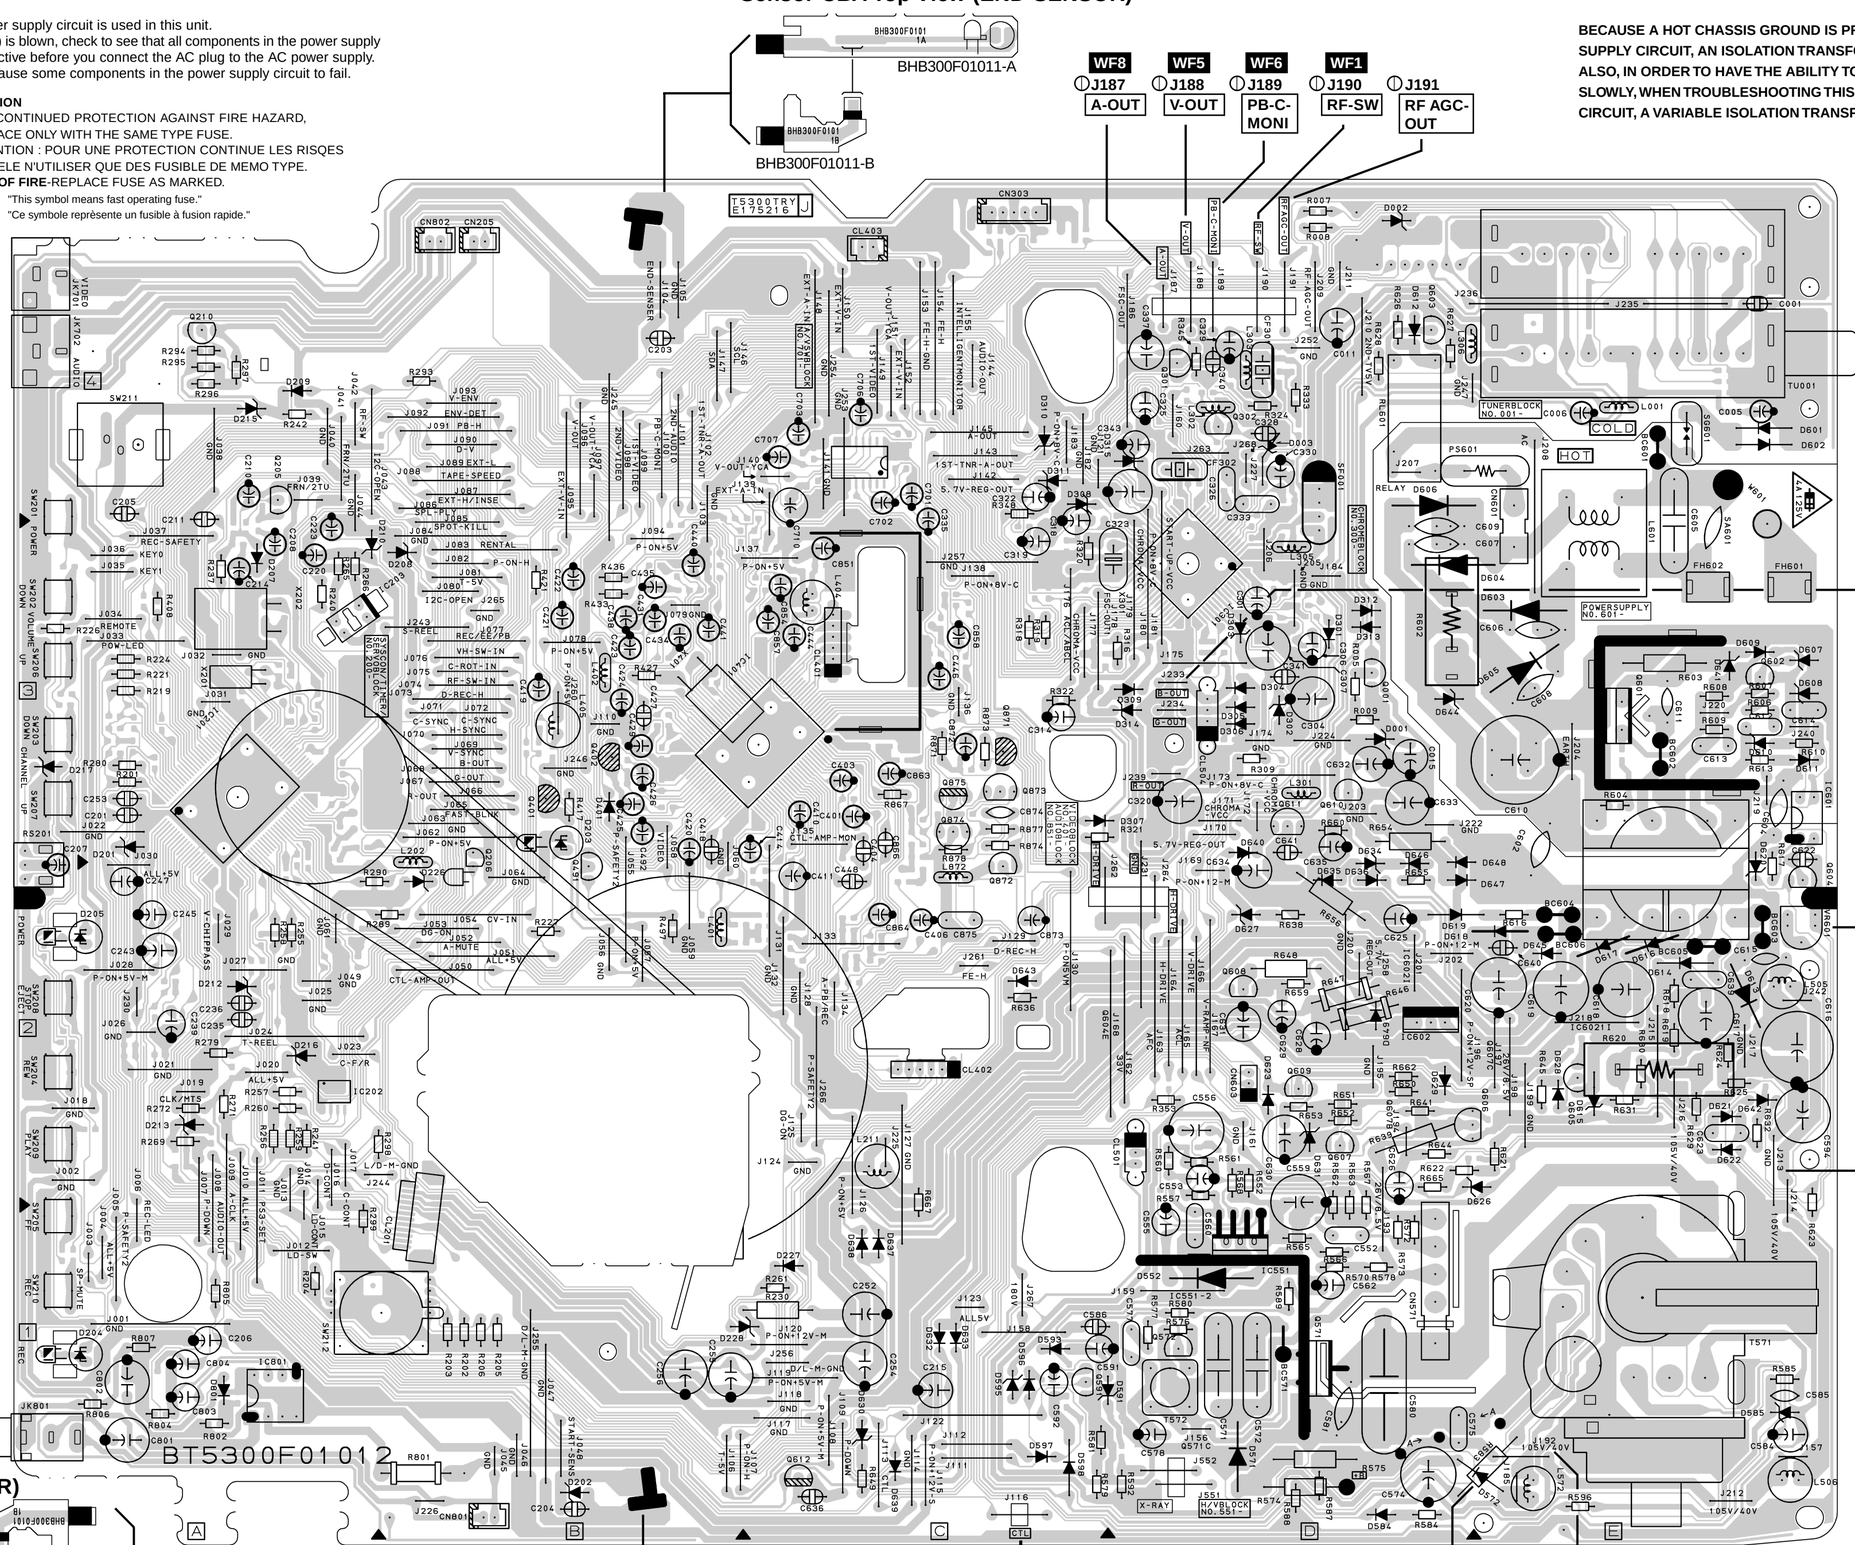

MAIN CBA

Ref No.	Position
ICS	
IC201	A-3
IC202	A-2
IC301	D-3
IC401	C-3
IC551	D-1
IC601	E-3
IC602	D-2
IC801	A-1
TRANSISTORS	
Q205	A-4
Q206	B-3
Q301	D-4
Q302	D-4
Q401	B-3
Q402	B-3
Q491	B-3
Q571	D-1
Q572	D-1
Q591	C-1
Q601	E-3
Q602	E-3
Q604	E-2
Q605	E-2
Q606	E-2
Q607	D-2
Q608	D-2
Q609	D-2
Q610	D-3
Q611	D-3
Q612	C-1
Q871	C-3
Q872	C-2
Q873	C-3
Q874	C-3
Q875	C-3
TEST POINTS	
J116	C-1
J187	D-4
J188	D-4
J189	D-4
J190	D-4
J191	D-4
J233	D-3
J234	D-3
J239	D-3
J262	D-3
J264	D-3
J551	D-1
J552	D-1
CONNECTORS	
CL201	B-1
CL401	C-3
CL402	C-2
CL501	D-2
CL504	D-3
CN303	C-4
CN571	D-1
CN601	E-4
CN802	B-4
ADJUSTMENT	
VR601	E-2

Main CBA Bottom View

CAUTION !
Fixed voltage power supply circuit is used in this unit.
If Main Fuse (F601) is blown, check to see that all components in the power supply circuit are not defective before you connect the AC plug to the AC power supply. Otherwise it may cause some components in the power supply circuit to fail.

4A/125V

CAUTION
FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,
REPLACE ONLY WITH THE SAME TYPE FUSE.
ATTENTION : POUR UNE PROTECTION CONTINUE LES RISQES D'INCELE N'UTILISER QUE DES FUSIBLE DE MEMO TYPE.
RISK OF FIRE-REPLACE FUSE AS MARKED.
"This symbol means fast operating fuse."
"Ce symbole représente un fusible à fusion rapide."

BECAUSE A HOT CHASSIS GROUND IS PRESENT IN THE POWER SUPPLY CIRCUIT, AN ISOLATION TRANSFORMER MUST BE USED. ALSO, IN ORDER TO HAVE THE ABILITY TO INCREASE THE INPUT SLOWLY, WHEN TROUBLESHOOTING THIS TYPE POWER SUPPLY CIRCUIT, A VARIABLE ISOLATION TRANSFORMER IS REQUIRED.

WF10 PIN 20 OF IC301

WF11 PIN 11 OF IC301

WF7 PIN 48 OF IC301

WF9 PIN 7 OF IC401

WF2 PIN 61 OF IC401

WF4 PIN 42 OF IC401

WF17 PIN 58 OF IC201

WF18 PIN 59 OF IC201

WF13 PIN 5 OF CN571

WF12 Q571 Collector

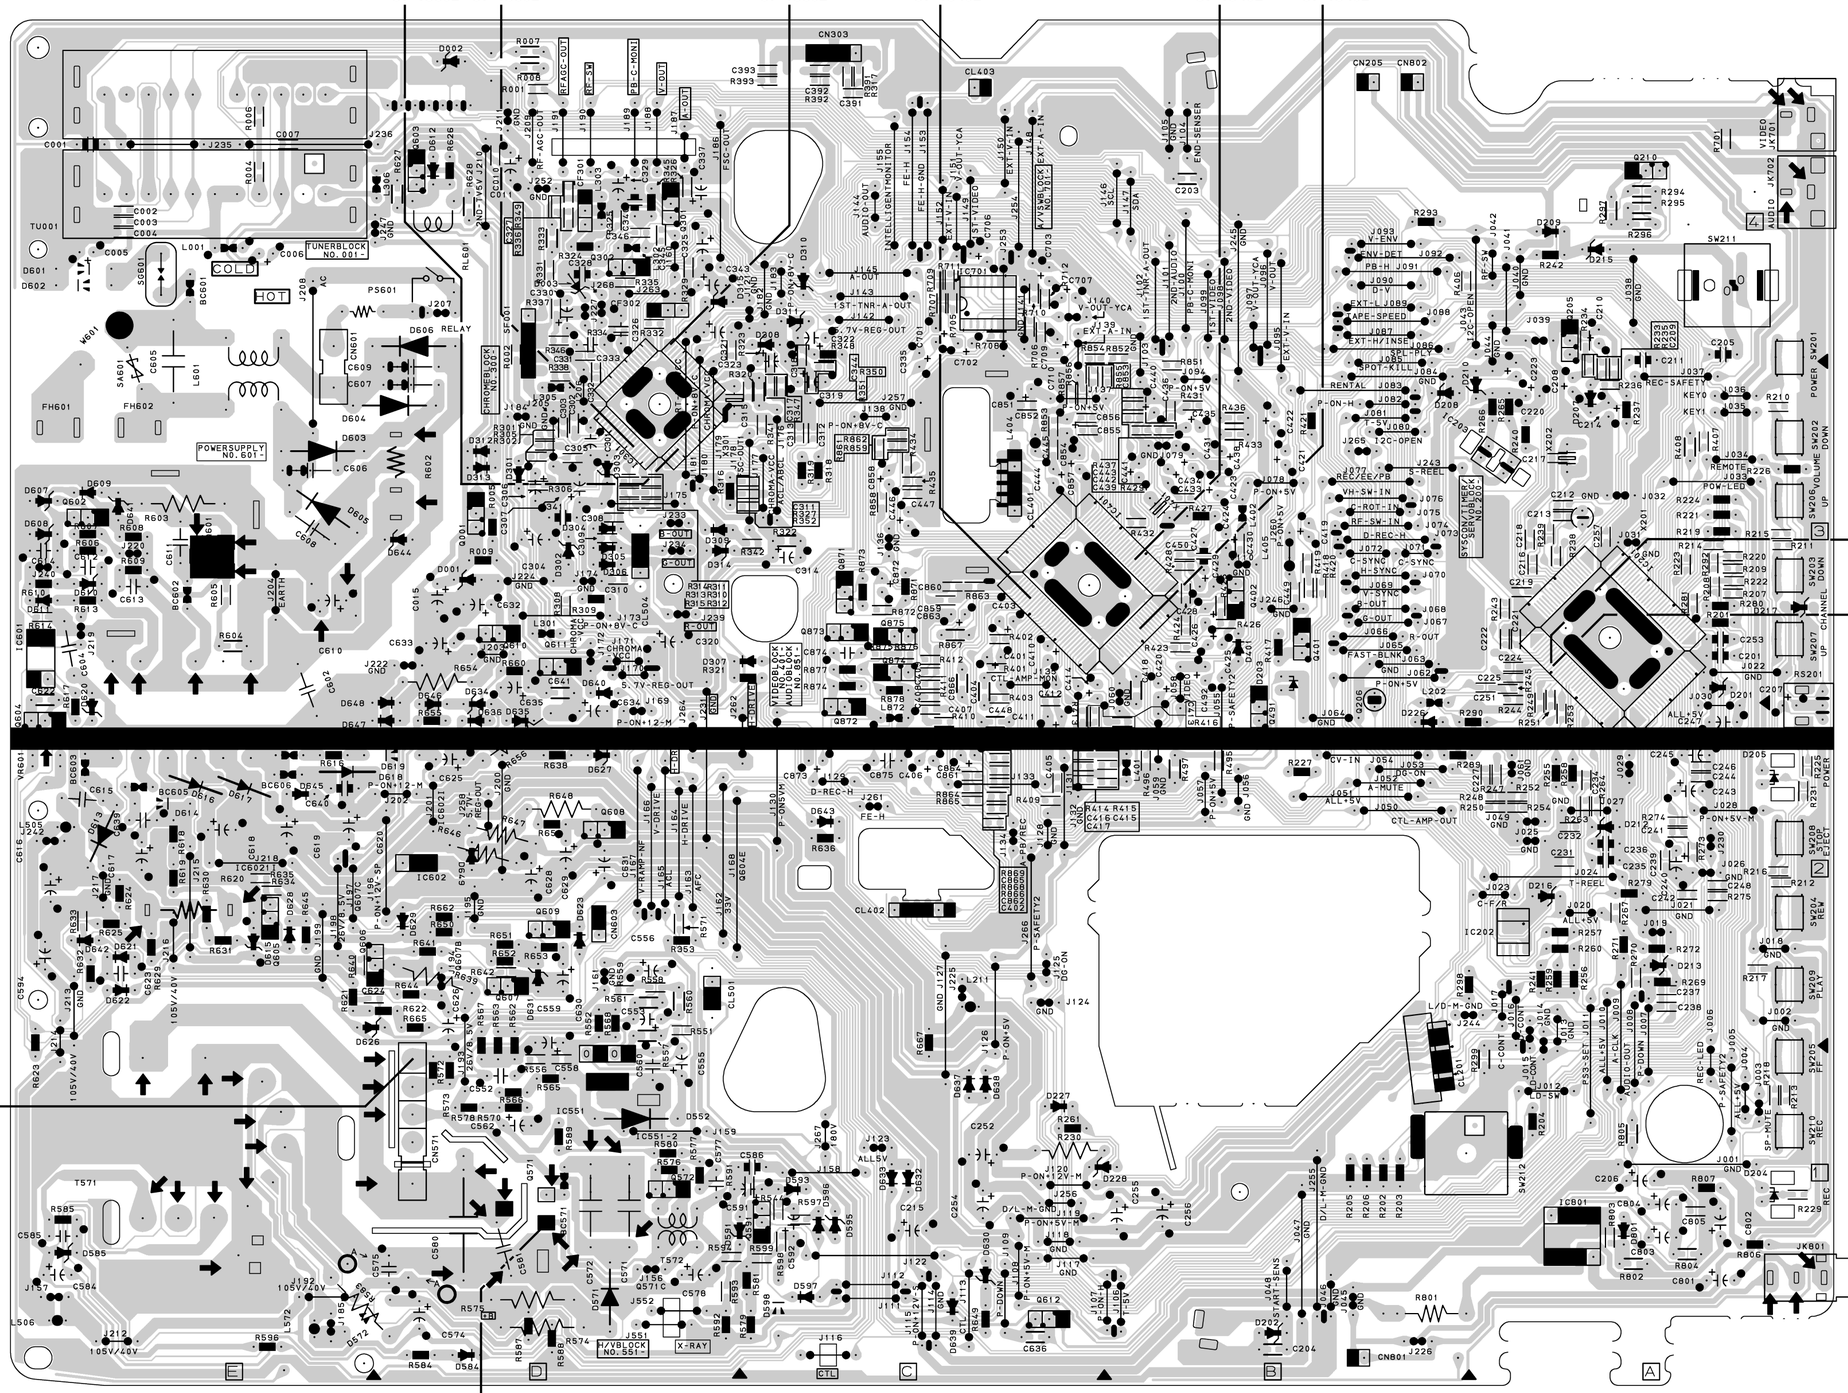

CRT CBA Top View

CRT CBA

Ref No.	Position
TRANSISTORS	
Q501	B-2
Q502	B-2
Q503	B-2
CONNECTORS	
CL501A	B-2
CL504A	B-2
CN501	A-1

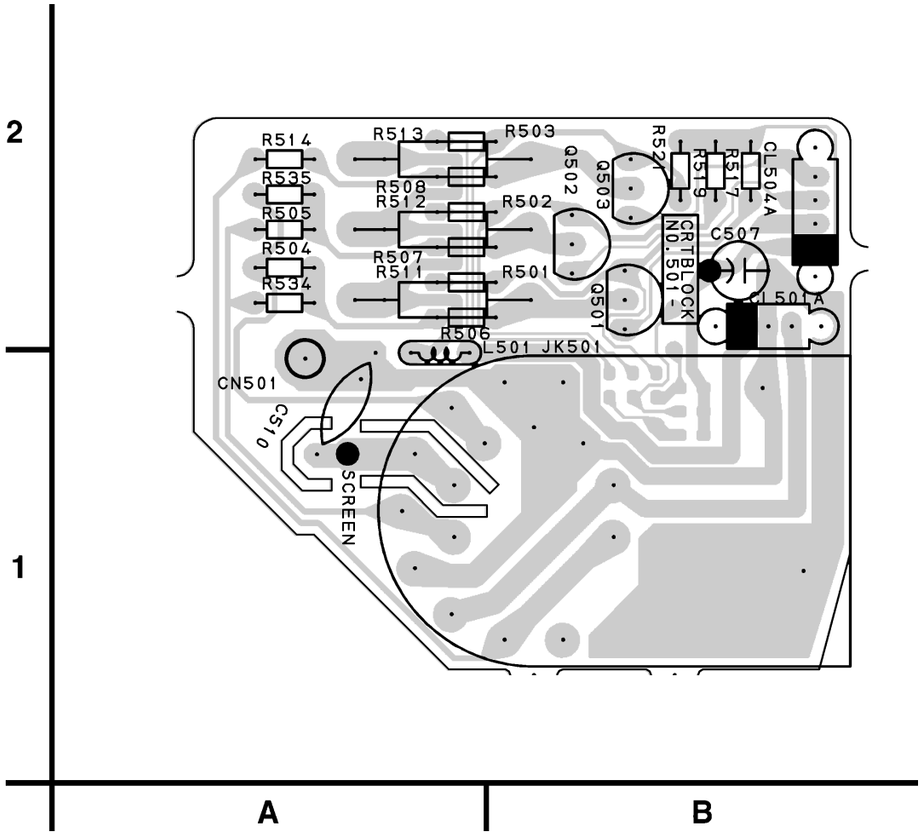

CRT CBA Bottom View

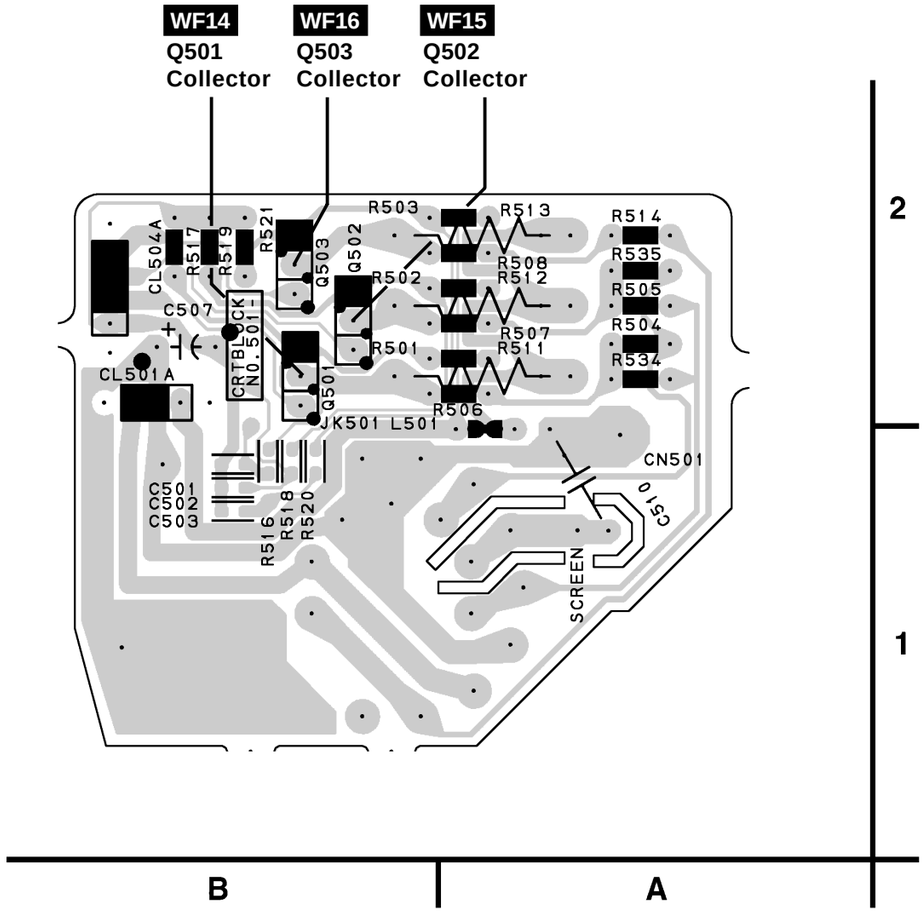

WAVEFORMS

WAVEFORM NOTES
INPUT: NTSC COLOR BAR SIGNAL
OTHER CONTROLS: CENTER POSITION
VOLTAGES SHOWN ARE RANGE OF OSCILLOSCOPE SETTING

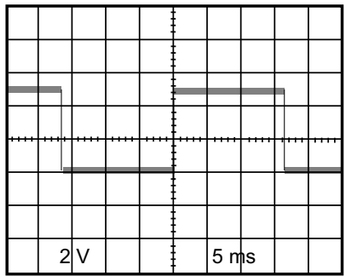

WF1 MAIN 2/4 SCHEMATIC DIAGRAM
J190 RF-SW

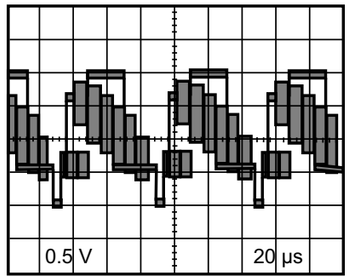

WF5 MAIN 2/4 SCHEMATIC DIAGRAM
J188 V-OUT

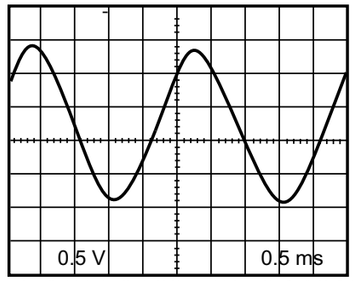

WF9 MAIN 2/4 SCHEMATIC DIAGRAM
IC401 PIN 7

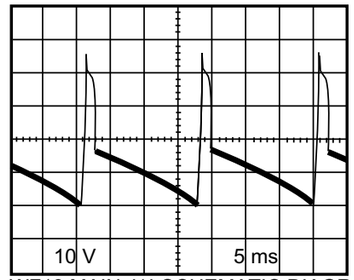

WF13 MAIN 4/4 SCHEMATIC DIAGRAM
CN571 PIN 5

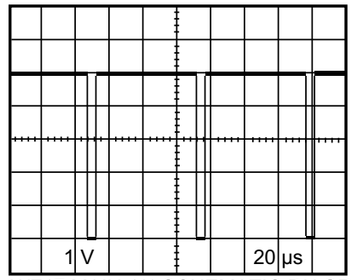

WF17 MAIN 1/4 SCHEMATIC DIAGRAM
IC201 PIN 58

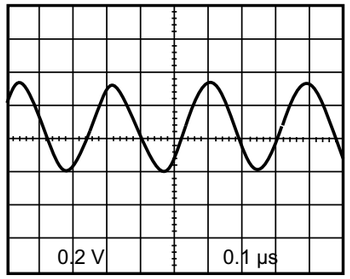

WF2 MAIN 2/4 SCHEMATIC DIAGRAM
IC401 PIN 61

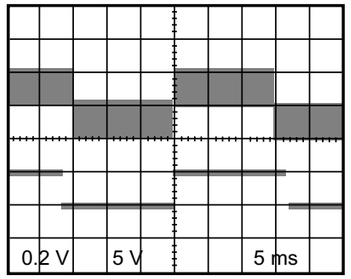

Upper: WF6 Lower: WF1
MAIN 2/4 SCHEMATIC DIAGRAM
J189 PB-C-MONI

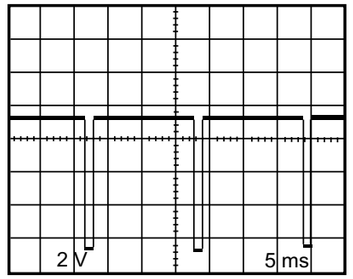

WF10 MAIN 3/4 SCHEMATIC DIAGRAM
IC301 PIN 20

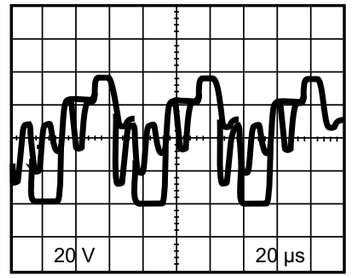

WF14 CRT SCHEMATIC DIAGRAM
Q501 COLLECTOR

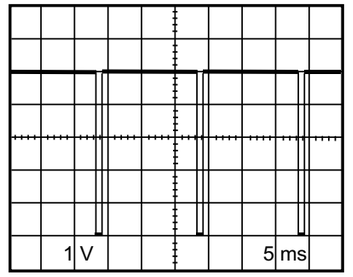

WF18 MAIN 1/4 SCHEMATIC DIAGRAM
IC201 PIN 59

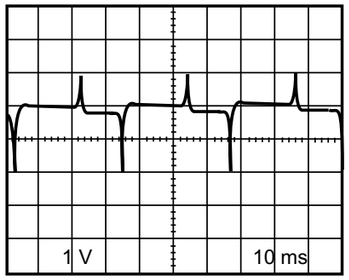

WF3 MAIN 1/4 SCHEMATIC DIAGRAM
J116 CTL

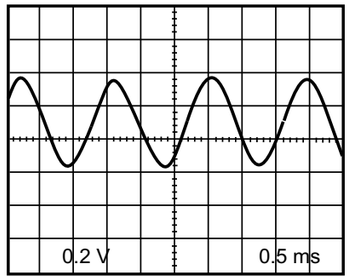

WF7 MAIN 3/4 SCHEMATIC DIAGRAM
IC301 PIN 48

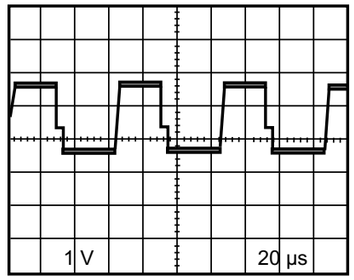

WF11 MAIN 3/4 SCHEMATIC DIAGRAM
IC301 PIN 11

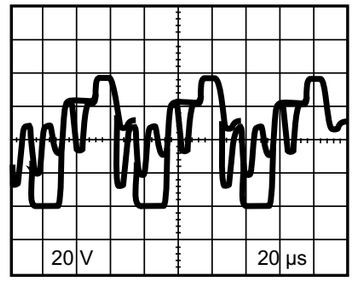

WF15 CRT SCHEMATIC DIAGRAM
Q502 COLLECTOR

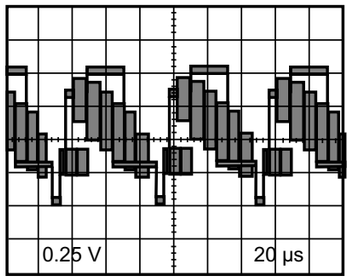

WF4 MAIN 2/4 SCHEMATIC DIAGRAM
IC401 PIN 42

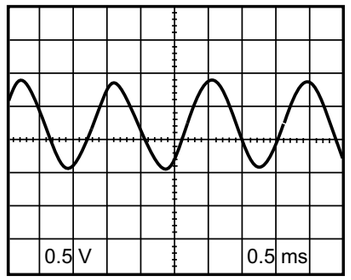

WF8 MAIN 2/4 SCHEMATIC DIAGRAM
J187 A-OUT

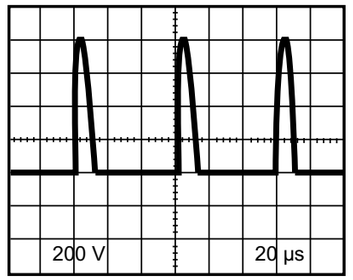

WF12 MAIN 4/4 SCHEMATIC DIAGRAM
Q571 COLLECTOR

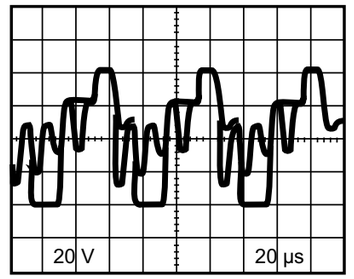

WF16 CRT SCHEMATIC DIAGRAM
Q503 COLLECTOR

WIRING DIAGRAM

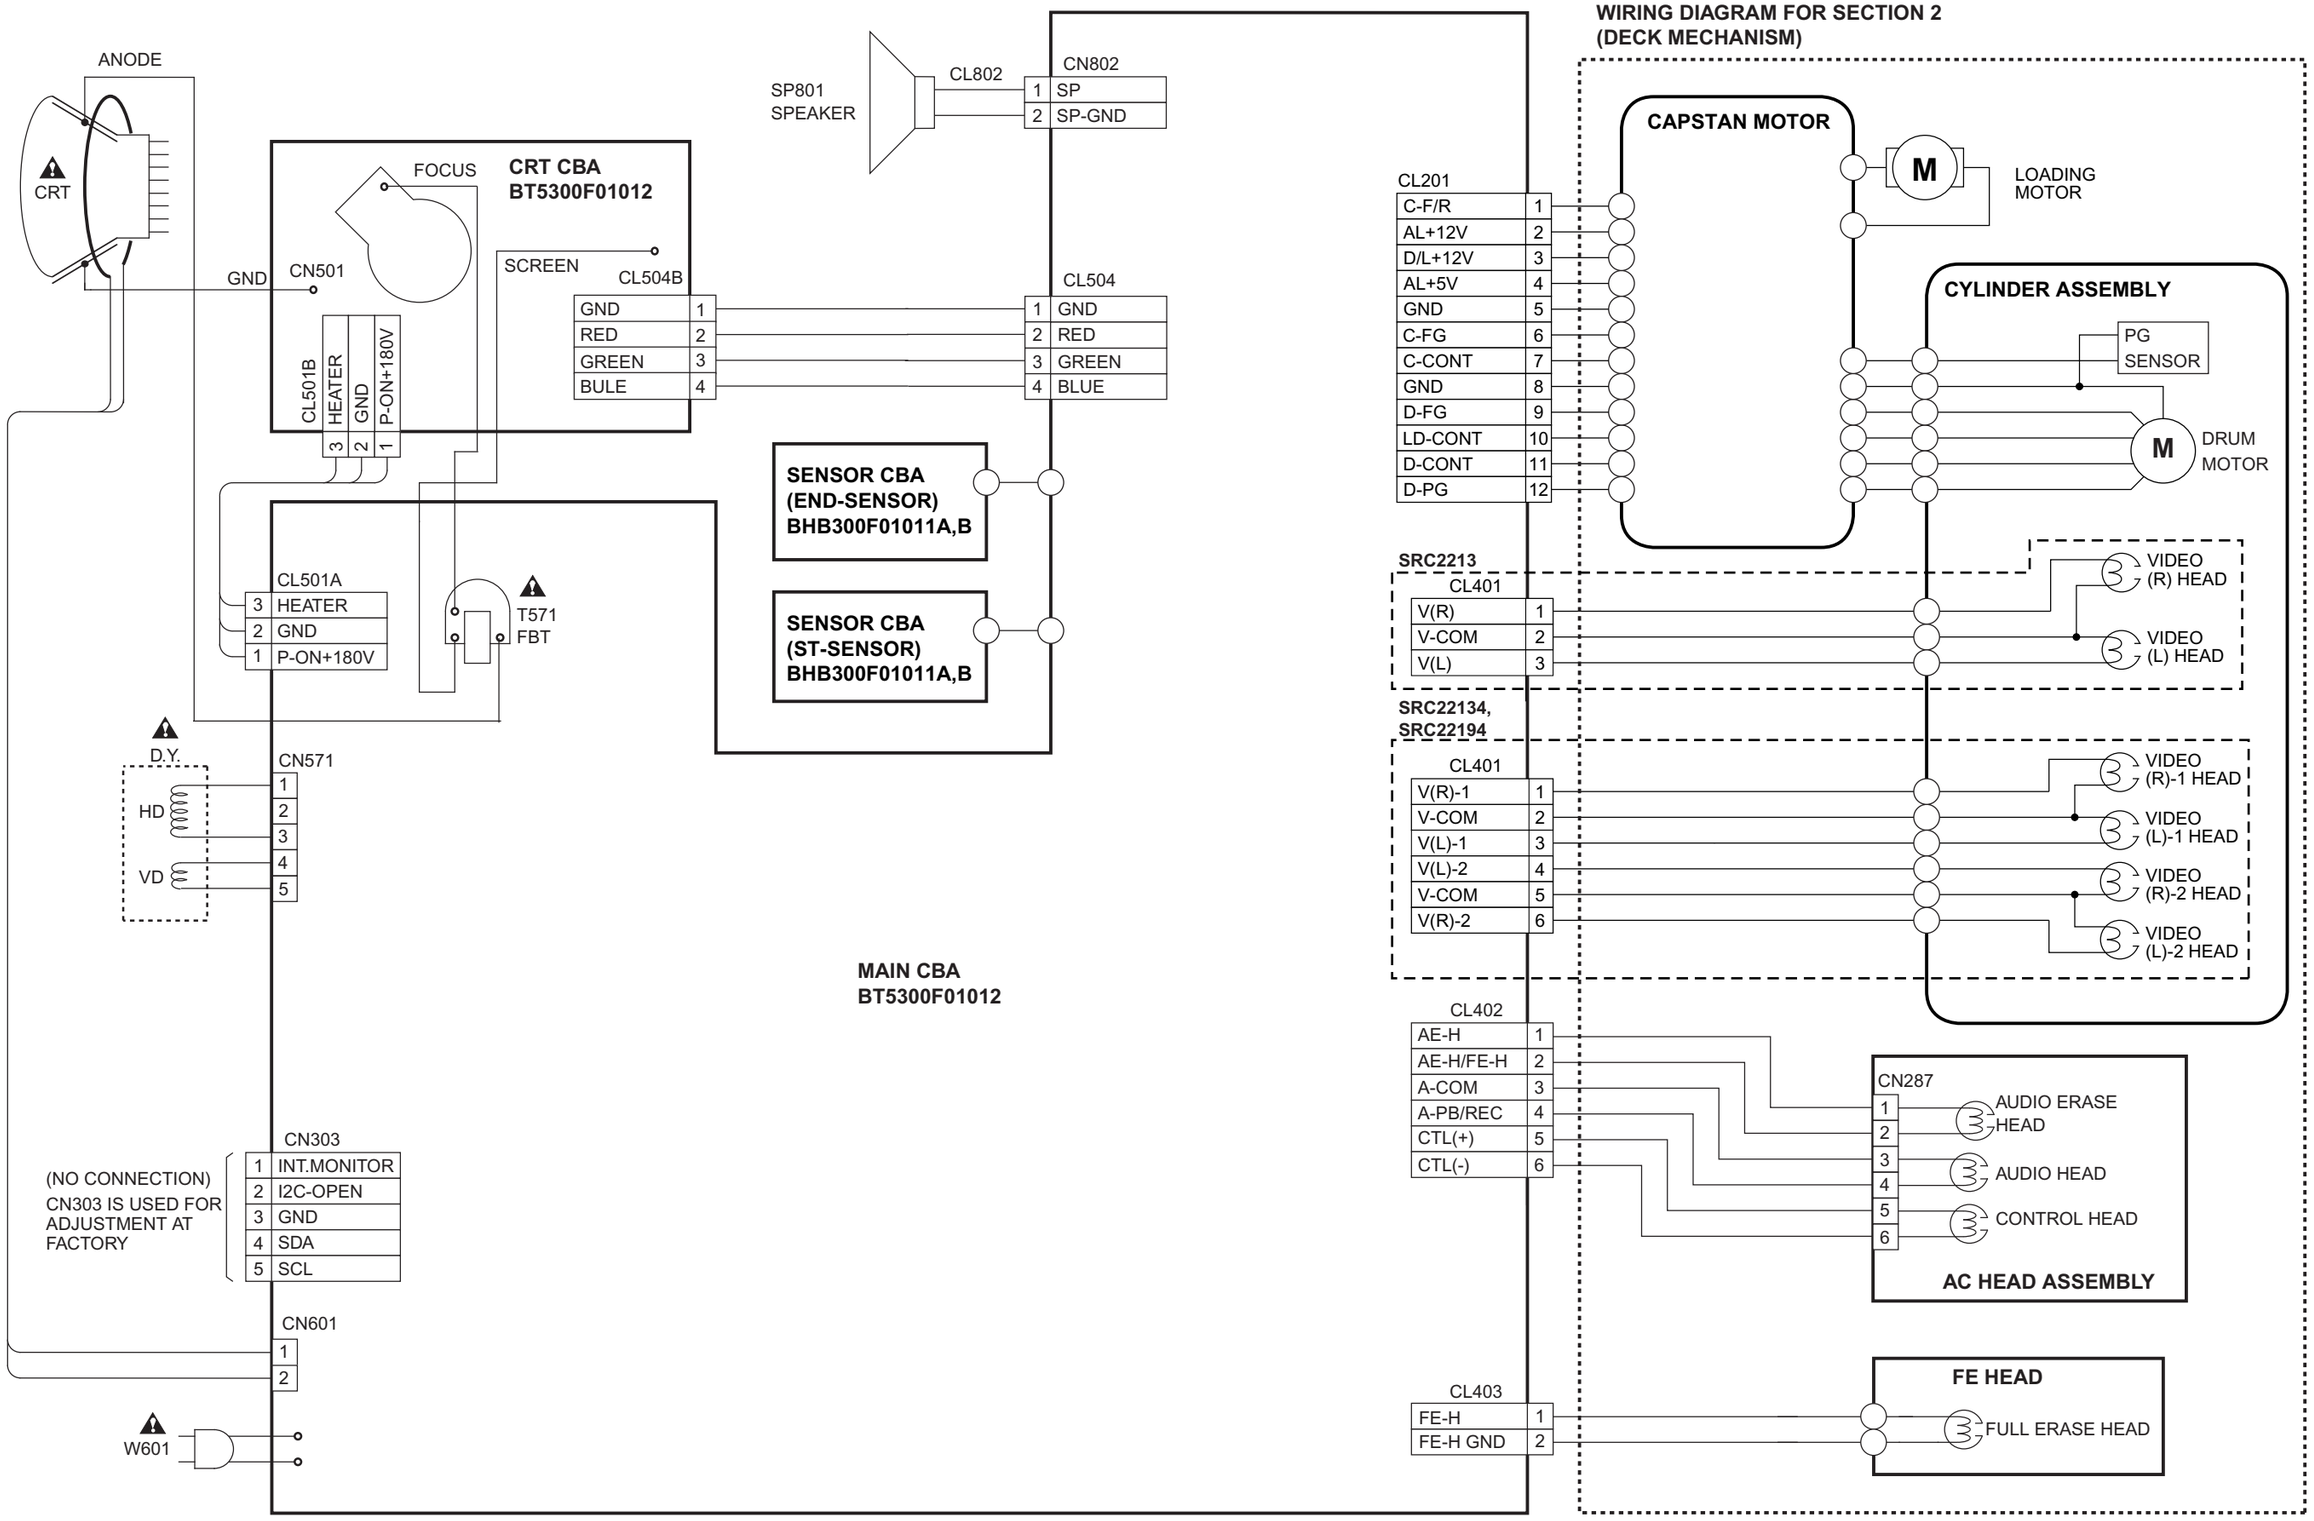

SYSTEM CONTROL TIMING CHARTS

[SRC2213]

Chart 1

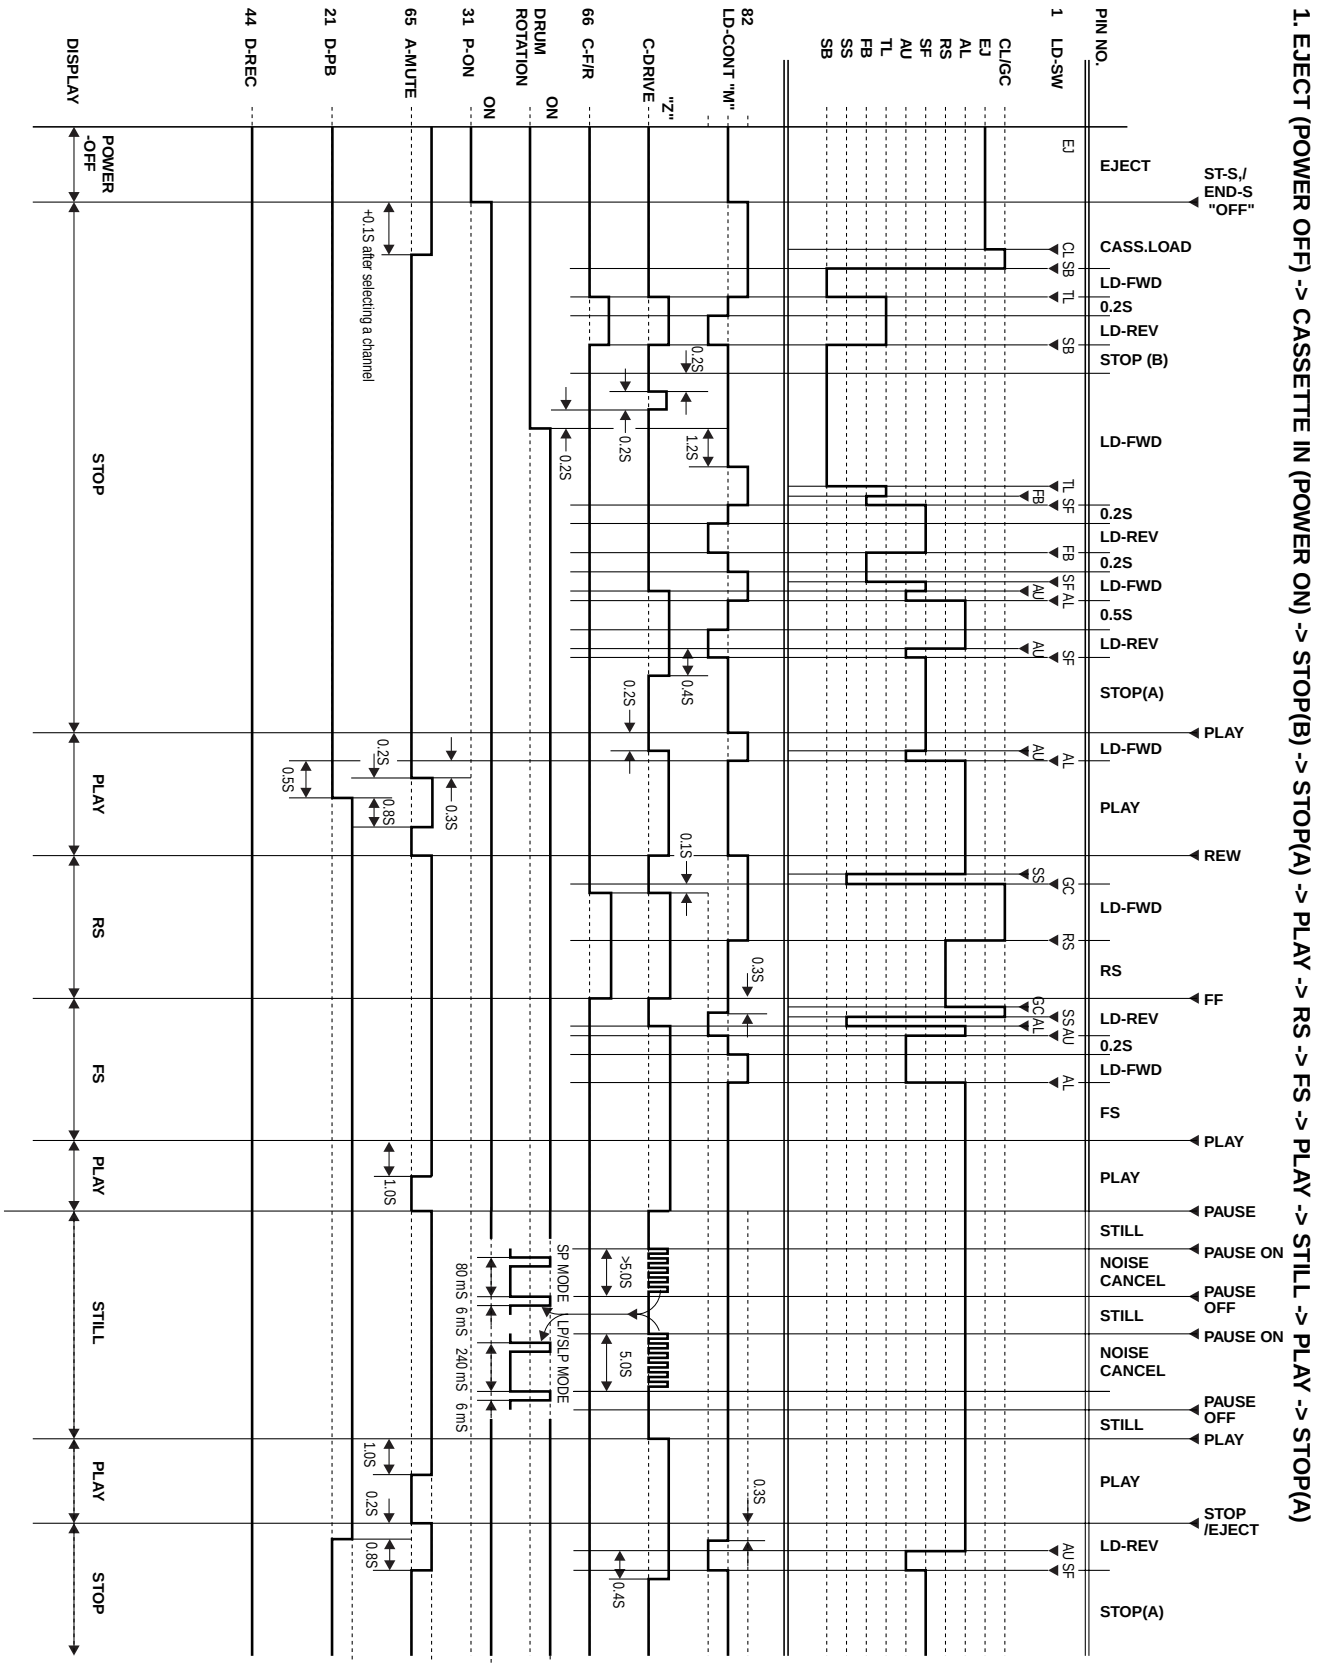

Fig. 1

Chart 2

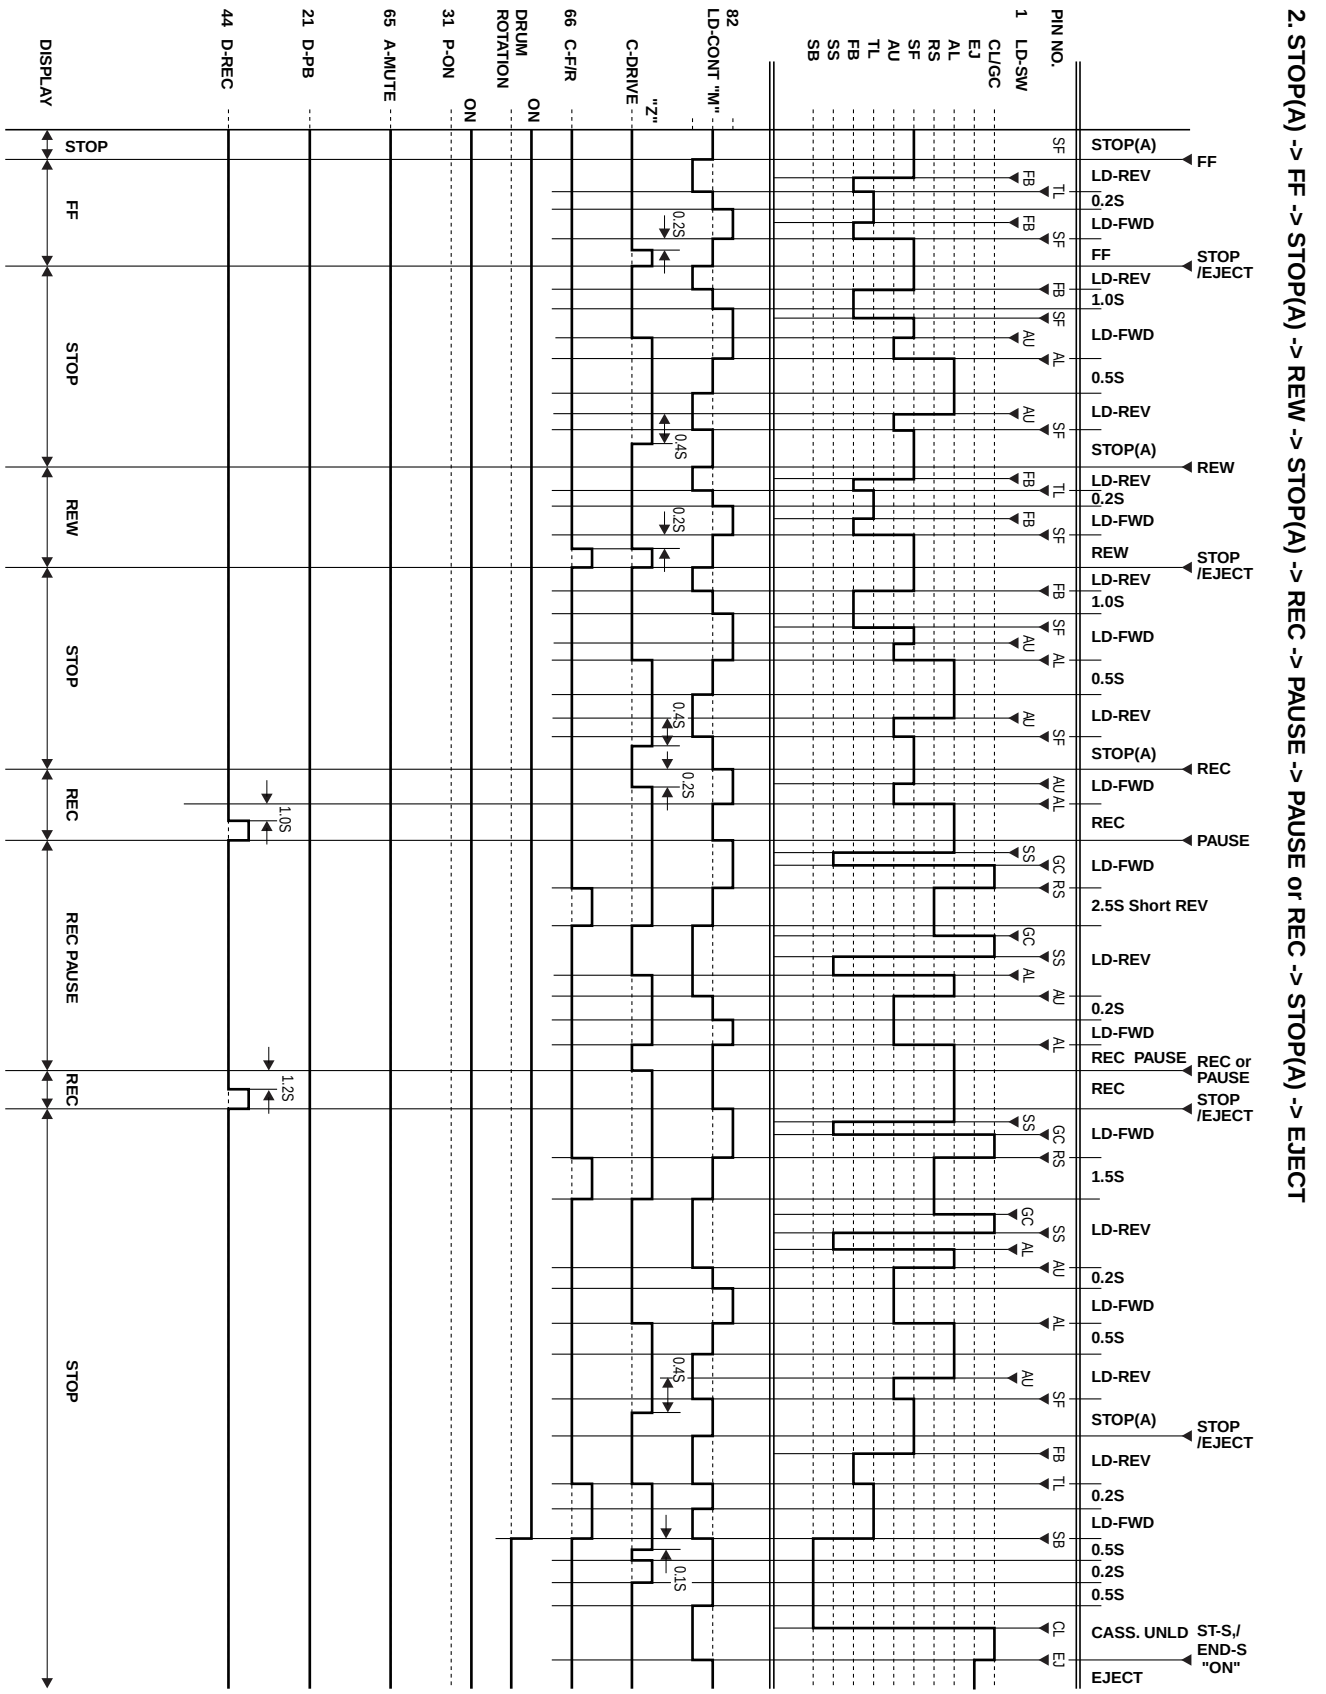
2. STOP(A) -> FF -> STOP(A) -> REW -> STOP(A) -> REC -> PAUSE -> PAUSE or REC -> STOP(A) -> EJECT
PIN NO.
1 LD-SW
CL/GC
EJ
AL
RS
SF
AU
TL
FB
SS
SB
82 LD-CONT "M"
"Z" C-DRIVE
66 C-F/R
DRUM ROTATION
ON
31 P-ON
65 A-MUTE
21 D-PB
44 D-REC
DISPLAY
STOP
FF
STOP
REW
STOP
REC
REC PAUSE
REC
STOP
STOP(A)
LD-REV
0.2S
LD-FWD
FF
LD-REV
1.0S
LD-FWD
0.5S
LD-REV
STOP(A)
LD-REV
0.2S
LD-FWD
REW
LD-REV
1.0S
LD-FWD
0.5S
LD-REV
STOP(A)
LD-FWD
REC
PAUSE
LD-FWD
2.5S Short REV
LD-REV
0.2S
LD-FWD
REC PAUSE
REC
LD-FWD
1.5S
LD-REV
0.2S
LD-FWD
0.5S
LD-REV
STOP(A)
LD-REV
0.2S
LD-FWD
0.5S
0.2S
0.5S
CASS. UNLD
EJECT
FF
STOP /EJECT
REW
STOP /EJECT
REC
PAUSE
REC or PAUSE
STOP /EJECT
STOP /EJECT
ST-S,/ END-S "ON"
0.2S
0.4S
0.2S
0.4S
0.2S
1.0S
1.2S
0.4S
0.1S

Fig. 2

Chart 3

1) SP MODE

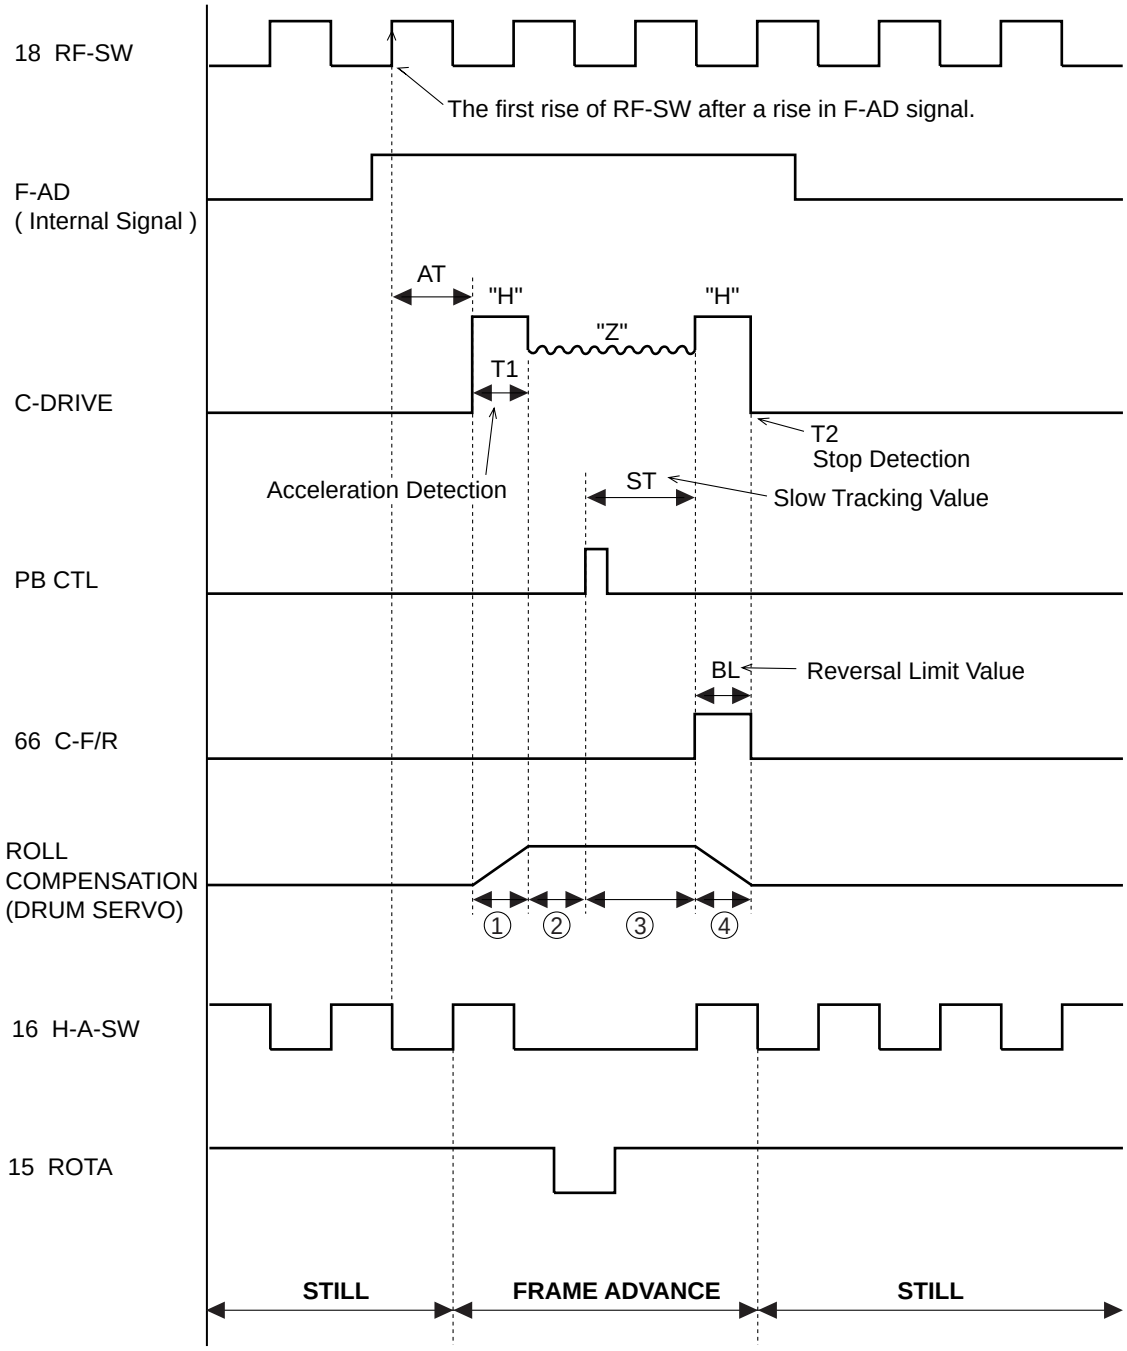

Fig. 3

Chart 4

2) LP/EP MODE

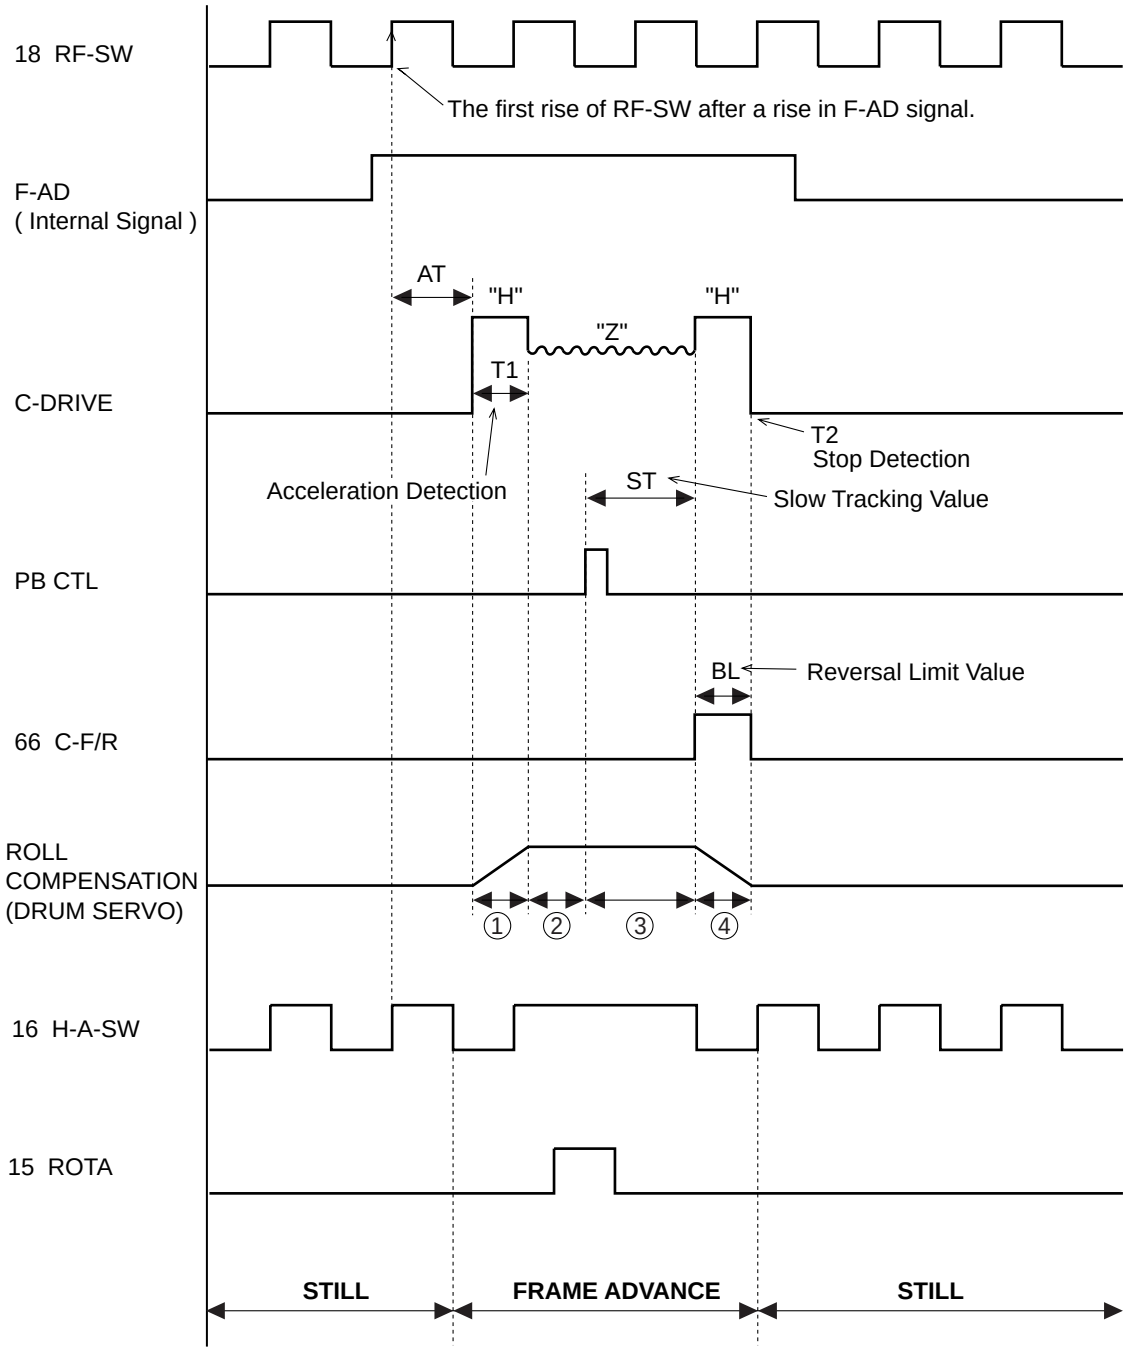

Fig. 4

Chart 5

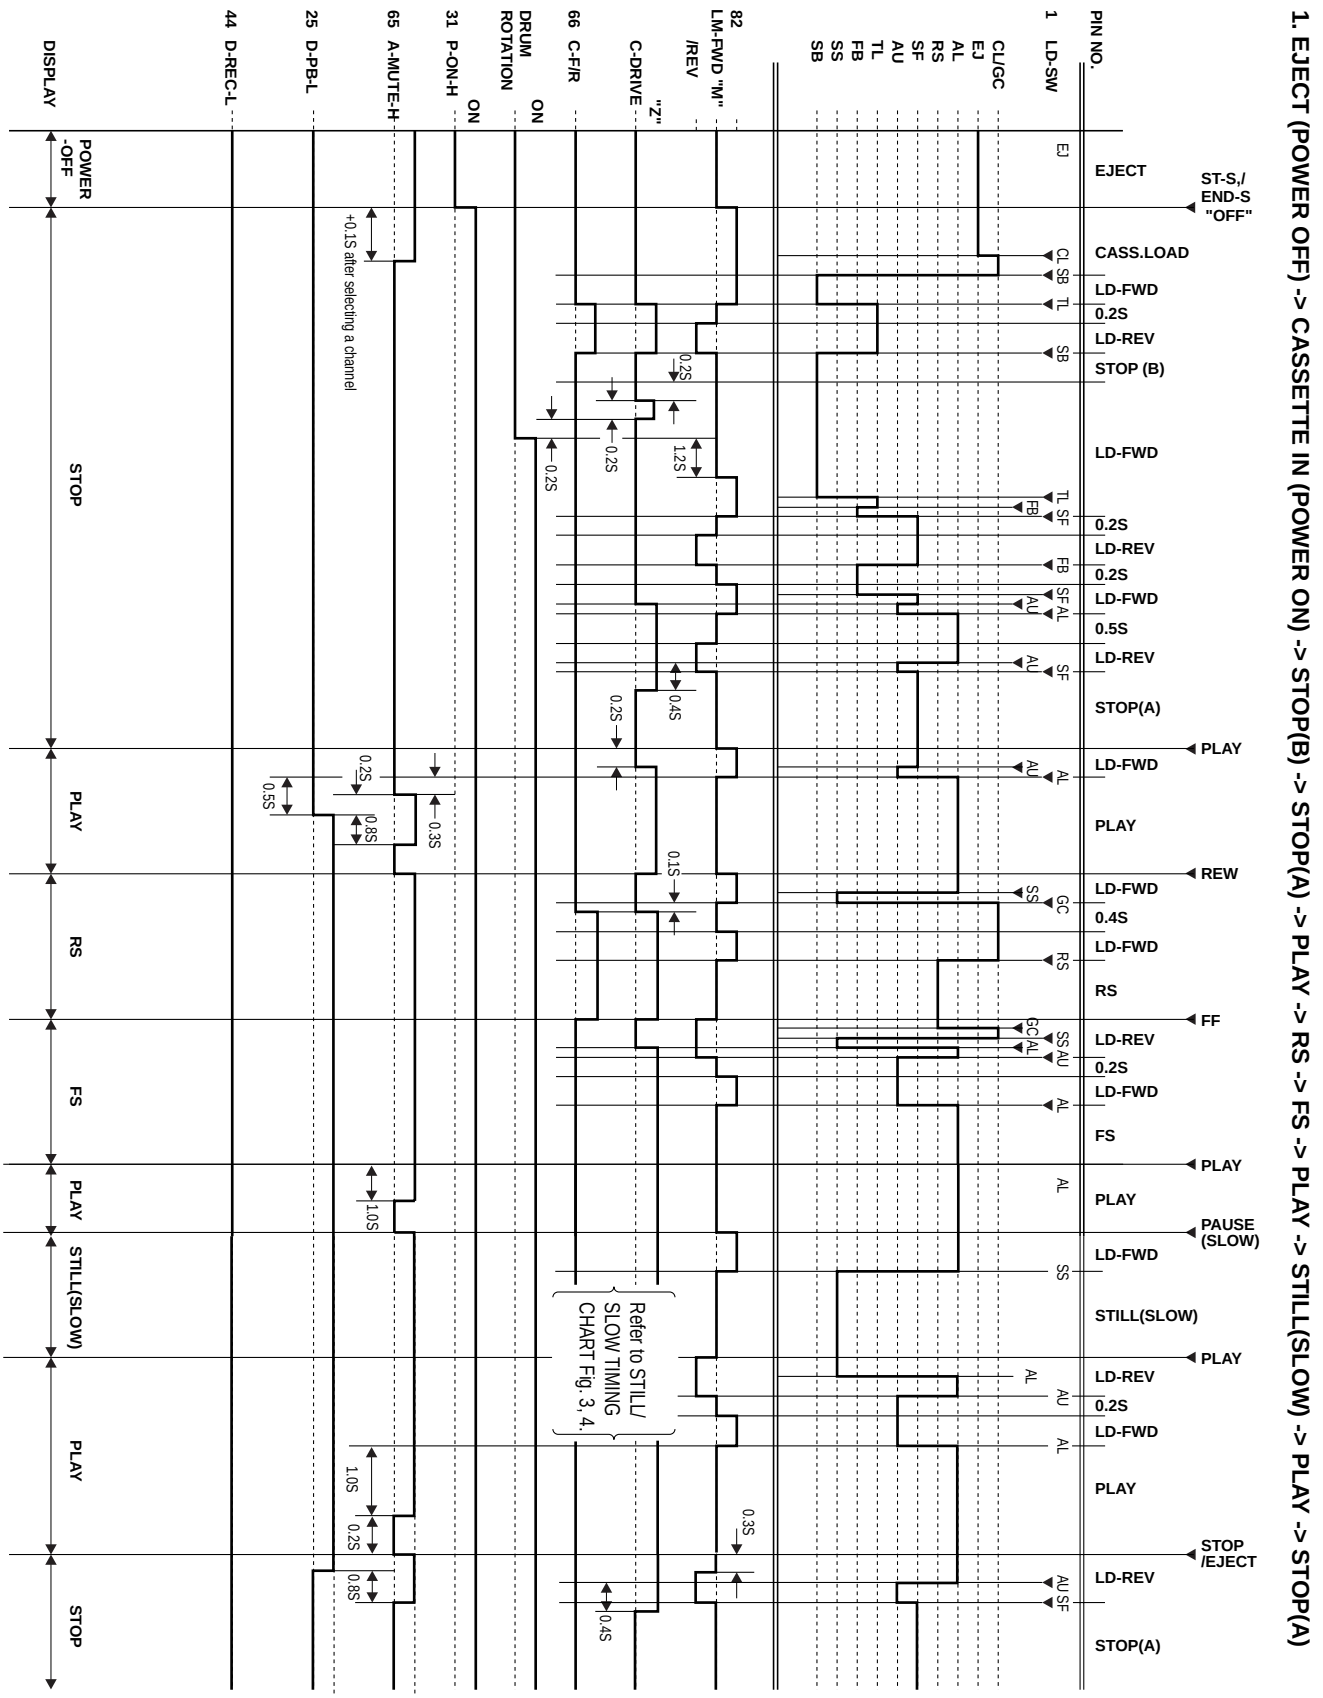
1. EJECT (POWER OFF) -> CASSETTE IN (POWER ON) -> STOP(B) -> STOP(A) -> PLAY -> RS -> FS -> PLAY -> STILL(SLOW) -> PLAY -> STOP(A)
PIN NO.
1 LD-SW
CL/GC
EJ
AL
RS
SF
AU
TL
FB
SS
SB
82 LM-FWD "M" /REV
C-DRIVE "Z"
66 C-F/R
DRUM ROTATION
31 P-ON-H
65 A-MUTE-H
25 D-PB-L
44 D-REC-L
DISPLAY
POWER -OFF
STOP
PLAY
RS
FS
PLAY
STILL(SLOW)
PLAY
STOP
EJECT
ST-S,/ END-S "OFF"
CASS.LOAD
LD-FWD
0.2S
LD-REV
STOP (B)
LD-FWD
0.2S
LD-REV
0.2S
LD-FWD
0.5S
LD-REV
STOP(A)
PLAY
LD-FWD
PLAY
REW
LD-FWD
0.4S
LD-FWD
RS
FF
LD-REV
0.2S
LD-FWD
FS
PLAY
PLAY
PAUSE (SLOW)
LD-FWD
STILL(SLOW)
PLAY
LD-REV
0.2S
LD-FWD
PLAY
STOP /EJECT
LD-REV
STOP(A)
+0.1S after selecting a channel
0.2S
1.2S
0.4S
0.1S
0.3S
1.0S
0.8S
0.5S
Refer to STILL/ SLOW TIMING CHART Fig. 3, 4.

Fig. 5

Chart 6

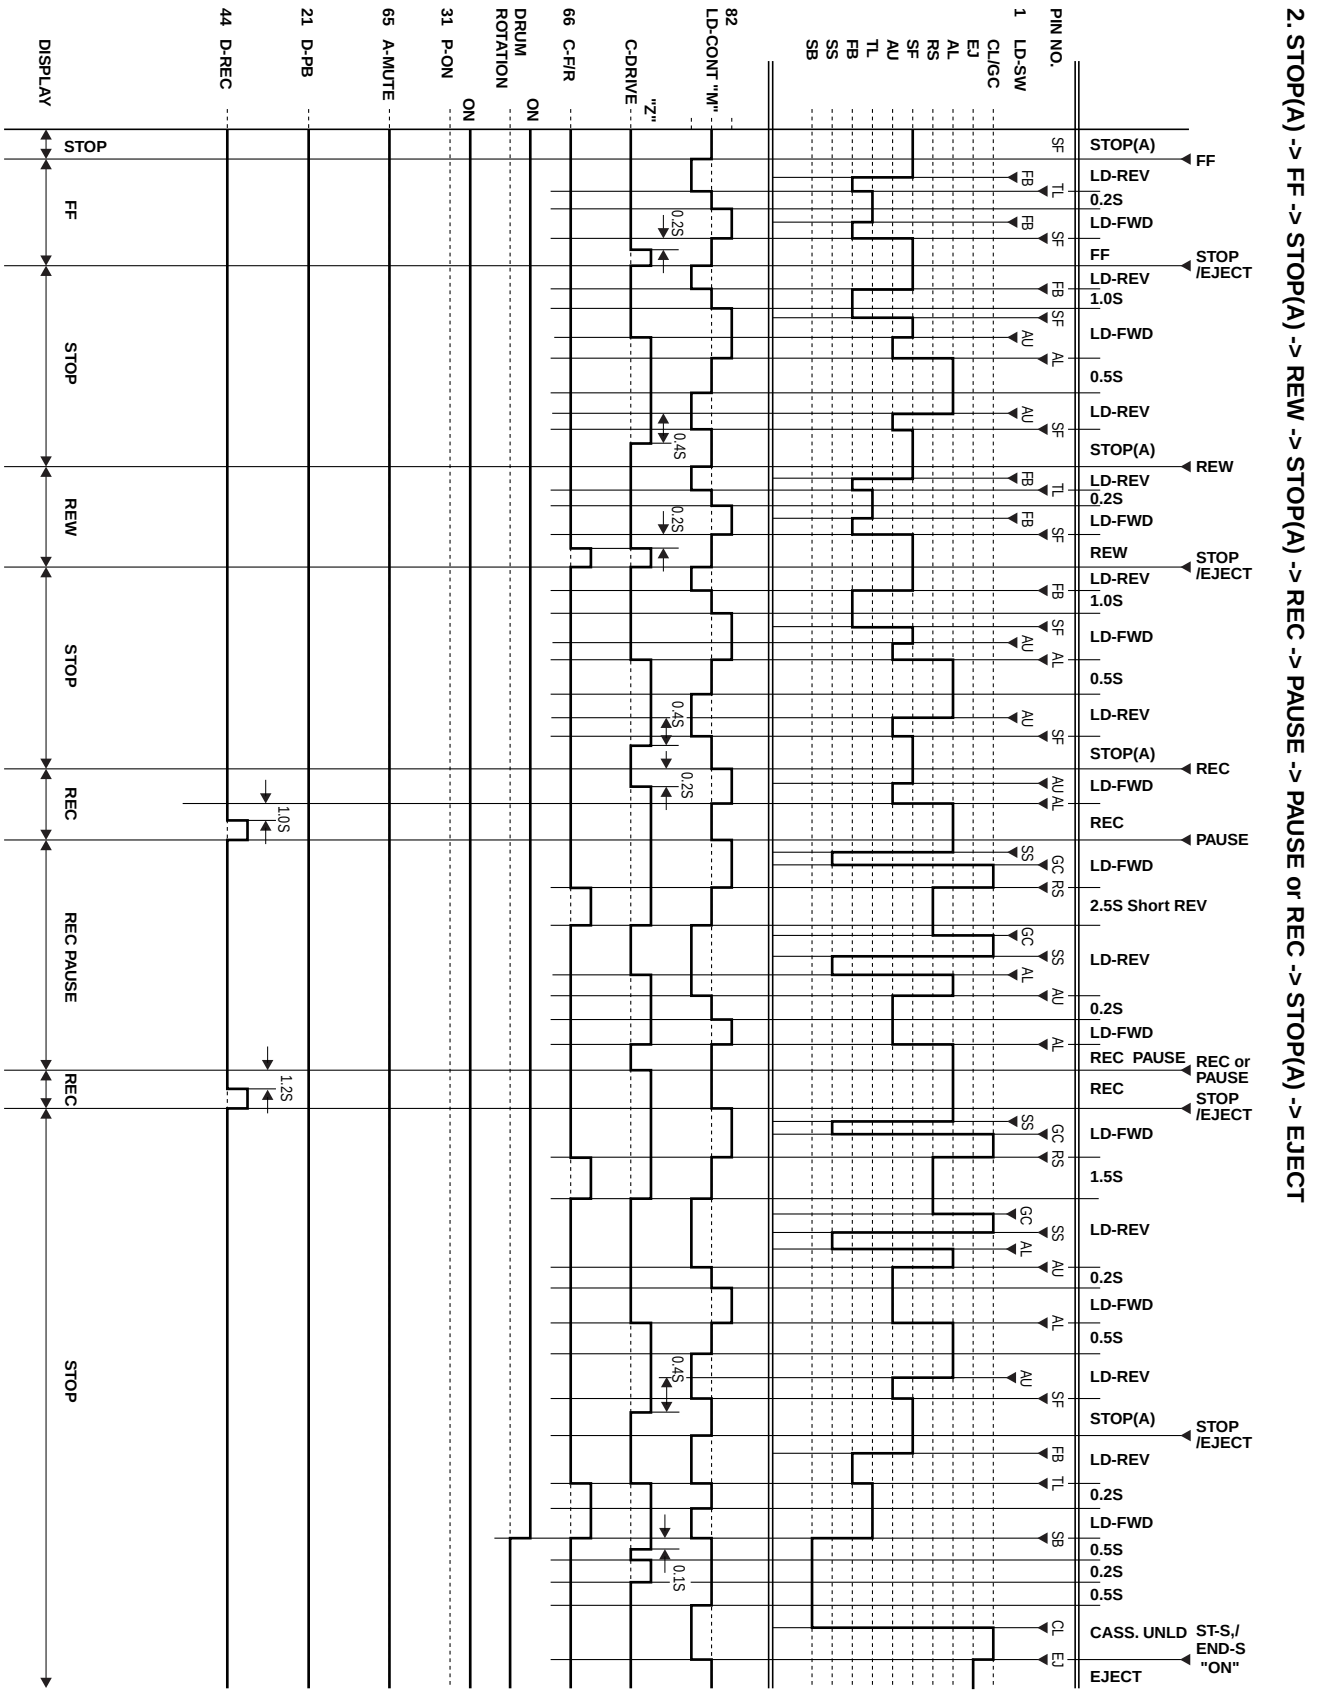
2. STOP(A) -> FF -> STOP(A) -> REW -> STOP(A) -> REC -> PAUSE -> PAUSE or REC -> STOP(A) -> EJECT
PIN NO.
1 LD-SW
CL/GC
EJ
AL
RS
SF
AU
TL
FB
SS
SB
82 LD-CONT "M"
"Z" C-DRIVE
66 C-F/R
DRUM ROTATION
31 P-ON
65 A-MUTE
21 D-PB
44 D-REC
DISPLAY
STOP(A)
FF
LD-REV
0.2S
LD-FWD
STOP /EJECT
1.0S
0.5S
REW
2.5S Short REV
REC
PAUSE
REC or PAUSE
1.5S
0.1S
CASS. UNLD
ST-S,/ END-S "ON"
EJECT
STOP
REC PAUSE

Fig. 6

IC PIN FUNCTION DESCRIPTIONS

IC 201 (TV/VCR Micro Computer)

"H" ≥ 4.5V, "L" ≤ 1.0V

Pin No.	IN/ OUT	Signal Name	Function
1	IN	LD-SW	Loading Switch Input
2	IN	P-SAFETY 1	Power Supply Failure Detection 1
3	IN	P-SAFETY 2	Power Supply Failure Detection 2
4	IN	P-SAFETY 3	Power Supply Failure Detection 3
5	IN	KEY0	Key 0 Input
6	IN	KEY1	Key 1 Input
7	IN	END-SENS	End-Sensor
8	-	NU	Not Used
9	IN	ST-SENS	Start-Sensor
10	IN	V-ENV	Video Envelope Input
11	-	NU	Not Used
12	OUT	SP-MUTE	Speaker Mute Output
13	IN/ OUT	D-V SYNC	Artificial V-Sync Output
14	IN	REMOTE	Remote Signal Input
15	OUT	ROTA	Color Phase Rotary Changeover SIgnal
16	[SRC2213]		
	-	NU	Not Used
	[SRC22134/SRC22194]		
	IN	V-H-SW	Video Head Amp Switching Pulse
17	[SRC2213]		
	-	NU	Not Used
	[SRC22134/SRC22194]		
	IN	ENV-DET	Head Amp Comparator Signal
18	OUT	RF-SW	Video Head Switching Pulse
19	-	NU	Not Used
20	OUT	EXT-L	External Input or Playback = Output
21	OUT	D-PB-H	Playback Output
22	OUT	REC-LED	Recording LED Control Signal
23	OUT	REC-LED	Recording LED Control Signal
24	-	NU	Not Used
25	-	NU	Not Used
26	-	NU	Not Used
27	IN/ OUT	REC/EE/PB	YCA IC Mode Output
28	IN/ OUT	TAPE-SPEED	Tape Speed Control Output
29	OUT	EXT-H/ INSEL	External Input or Playback SIgnal Output/Input Selector Control Signal
30	IN/ OUT	RENTAL	Rental Position Control Signal
31	OUT	P-ON-H	Power On Signal at High
32	OUT	SPL-PLAY	Special Playback Control Signal
33	IN	REC-SAFETY	Record Protection Tab Detection
34	IN	RESET	System Reset Signal (Reset="L")
35	IN	XC-IN	Sub Clock 32 kHz
36	OUT	XC-OUT	Sub Clock 32 kHz
37	-	TIMER+5V	Vcc
38	IN	X-IN	Main Clock Input
39	OUT	X-OUT	Main Clock Output
40	-	GND	GND
41	OUT	SPOT-KILL	Counter-measure for Spot
42	-	NU	Not Used
43	IN	CLKSEL	Clock Select (GND)
44	OUT	D-REC-H	Delayed Record Signal
45	IN	I2C-OPEN	White Balance Adjust Mode Judgment
46	-	GND	GND
47	-	NU	Not Used
48	-	NU	Not Used
49	-	GND	OSD GND
50	-	NU	Not Used
51	-	NU	Not Used
52	-	NU	Not Used
53	-	P-ON+5V	OSD Vcc

Pin No.	IN/ OUT	Signal Name	Function
54	-	HLF	HLF
55	IN	V-HOLD	VHOLD
56	IN	CV-IN	Video Signal Input
57	-	GND	GND
58	IN	H-SYNC	H-SYNC Input
59	IN	V-SYNC	V-SYNC Input
60	OUT	OSD-BLK	Output for Picture Cut off
61	-	NU	Not Used
62	OUT	OSD-B	Blue Output
63	OUT	OSD-G	Green Output
64	OUT	OSD-R	Red Output
65	OUT	A-MUTE	Audio Mute Output
66	OUT	C-F/R	Capstan Motor FWD/REV Control Signal
67	-	NU	Not Used
68	-	NU	Not Used
69	-	NU	Not Used
70	-	NU	Not Used
71	OUT	SCL	E2PROM/CHROMA IC Tuner Communication Clock
72	IN/ OUT	SDA	E2PROM/CHROMA IC Tuner Communication Data
73	-	NU	Not Used
74	IN	C-SYNC	C-Sync Input
75	-	NU	Not Used
76	OUT	C-CONT	Capstan Motor Control Signal
77	OUT	D-CONT	Drum Motor Control Signal
78	OUT	ACL-CONT	ACL Control Signal
79	-	NU	Not Used
80	IN	T-REEL	Take Up Reel Rotation Signal
81	-	NU	Not Used
82	OUT	LD-CONT	Loading Motor Control Signal
83	-	NU	Not Used
84	OUT	P-DOWN	Power Voltage Down Detector Signal
85	-	NU	Not Used
86	-	NU	Not Used

Pin No.	IN/ OUT	Signal Name	Function
87	IN	C-FG	Capstan Motor Rotation Detection Pulse
88	-	GND	GND (AMP)
89	IN	D-FG	Drum Motor Rotation Detection Pulse
90	IN	D-PG	Drum Motor Pulse Generator
91	-	NU	Not Used
92	OUT	AMP VREF OUT	Standard Voltage Output
93	IN	AMP VREF IN	Standard Voltage Input
94	IN/ OUT	CTL (-)	CTL (-)
95	IN/ OUT	CTL (+)	CTL (+)
96	-	AMPC	AMPC
97	OUT	CTL AMP OUT	Control Amp Output
98	-	P-ON+5V	Power Supply for AMP
99	-	AL+5V	A/D, D/A Standard Voltage
100	IN	X-RAY	X-Ray Protection

LEAD IDENTIFICATIONS

2SK2662



S: Souce
D: Drain
G: Gate

S D G

2SD2627LS-FEC-YB11
TT2084LS-YB11



E: Emitter
C: Collector
B: Base

B C E

PT204-6B-12
MID-32A22



C

E

2SD400(F)



E C B

LA78040A
AN5522



IN G OUT



KRA103M
2SA1346
2SC1815-GR(TPE2)
2SC3331(T,U)
2SC2120-(O,Y)(TPE2)
KTC3203(Y)
KTA1266(GR)

E C B



2SC1627Y-TPE2
2SA950(Y,O)
KTA1271(Y)
2SC2482 TPE6
2SC3468(E,D)-AE
KTC3207
2SA1175(F)
KTA1267(GR)
KTC3198(GR)

BN1F4M-T
KTC3199(GR)
2SC2785(J,H,F)
2SA1015-GR(TPE2)

E C B

KIA7805API
KA7805A
AN7805F



IN G OUT

LTV-817(B,C)-F
PC817X6

M37760M8H8C8GP
M37760M8H1D8GP
LA71091M

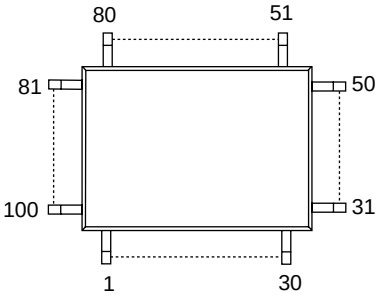

BR24C02F-W
BR24C02F
AT24C02N-10SC
M24C02-MN6

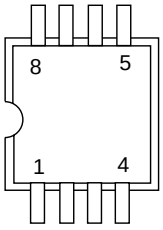

LA4224

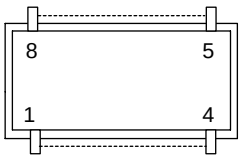

M61210FP-R60*
M61210FP-R61
M61210FP-R62*

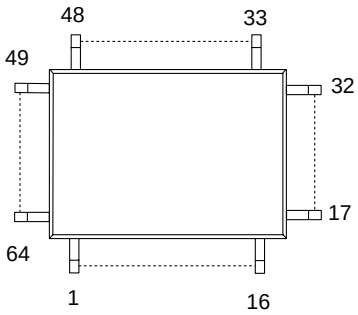

DECK MECHANISM SECTION

13"/19" COLOR TV/VCR COMBINATION

SRC2213/SRC22134/SRC22194

Sec. 2: Deck Mechanism Section

- **Standard Maintenance**
- **Alignment for Mechanism**
- **Disassembly/Assembly of Mechanism**
- **Alignment Procedures of Mechanism**

TABLE OF CONTENTS

Standard Maintenance 2-1-1
Service Fixtures and Tools 2-2-1
Mechanical Alignment Procedure 2-3-1
Disassembly / Assembly Procedures of Deck Mechanism 2-4-1
Alignment Procedures of Mechanism 2-4-9

STANDARD MAINTENANCE

Service Schedule of Components

H: Hours ❍: Check ●: Change

Deck		Periodic Service Schedule			
Ref.No.	**Part Name**	**1,000 H**	**2,000 H**	**3,000 H**	**4,000 H**
B2	Cylinder Assembly	❍	●	❍	●
B3	Loading Motor Assembly			●	
B8	Pulley Assembly		●		●
B27	Tension Lever Sub Assembly		●		●
B31	AC Head Assembly			●	
B573,B574	Reel S, Reel T			●	
B37	Capstan Motor		●		●
B52	Cap Belt		●		●
*B73	FE Head			●	
B133	Idler Assembly		●		●
B410	Pinch Arm (A) Assembly		●		●
B414	M Brake S Assembly		●		●
B416	M Brake T Assembly		●		●
B525	LDG Belt		●		●

Notes:

1. Clean all parts for the tape transport (Upper Drum with Video Head / Pinch Roller / Audio Control Head / Full Erase Head) using 90% lsopropyl Alcohol.
2. After cleaning the parts, do all DECK ADJUSTMENTS.
3. For the reference numbers listed above, refer to Deck Exploded Views.

   * B73 ------ Recording Model only

Cleaning

Cleaning of Video Head

Clean the head with a head cleaning stick or chamois cloth.

Procedure

1. Remove the top cabinet.
2. Put on a glove (thin type) to avoid touching the upper and lower drum with your bare hand.
3. Put a few drops of 90% Isopropyl alcohol on the head cleaning stick or on the chamois cloth and, by slightly pressing it against the head tip, turn the upper drum to the right and to the left.

Notes:

1. The video head surface is made of very hard material, but since it is very thin, avoid cleaning it vertically.
2. Wait for the cleaned part to dry thoroughly before operating the unit.
3. Do not reuse a stained head cleaning stick or a stained chamois cloth.

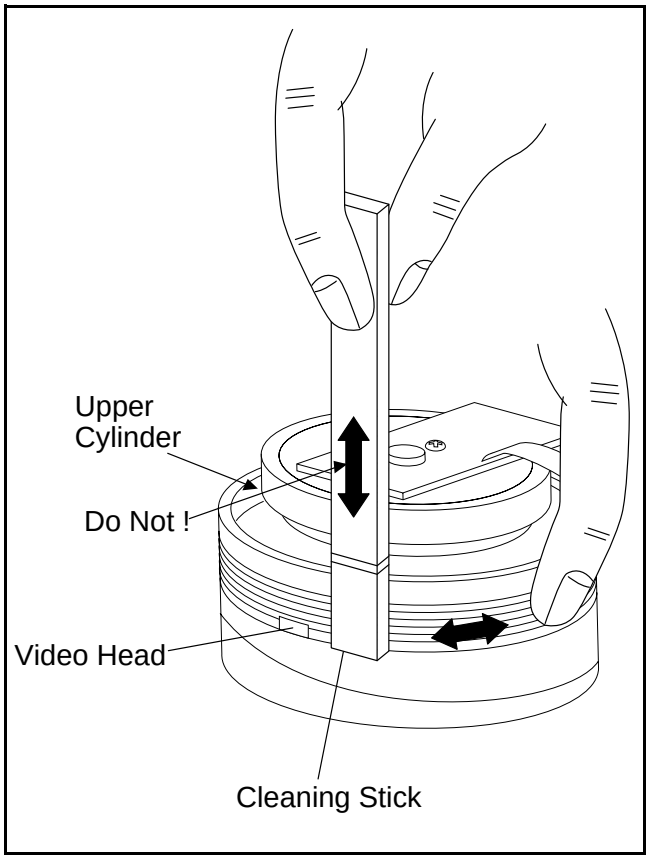

Cleaning of Audio Control Head

Clean the head with a cotton swab.

Procedure

1. Remove the top cabinet.
2. Dip the cotton swab in 90% isopropyl alcohol and clean the audio control head. Be careful not to damage the upper drum and other tape running parts.

Notes:

1. Avoid cleaning the audio control head vertically.
2. Wait for the cleaned part to dry thoroughly before operating the unit or damage may occur.

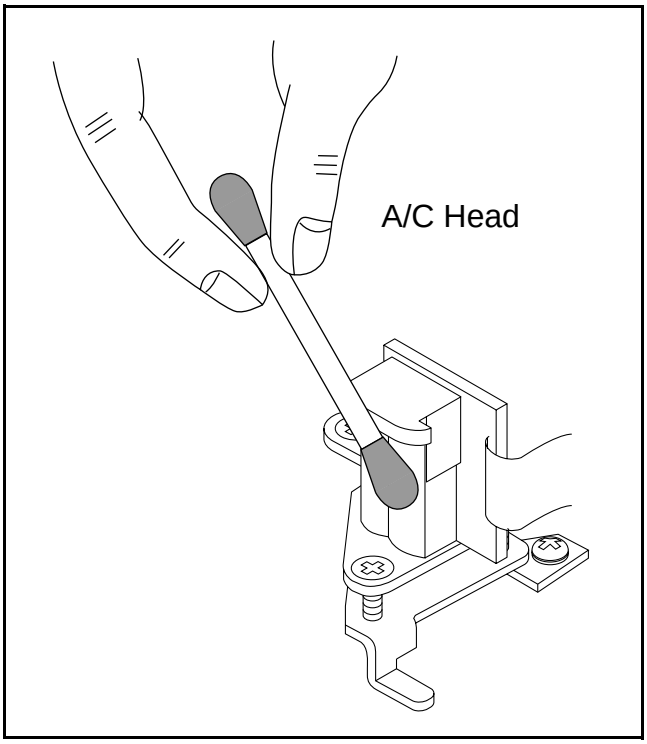

SERVICE FIXTURE AND TOOLS

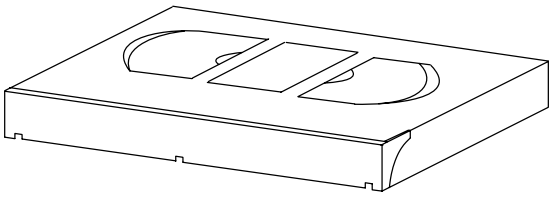

J-1-1, J-1-2

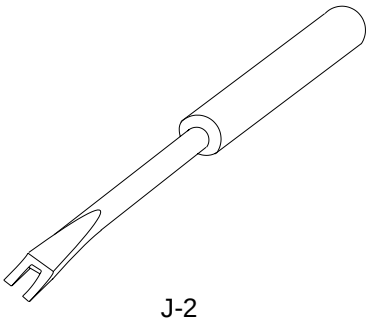

J-2

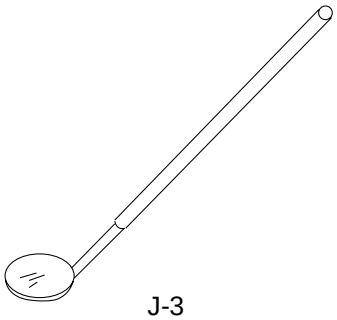

J-3

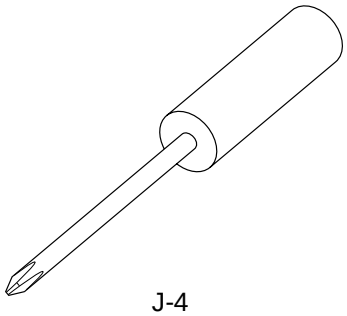

J-4

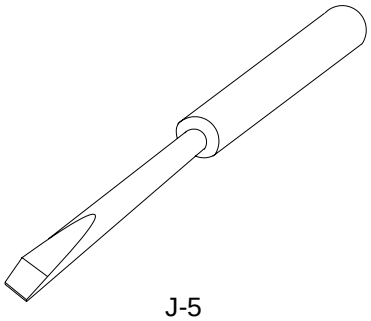

J-5

Ref. No.	Name	Part No.	Adjustment
J-1-1	Alignment Tape	FL8A	Head Adjustment of Audio Control Head
J-1-2	Alignment Tape	FL8N (2Head only) FL8NW (4Head only)	Azimuth and X Value Adjustment of Audio Control Head / Adjustment of Envelope Waveform
J-2	Guide Roller Adj.Screwdriver	Available Locally	Guide Roller
J-3	Mirror	Available Locally	Tape Transportation Check
J-4	Azimuth Adj.Screwdriver +	Available Locally	A/C Head Height
J-5	X Value Adj.Screwdriver -	Available Locally	X Value

MECHANICAL ALIGNMENT PROCEDURES

Explanation of alignment for the tape to correctly run starts on the next page. Refer to the information below on this page if a tape gets stuck, for example, in the mechanism due to some electrical trouble of the unit.

Service Information

A. Method for Manual Tape Loading/Unloading

To load a cassette tape manually:

1. Disconnect the AC plug.
2. Remove the Top Case and Front Assembly.
3. Insert a cassette tape. Though the tape will not be automatically loaded, make sure that the cassette tape is all the way in at the inlet of the Cassette Holder. To confirm this, lightly push the cassette tape further in and see if the tape comes back out, by a spring motion, just as much as you have pushed in.
4. Turn the LDG Belt in the appropriate direction shown in Fig. M1 for a minute or two to complete this task.

To unload a cassette tape manually:

1. Disconnect the AC plug.
2. Remove the Top Case and Front Assembly.
3. Make sure that the Moving guide preparations are in the Eject Position.
4. Turn the LDG Belt in the appropriate direction shown in Fig. M1 until the Moving guide preparations come to the Eject Position. Stop turning when the preparations begin clicking or can not be moved further. However, the tape will be left wound around the cylinder.
5. Turn the LDG Belt in the appropriate direction continuously, and the cassette tape will be ejected. Allow a minute or two to complete this task.

B. Method to place the Cassette Holder in the tape-loaded position without a cassette tape

1. Disconnect the AC Plug.
2. Remove the Top Case and Front Assembly.
3. Turn the LDG Belt in the appropriate direction shown in Fig. M1. Release the locking tabs shown in Fig. M1 and continue turning the LDG Belt until the Cassette Holder comes to the tape-loaded position. Allow a minute or two to complete this task.

Top View

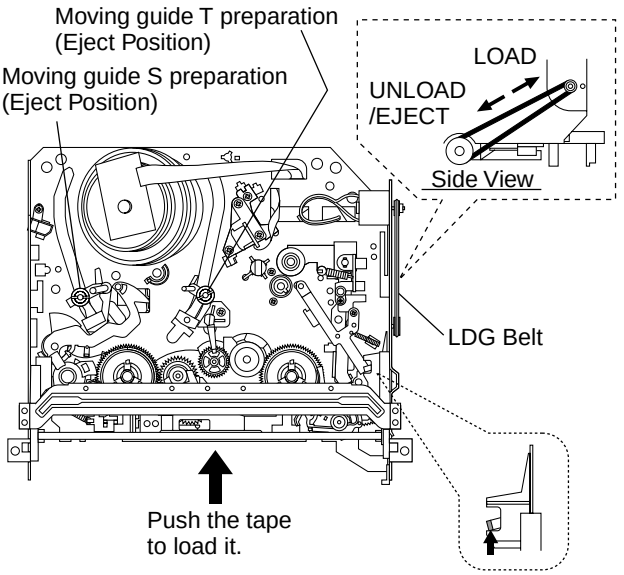

Fig. M1

Bottom View

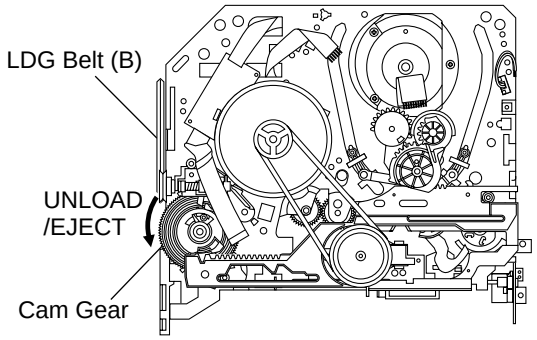

Fig. M2

1.Tape Interchangeability Alignment

Note:
To do these alignment procedures, make sure that the Tracking Control Circuit is set to the center position every time a tape is loaded or unloaded. (Refer to page 2-3-4, procedure 1-C, step 2.)

Equipment required:

Dual Trace Oscilloscope

VHS Alignment Tape (FL8N---[SRC2213], FL8NW---[SRC22134/SRC22194])

Guide Roller Adj. Screwdriver

X-Value Adj. Screwdriver

Note: Before starting this Mechanical Alignment, do all Electrical Adjustment procedures.

Flowchart of Alignment for tape traveling

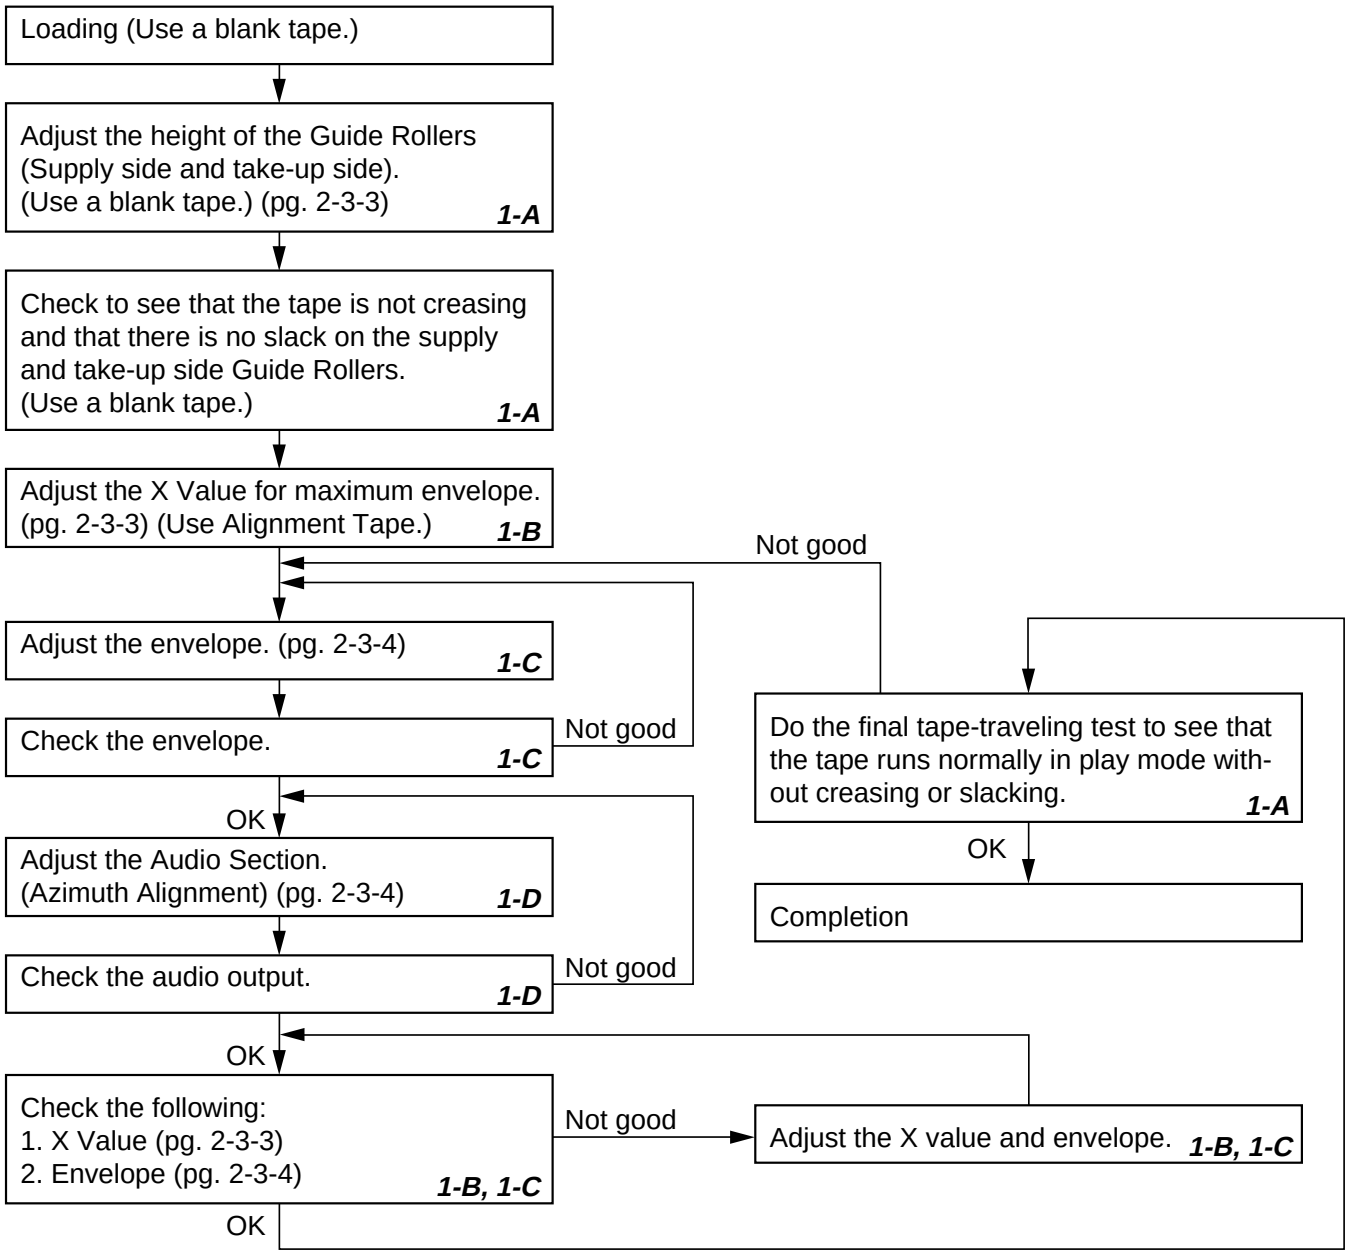
Loading (Use a blank tape.)
Adjust the height of the Guide Rollers (Supply side and take-up side). (Use a blank tape.) (pg. 2-3-3) 1-A
Check to see that the tape is not creasing and that there is no slack on the supply and take-up side Guide Rollers. (Use a blank tape.) 1-A
Adjust the X Value for maximum envelope. (pg. 2-3-3) (Use Alignment Tape.) 1-B
Not good
Adjust the envelope. (pg. 2-3-4) 1-C
Check the envelope. 1-C
Not good
OK
Adjust the Audio Section. (Azimuth Alignment) (pg. 2-3-4) 1-D
Check the audio output. 1-D
Not good
OK
Check the following:
1. X Value (pg. 2-3-3)
2. Envelope (pg. 2-3-4) 1-B, 1-C
Not good
Adjust the X value and envelope. 1-B, 1-C
OK
Do the final tape-traveling test to see that the tape runs normally in play mode without creasing or slacking. 1-A
OK
Completion

1-A. Preliminary/Final Checking and Alignment of Tape Path

Purpose:

To make sure that the tape path is well stabilized.

Symptom of Misalignment:

If the tape path is unstable, the tape will be damaged.

Note: Do not use an Alignment Tape for this procedure. If the unit is not correctly aligned, the tape may be damaged.

1. Playback a blank cassette tape and check to see that the tape runs without creasing at Guide Rollers [2] and [3], and at points A and B on the lead surface. (Refer to Fig M3 and M4.)
2. If creasing is apparent, align the height of the guide rollers by turning the top of Guide Rollers [2] and [3] with a Guide Roller Adj. Screwdriver. (Refer to Fig. M3 and M5.)

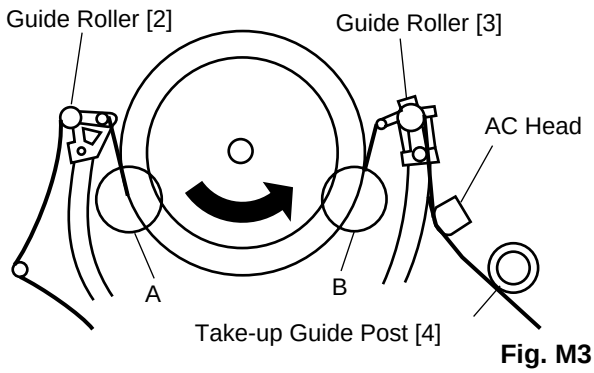

Fig. M3

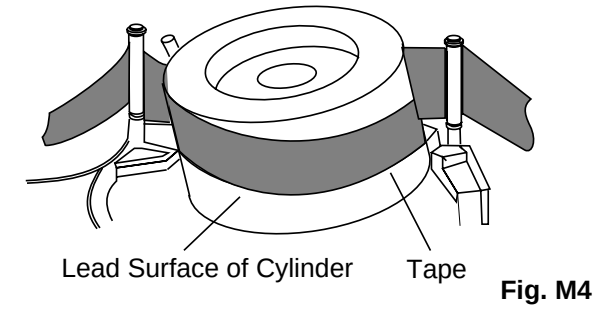

Fig. M4

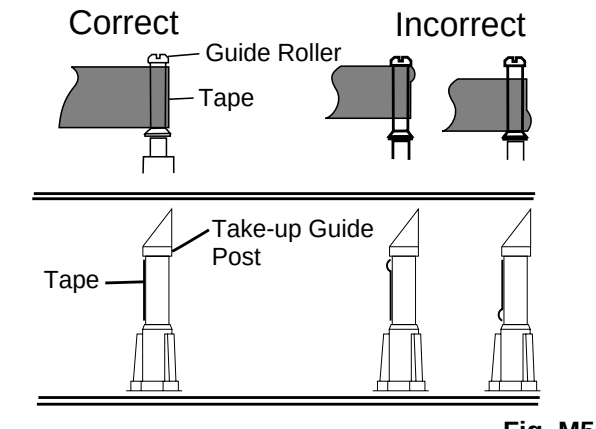

Fig. M5

3. Check to see that the tape runs without creasing at Take-up Guide Post [4] or without snaking between Guide Roller [3] and AC Head. (Fig. M3 and M5)
4. If creasing or snaking is apparent, adjust the Tilt Adj. Screw of the AC Head. (Fig. M6)

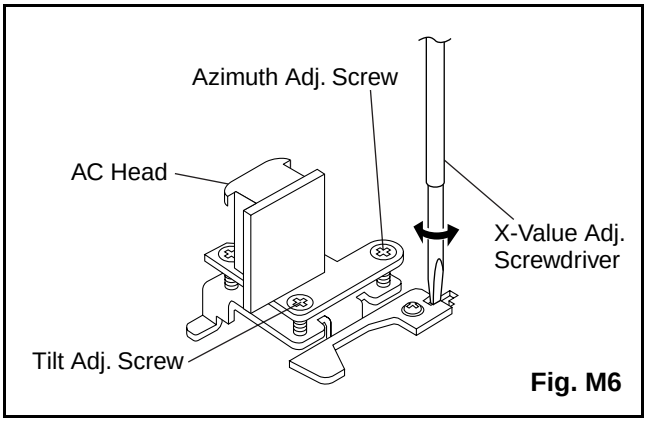

Fig. M6

1-B. X Value Alignment

Purpose:

To align the Horizontal Position of the Audio/Control/Erase Head.

Symptom of Misalignment:

If the Horizontal Position of the Audio/Control/Erase Head is not properly aligned, maximum envelope cannot be obtained at the Neutral position of the Tracking Control Circuit.

1. Connect the oscilloscope to J189 (PB-C-MONI) and J116 (CTL) on the Main CBA. Use J190 (RF-SW) as a trigger.
2. Playback the Gray Scale of the Alignment Tape (FL8N---[SRC2213],
   FL8NW---[SRC22134/SRC22194])
   and confirm that the PB FM signal is present.
3. Set the Tracking Control Circuit to the center position by pressing CH UP button then " PLAY " button on the unit. (Refer to note on bottom of page 2-3-4.)
4. Use the X-Value Adj. Screwdriver so that the PB FM signal at J189 (PB-C-MONI) is maximum. (Fig. M6)
5. Press CH UP button on the unit until the CTL waveform has shifted by approx. +2msec. Make sure that the envelope is simply attenuated (shrinks in height) during this process so that you will know the envelope has been at its peak.

6. Press CH DOWN button on the unit until the CTL waveform has shifted from its original position (not the position achieved in step 5, but the position of CTL waveform in step 4) by approximately -2msec. Make sure that the envelope is simply attenuated (shrinks in height) once CTL waveform passes its original position and is further brought in the minus direction.
7. Set the Tracking Control Circuit to the center position by pressing CH UP button and then " PLAY " button on the unit.

1-C. Checking/Adjustment of Envelope Waveform

Purpose:

To achieve a satisfactory picture and precise tracking.

Symptom of Misalignment:

If the envelope output is poor, noise will appear in the picture. The tracking will then lose precision and the playback picture will be distorted by any slight variation of the Tracking Control Circuit.

1. Connect the oscilloscope to J189 (PB-C-MONI) on the Main CBA. Use J190 (RF-SW) as a trigger.
2. Playback the Gray Scale on the Alignment Tape (FL8N---[SRC2213],
   FL8NW---[SRC22134/SRC22194]).
   Set the Tracking Control Circuit to the center position by pressing CH UP button and then " PLAY " button on the unit. Adjust the height of Guide Rollers [2] and [3] (Fig. M3, Page 2-3-3) watching the oscilloscope display so that the envelope becomes as flat as possible. To do this adjustment, turn the top of the Guide Roller with the Guide Roller Adj. Screwdriver.
3. If the envelope is as shown in Fig. M7, adjust the height of Guide Roller [2] (Refer to Fig. M3) so that the waveform looks like the one shown in Fig. M9.
4. If the envelope is as shown in Fig. M8, adjust the height of Guide Roller [3] (Refer to Fig. M3) so that the waveform looks like the one shown in Fig. M9.
5. When Guide Rollers [2] and [3] (Refer to Fig.M3) are aligned properly, there is no envelope drop either at the beginning or end of track as shown in Fig. M9.

Note: Upon completion of the adjustment of Guide Rollers [2] and [3] (Refer to Fig. M3), check the X Value by pushing the CH UP or DOWN buttons alternately, to check the symmetry of the envelope. Check the number of pushes to ensure center position. The number of pushes CH UP button to achieve 1/2 level of envelope should match the number of pushes CH DOWN button from center. If required, redo the "X Value Alignment."

1-D. Azimuth Alignment of Audio/Control/ Erase Head

Purpose:

To correct the Azimuth alignment so that the Audio/ Control/Erase Head meets tape tracks properly.

Symptom of Misalignment:

If the position of the Audio/Control/Erase Head is not properly aligned, the Audio S/N Ratio or Frequency Response will be poor.

1. Connect the oscilloscope to the audio output jack on the rear side of the deck.
2. Playback the alignment tape
   (FL8N---[SRC2213],
   FL8NW---[SRC22134/SRC22194])
   and confirm that the audio signal output level is 8kHz.
3. Adjust Azimuth Adj. Screw so that the output level on the AC Voltmeter or the waveform on the oscilloscope is at maximum. (Fig. M6)

Dropping envelope level at the beginning of track.

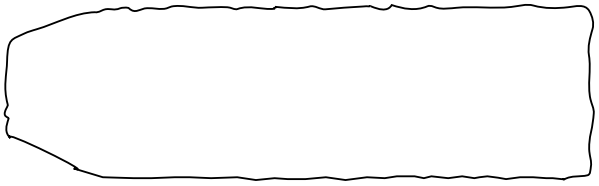

Fig. M7

Dropping envelope level at the end of track.

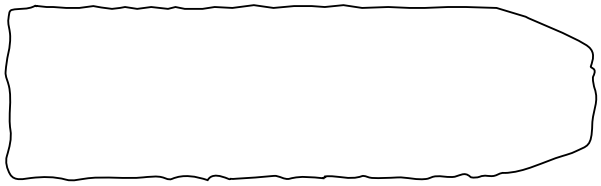

Fig. M8

Envelope is adjusted properly. (No envelope drop)

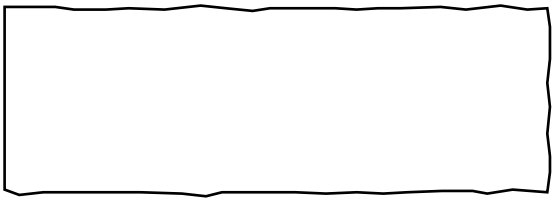

Fig. M9

DISASSEMBLY/ASSEMBLY PROCEDURES OF DECK MECHANISM

Before following the procedures described below, be sure to remove the deck assembly from the cabinet. (Refer to CABINET DISASSEMBLY INSTRUCTIONS on page 1-6-1.)
All the following procedures, including those for adjustment and replacement of parts, should be done in Eject mode; see the positions of [41] and [42] in Fig.DM1 on page 2-4-3. When reassembling, follow the steps in reverse order.

STEP /LOC. No.	START-ING No.	PART		REMOVAL		INSTALLATION
				Fig. No.	REMOVE/*UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOLDER	ADJUSTMENT CONDITION
[1]	[1]	Guide Holder A	T	DM3	2(S-1)	
[2]	[1]	Cassette Holder Assembly	T	DM4		
[3]	[2]	Slider L	T	DM5	(S-2)	
[4]	[2]	Slider R	T	DM5	(S-3)	
[5]	[4]	Lock Lever	T	DM5	(S-4),*(P-1)	
[6]	[2]	C Plate	T	DM5		
[7]	[7]	Cylinder Assembly	T	DM1,DM6	Desolder, 3(S-5)	
[8]	[8]	Loading Motor Assembly	T	DM1,DM7	Desolder, LDG Belt, 2(S-6)	
[9]	[9]	AC Head Assembly	T	DM1,DM7	(S-7)	
[10]	[2]	Tape Guide Assembly	T	DM1,DM8	*(P-2)	
[11]	[10]	Door Opener B	T	DM1,DM8	*(L-1),*(L-2)	
[12]	[11]	Pinch Arm (B)	T	DM1,DM8	*(P-3)	
[13]	[12]	Pinch Arm (A) Assembly	T	DM1,DM8		
[14]	[14]	FE Head	T	DM1,DM9	(S-8)	
[15]	[15]	Prism	T	DM1,DM9	(S-9)	
[16]	[2]	Slider Shaft	T	DM10	(S-10),*(L-3)	
[17]	[16]	C Drive Lever L	T	DM10		
[18]	[16]	C Drive Lever R	T	DM10		
[19]	[7],[10]	Capstan Motor	B	DM2,DM11	3(S-11), Cap Belt	
[20]	[20]	Clutch Assembly	B	DM2,DM12	(C-1)	
[21]	[20]	FF Arm	B	DM2,DM12		
[22]	[22]	Cam Holder F	B	DM2,DM13	(C-2)	
[23]	[23]	Cam Gear (B)	B	DM2,DM13	(C-3),*(P-4)	
[24]	[24]	Mode Gear	B	DM2,DM14	(C-4)	
[25]	[20],[23], [24]	Mode Lever	B	DM2,DM14	(C-5), *(L-4)	
[26]	[22]	Worm Holder	B	DM2,DM14	(S-12)	
[27]	[26]	Pulley Assembly	B	DM2,DM14		
[28]	[25],[26]	Cam Gear (A)	B	DM2,DM14		
[29]	[25]	Idler Assembly	B	DM1,DM15	*(L-5)	
[30]	[25]	BT Arm	B	DM2,DM15	*(P-5)	
[31]	[25]	Loading Arm S (B) Assembly	B	DM2,DM15		(+)Refer to Alignment Sec.Pg.2-4-9
[32]	[31]	Loading Arm T (B) Assembly	B	DM2,DM15		(+)Refer to Alignment Sec.Pg.2-4-9

STEP /LOC. No.	START-ING No.	PART		REMOVAL		INSTALLATION
				Fig. No.	REMOVE/*UNHOOK/ UNLOCK/RELEASE/ UNPLUG/DESOLDER	ADJUSTMENT CONDITION
[33]	[2],[25]	M Brake T Assembly	T	DM1,DM16	*(P-6)	
[34]	[2],[25]	M Brake S Assembly	T	DM1,DM16	*(P-7)	
[35]	[34]	Tension Lever Sub Assembly	T	DM1,DM16		
[36]	[35]	T Lever Holder	T	DM1,DM16	*(L-6)	
[37]	[33]	M Gear	T	DM1,DM16	(C-6)	
[38]	[2],[15]	Sensor Gear	T	DM1,DM16	(C-7)	
[39]	[33]	Reel T	T	DM1,DM16		
[40]	[35]	Reel S	T	DM1,DM16		
[41]	[31],[35]	Moving Guide S Preparation	T	DM1,DM17		
[42]	[32]	Moving Guide T Preparation	T	DM1,DM17		
[43]	[19]	TG Post Assembly	T	DM1,DM17	*(L-7)	
[44]	[19],[28]	Rack Assembly	R	DM18		(+)Refer to Alignment Sec.Pg.2-4-10
[45]	[44]	F Door Opener	R	DM18		
[46]	[46]	Cleaner Lever Assembly	T	DM1,DM6		Type A
					*(L-8)	Type B
[47]	[46]	CL Post	T	DM6	*(L-9)	Type A
↓ (1)	↓ (2)	↓ (3)	↓ (4)	↓ (5)	↓ (6)	↓ (7)

(1): Follow steps in sequence. When reassembling, follow the steps in reverse order.
These numbers are also used as identification (location) No. of parts in the figures.

(2): Indicates the part to start disassembling with in order to disassemble the part in column (1).

(3): Name of the part

(4): Location of the part: T=Top B=Bottom R=Right L=Left

(5): Figure Number

(6): Identification of parts to be removed, unhooked, unlocked, released, unplugged, unclamped, or desoldered.
P=Spring, W=Washer, C=Cut Washer, S=Screw, *=Unhook, Unlock, Release, Unplug, or Desolder
e.g., 2(L-2) = two Locking Tabs (L-2).

(7): Adjustment Information for Installation
(+):Refer to Deck Exploded Views for lubrication.

.

Top View

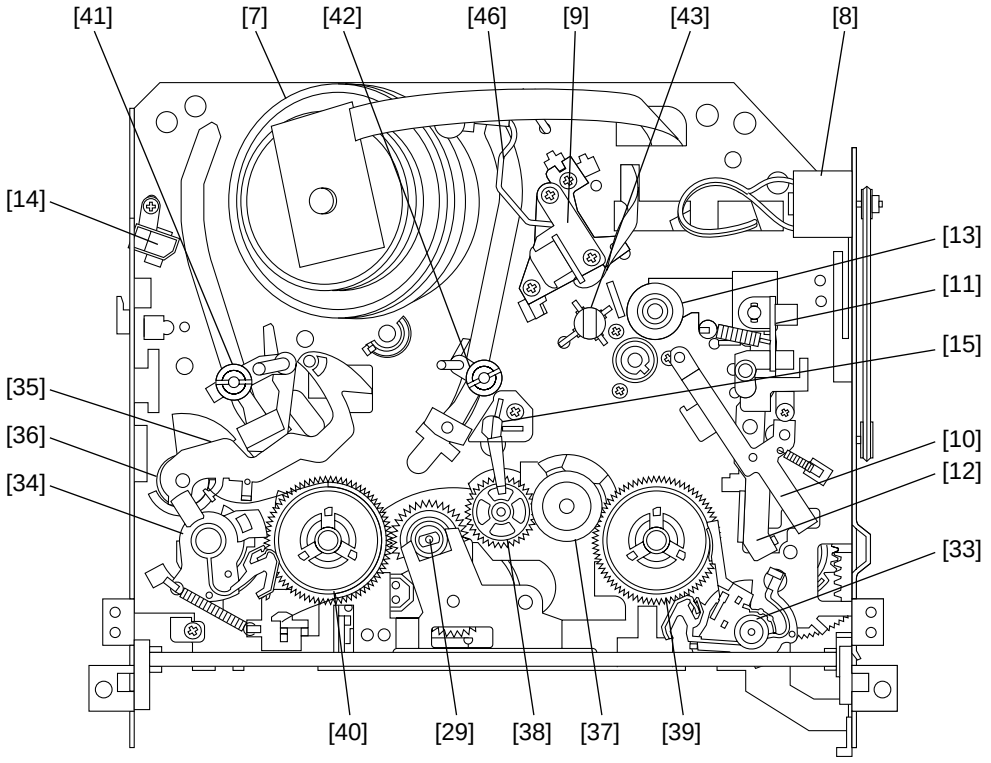

Fig. DM1

Bottom View

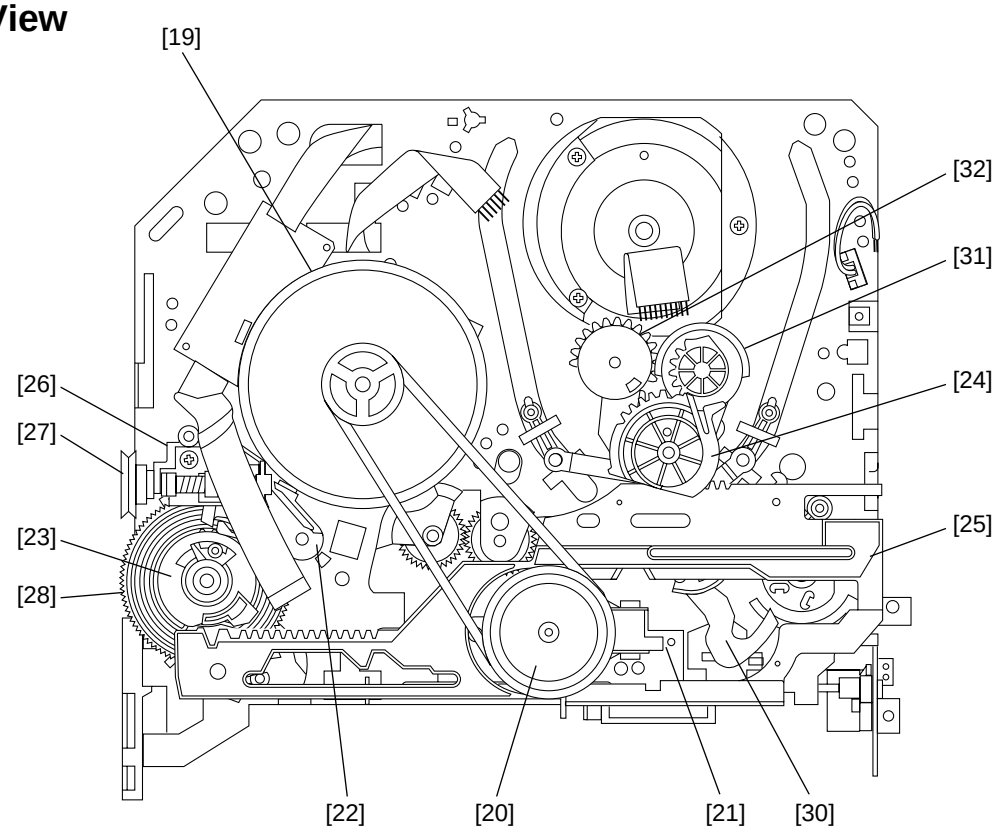

Fig. DM2

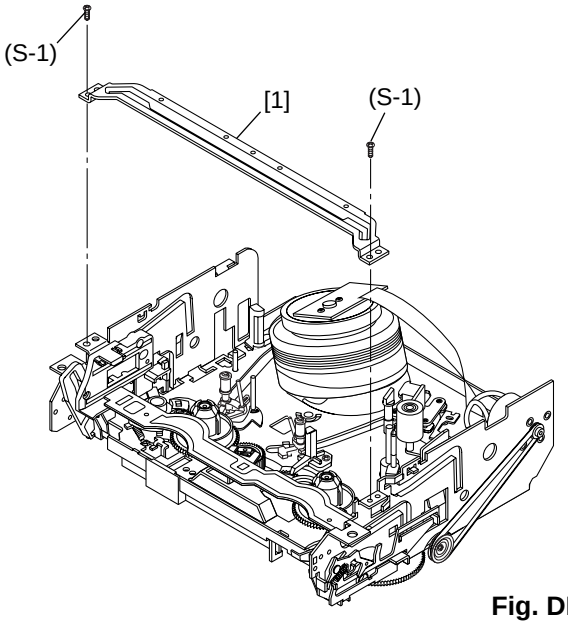

Fig. DM3

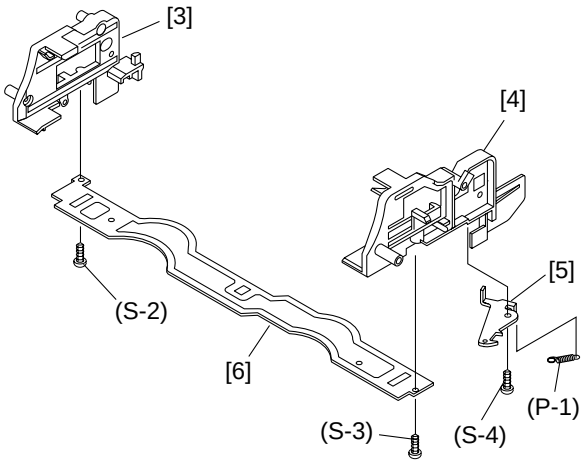

Fig. DM5

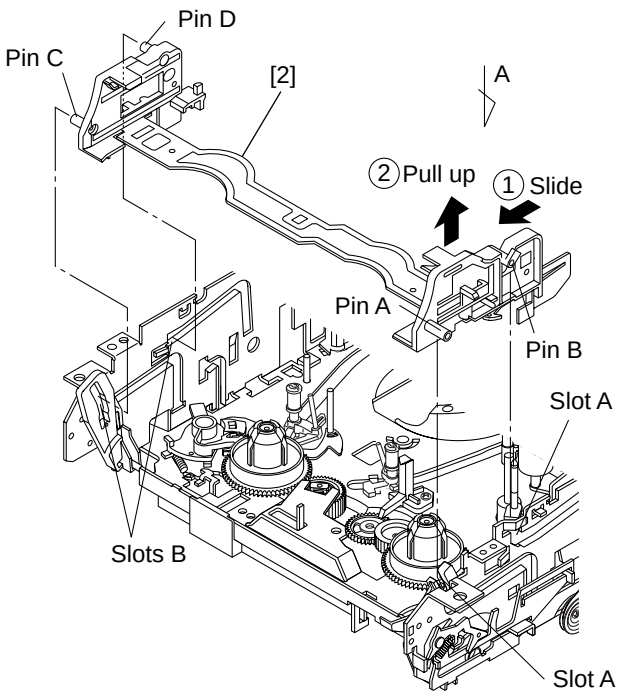

First, while pushing the locking tab as shown in the right, slide and pull up the right side on [2] to release Pin A and Pin B from the slots A.
Then, remove Pin C and Pin D on [2] from the slots B as shown.

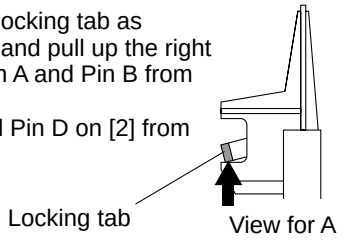

Fig. DM4

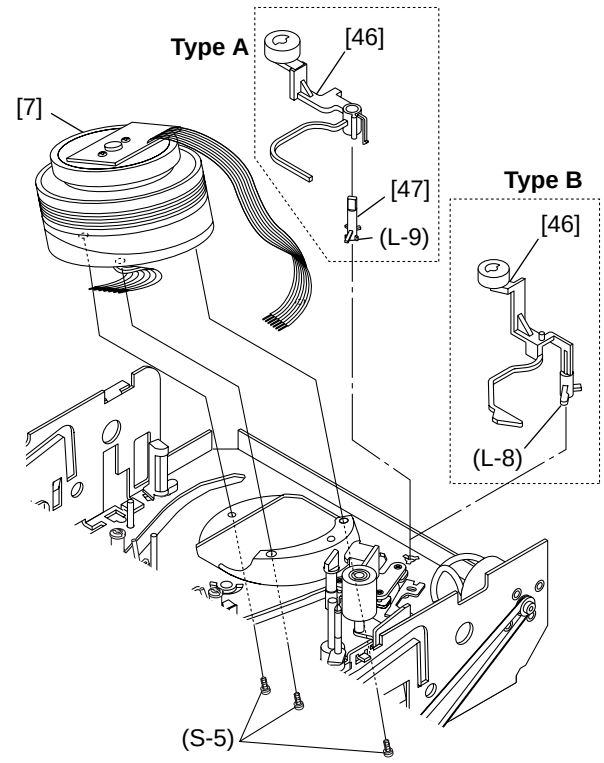

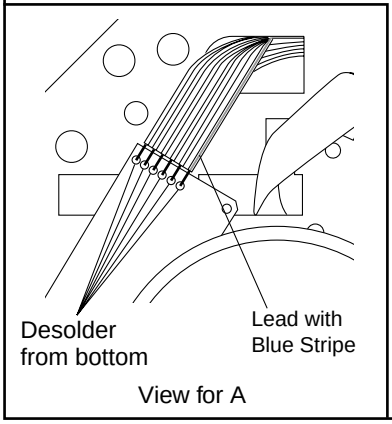

Fig. DM6

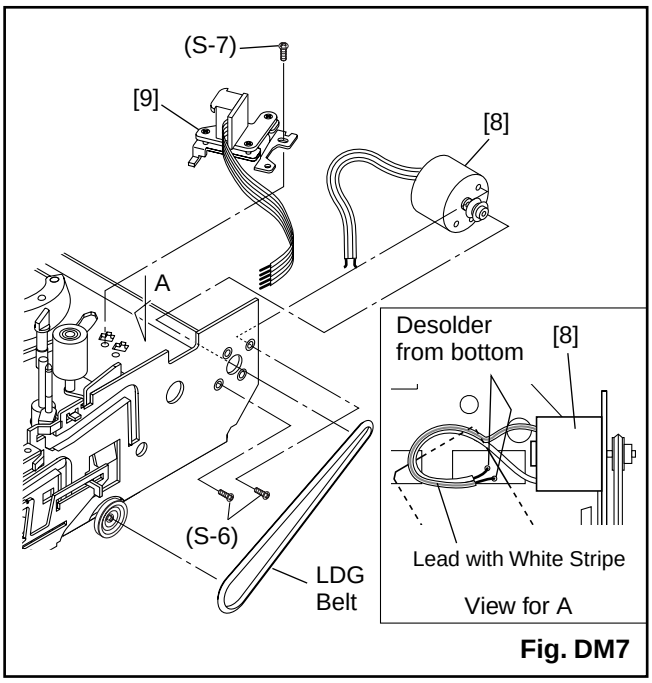

Fig. DM7

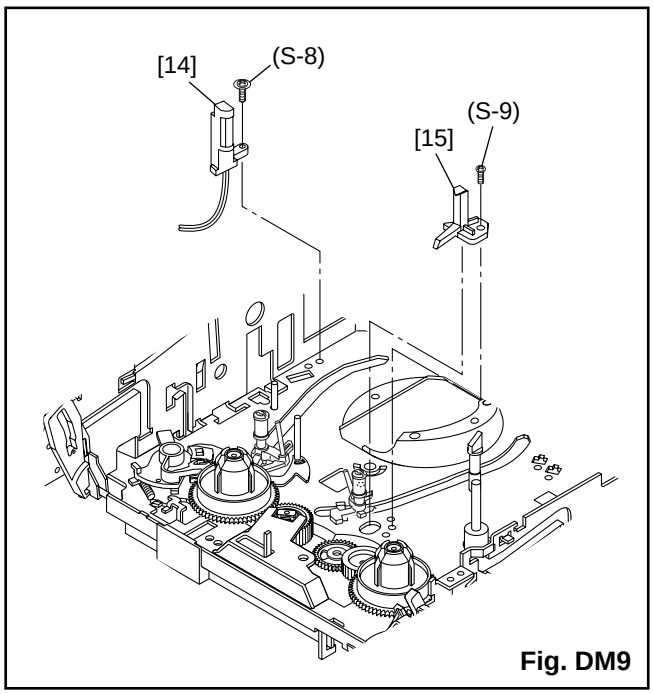

Fig. DM9

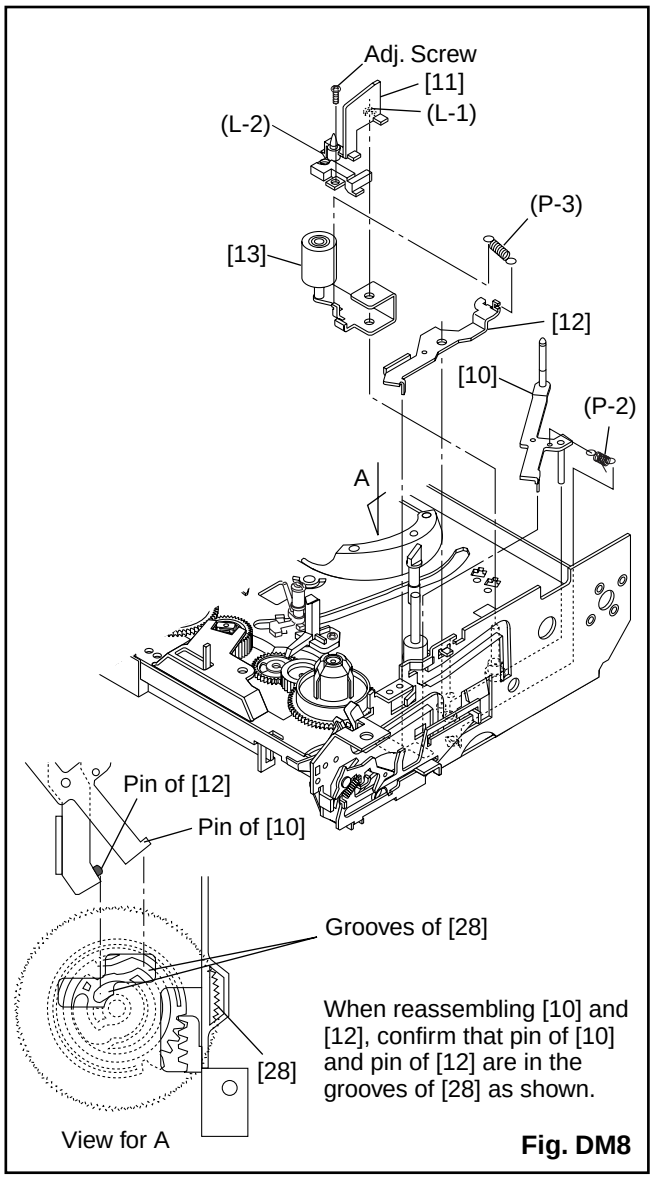

Fig. DM8

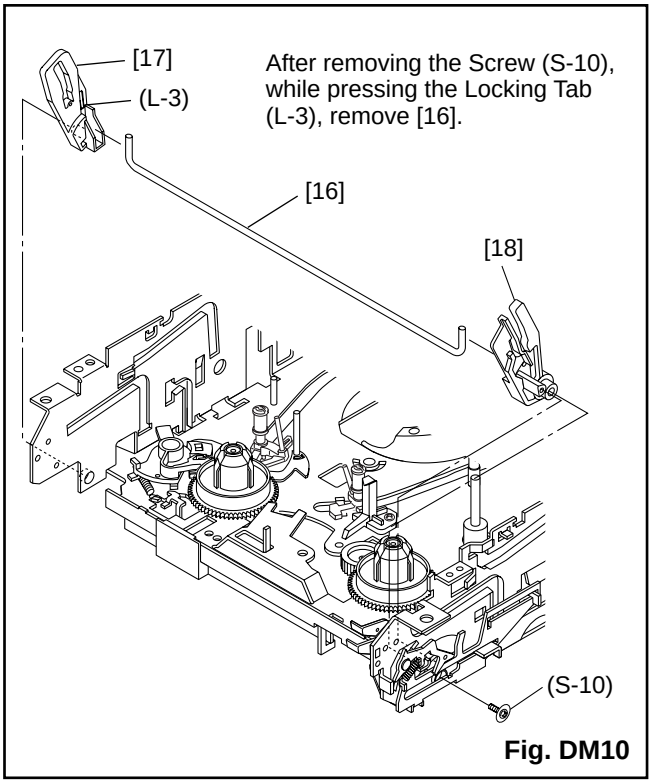

Fig. DM10

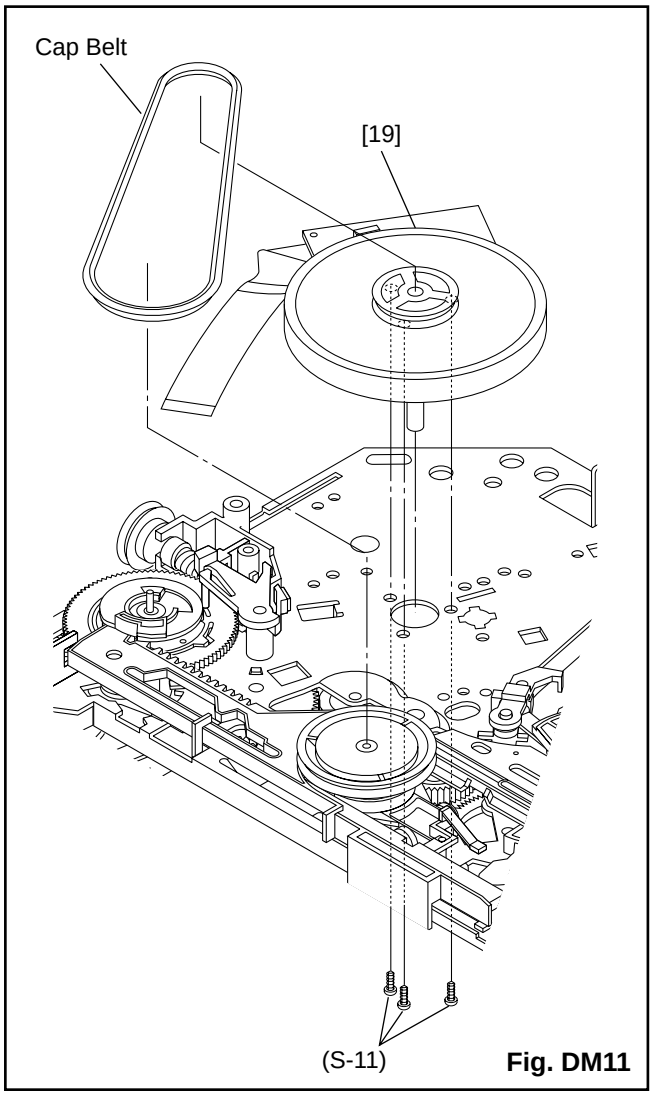

Fig. DM11

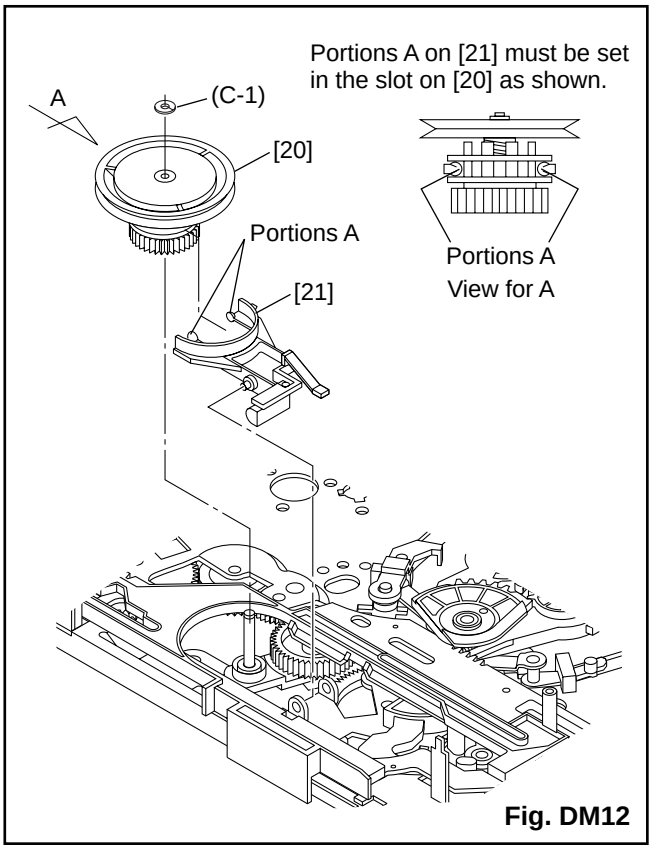

Fig. DM12

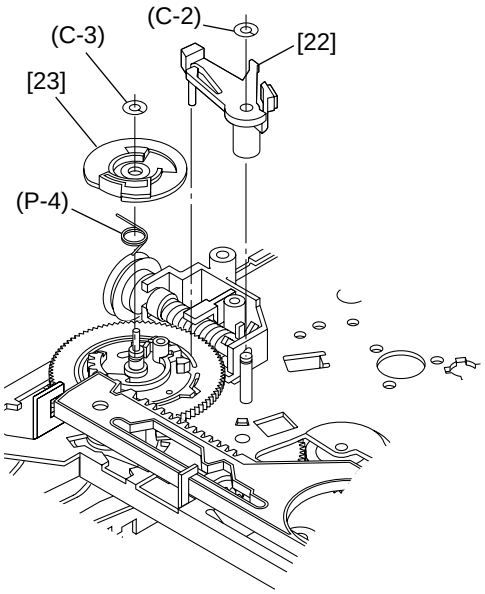

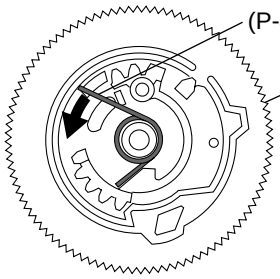

Pin on bottom of [23]

When installing [23], install the spring (P-4) to [28] as shown in the left figure, and then install [23] while pressing the spring (P-4) to the direction of the arrow in the left figure and confirming that the position of the spring (P-4) is placed as shown in the left figure.

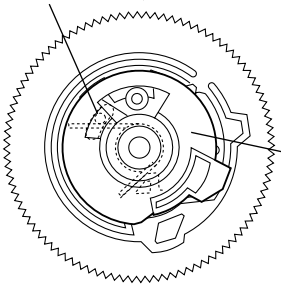

Top View

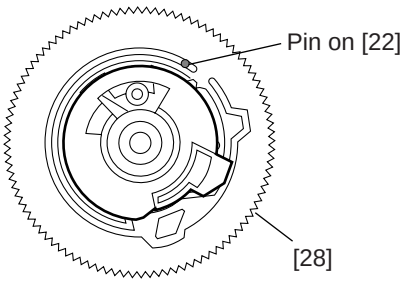

Position of pin on [22]

Fig. DM13

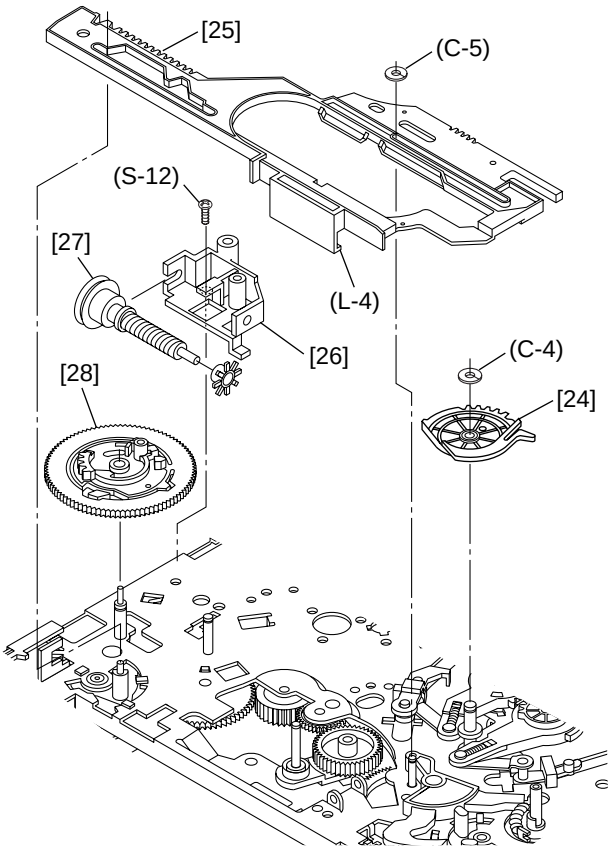

Position of Mode Lever when installed

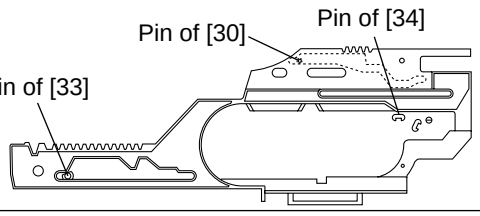

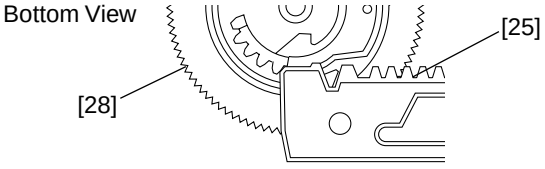

Align [25] and [28] as shown.

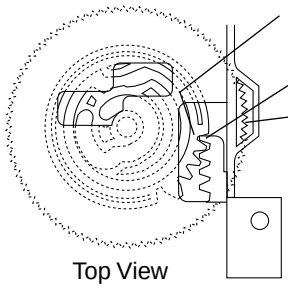

When reassembling [28], meet the first groove on [28] to the first tooth on [44] as shown.

Top View

Fig. DM14

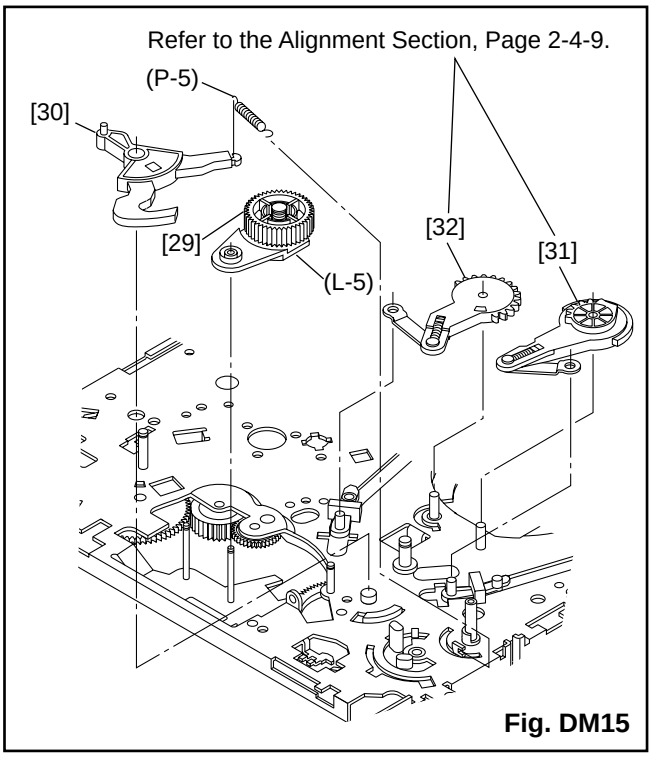

Fig. DM15

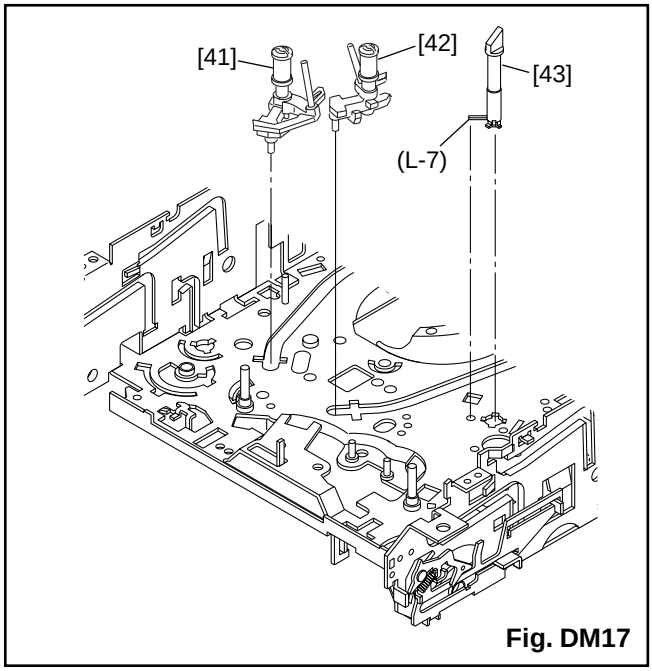

Fig. DM17

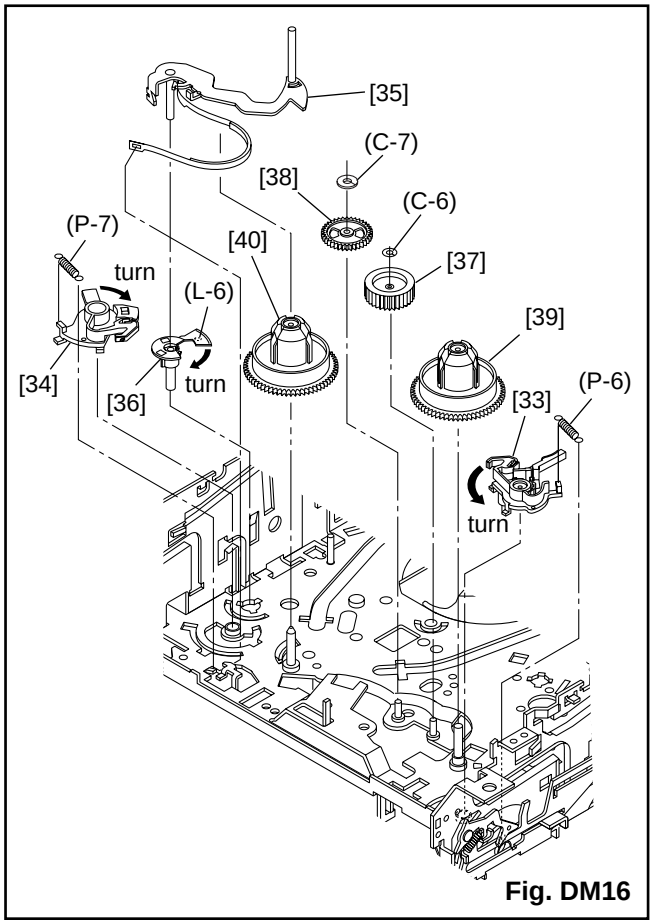

Fig. DM16

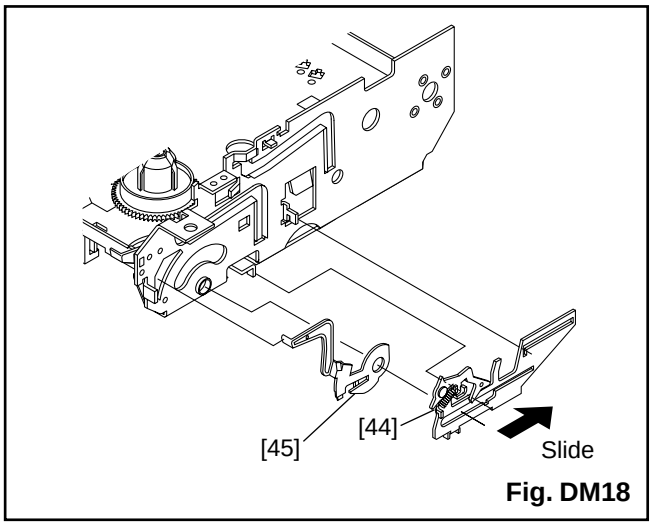

Fig. DM18

ALIGNMENT PROCEDURES OF MECHANISM

The following procedures describe how to align the individual gears and levers that make up the tape loading/unloading mechanism. Since information about the state of the mechanism is provided to the System Control Circuit only through the Mode Switch, it is essential that the correct relationship between individual gears and levers be maintained.

All alignments are to be performed with the mechanism in Eject mode, in the sequence given. Each procedure assumes that all previous procedures have been completed.

IMPORTANT:

If any one of these alignments is not performed properly, even if off by only one tooth, the unit will unload or stop and it may result in damage to the mechanical or electrical parts.

Alignment points in Eject Position

Top View

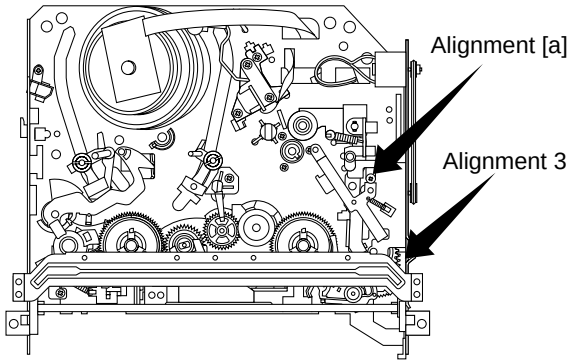

Bottom View

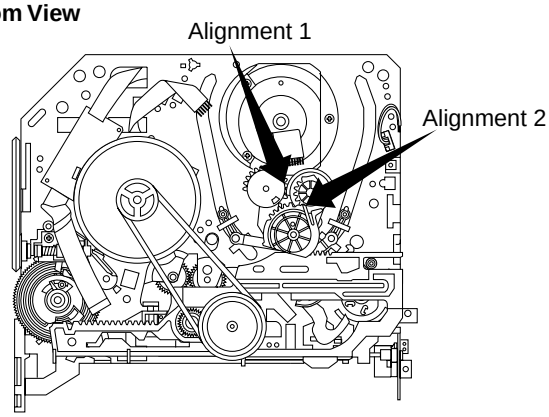

Alignment [a] can be done independently of any other alignment.

Fig. AL1

Alignment 1

Loading Arm, S and T Assembly

Install Loading Arm S and T Assembly so that their triangle marks point to each other as shown in Fig. AL2.

Alignment 2

Mode Gear

Keeping the two triangles pointing at each other, install the Loading Arm T Assembly so that the last tooth of the gear meets the most inside teeth of the Mode Gear. See Fig. AL2.

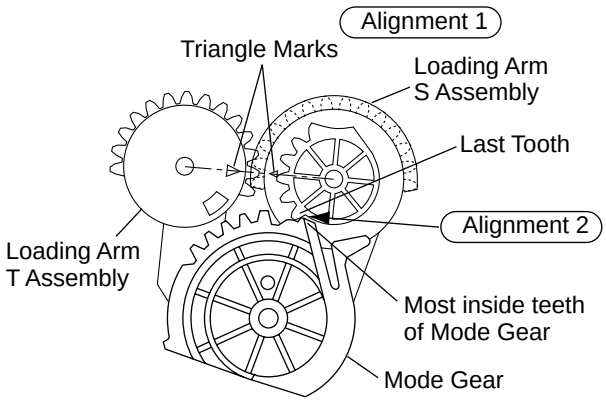

Fig. AL2

Alignment [a]

Tape Guide Assembly

Measurement of the screw must be as specified in Fig. AL3.

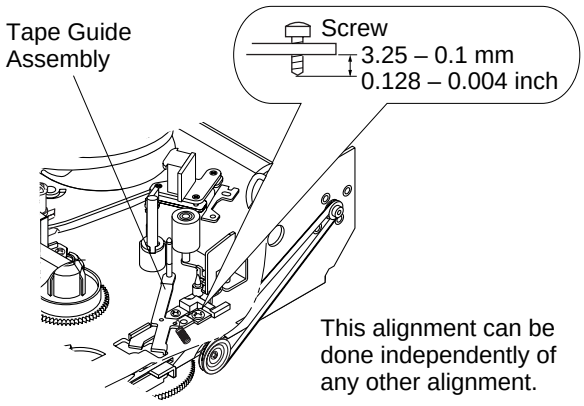

Fig. AL3

Alignment 3

Cam Gear (A), Rack Assembly

Install the Rack Assembly so that the first tooth on the gear of the Rack Assembly meets the first groove on the Cam Gear (A) as shown in Fig. AL4.

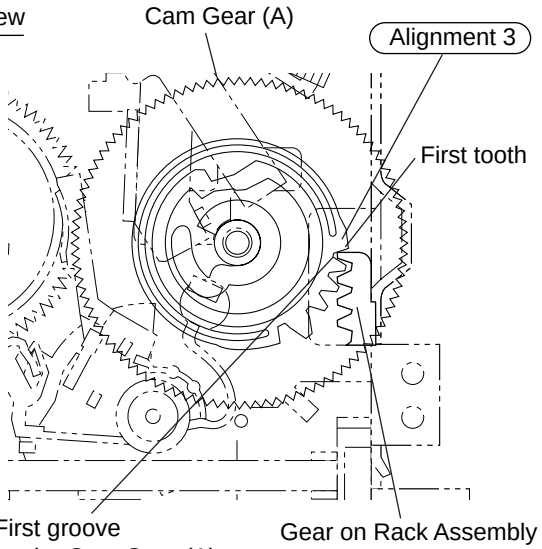

Fig. AL4

EXPLODED VIEWS AND PARTS LIST SECTION

13"/19" COLOR TV/VCR COMBINATION

SRC2213/SRC22134/SRC22194

Sec. 3: Exploded views and Parts List Section
- **Exploded views**
- **Parts List**

TABLE OF CONTENTS

Cabinet Exploded Views 3-1-1
Packing Exploded Views 3-1-5
Deck Exploded Views 3-1-7
Mechanical Parts List 3-2-1
Electrical Parts List 3-3-1
Deck Parts List 3-4-1

EXPLODED VIEWS

Cabinet

[SRC2213/SRC22134]

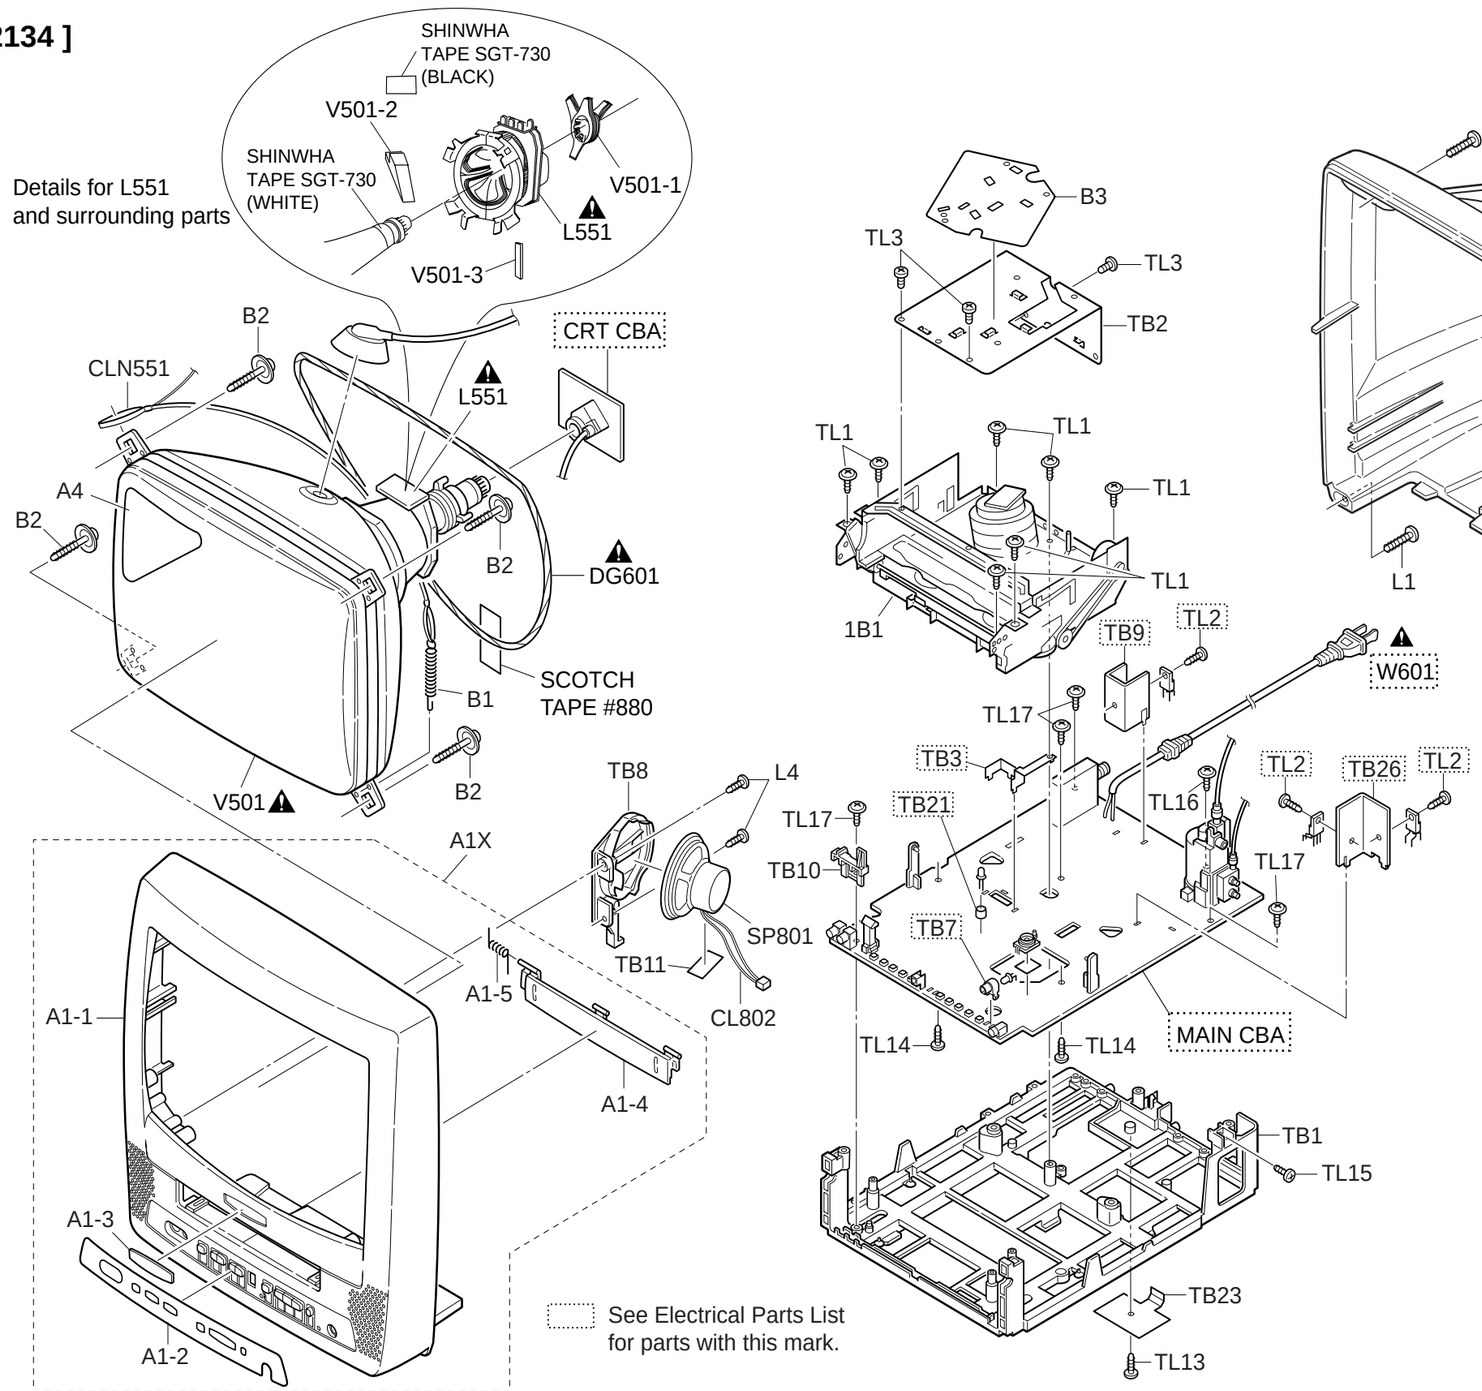

Cabinet

[SRC22194]

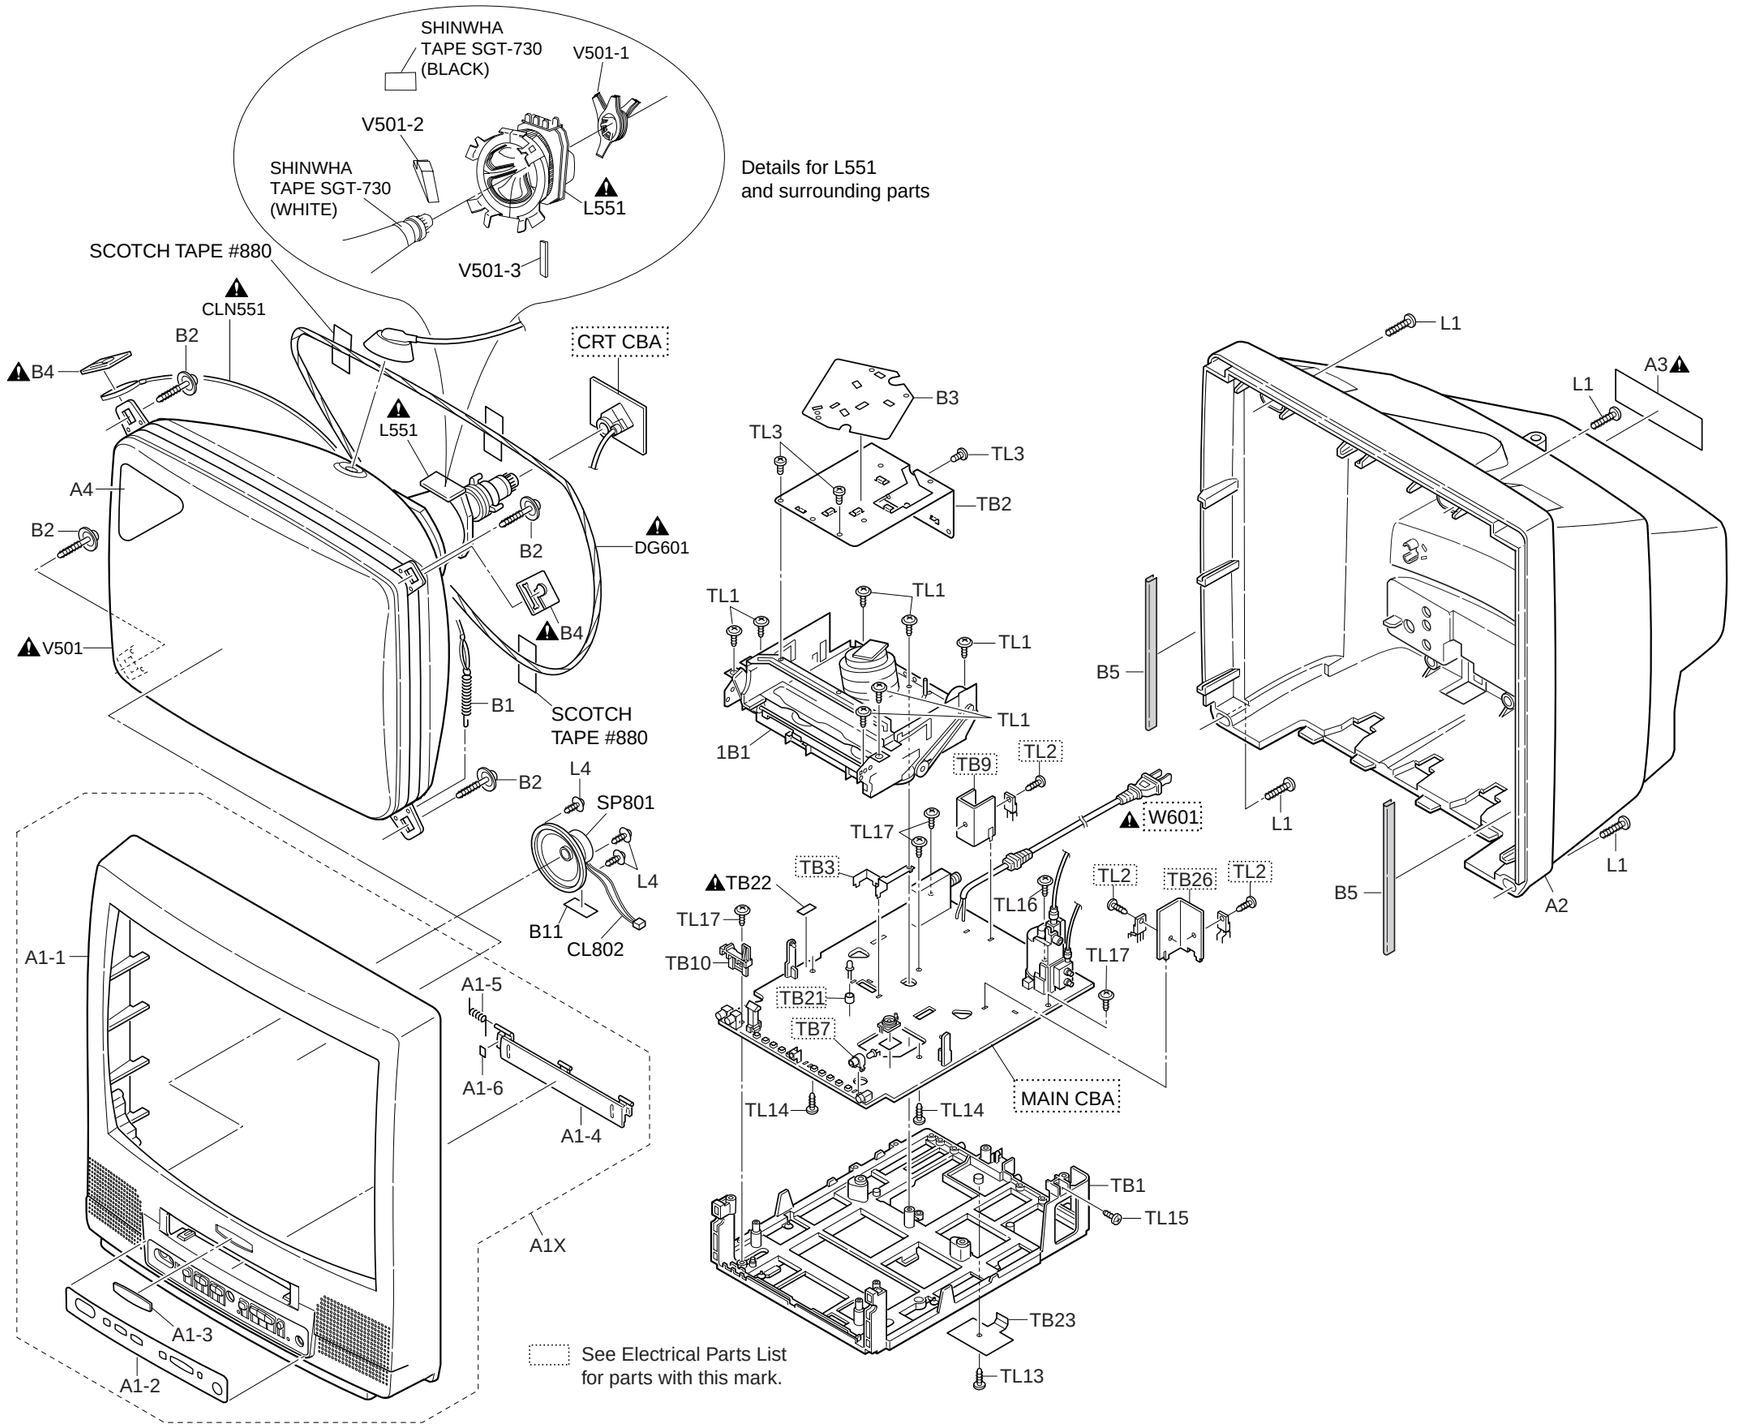

Packing [SRC2213/SRC22134]

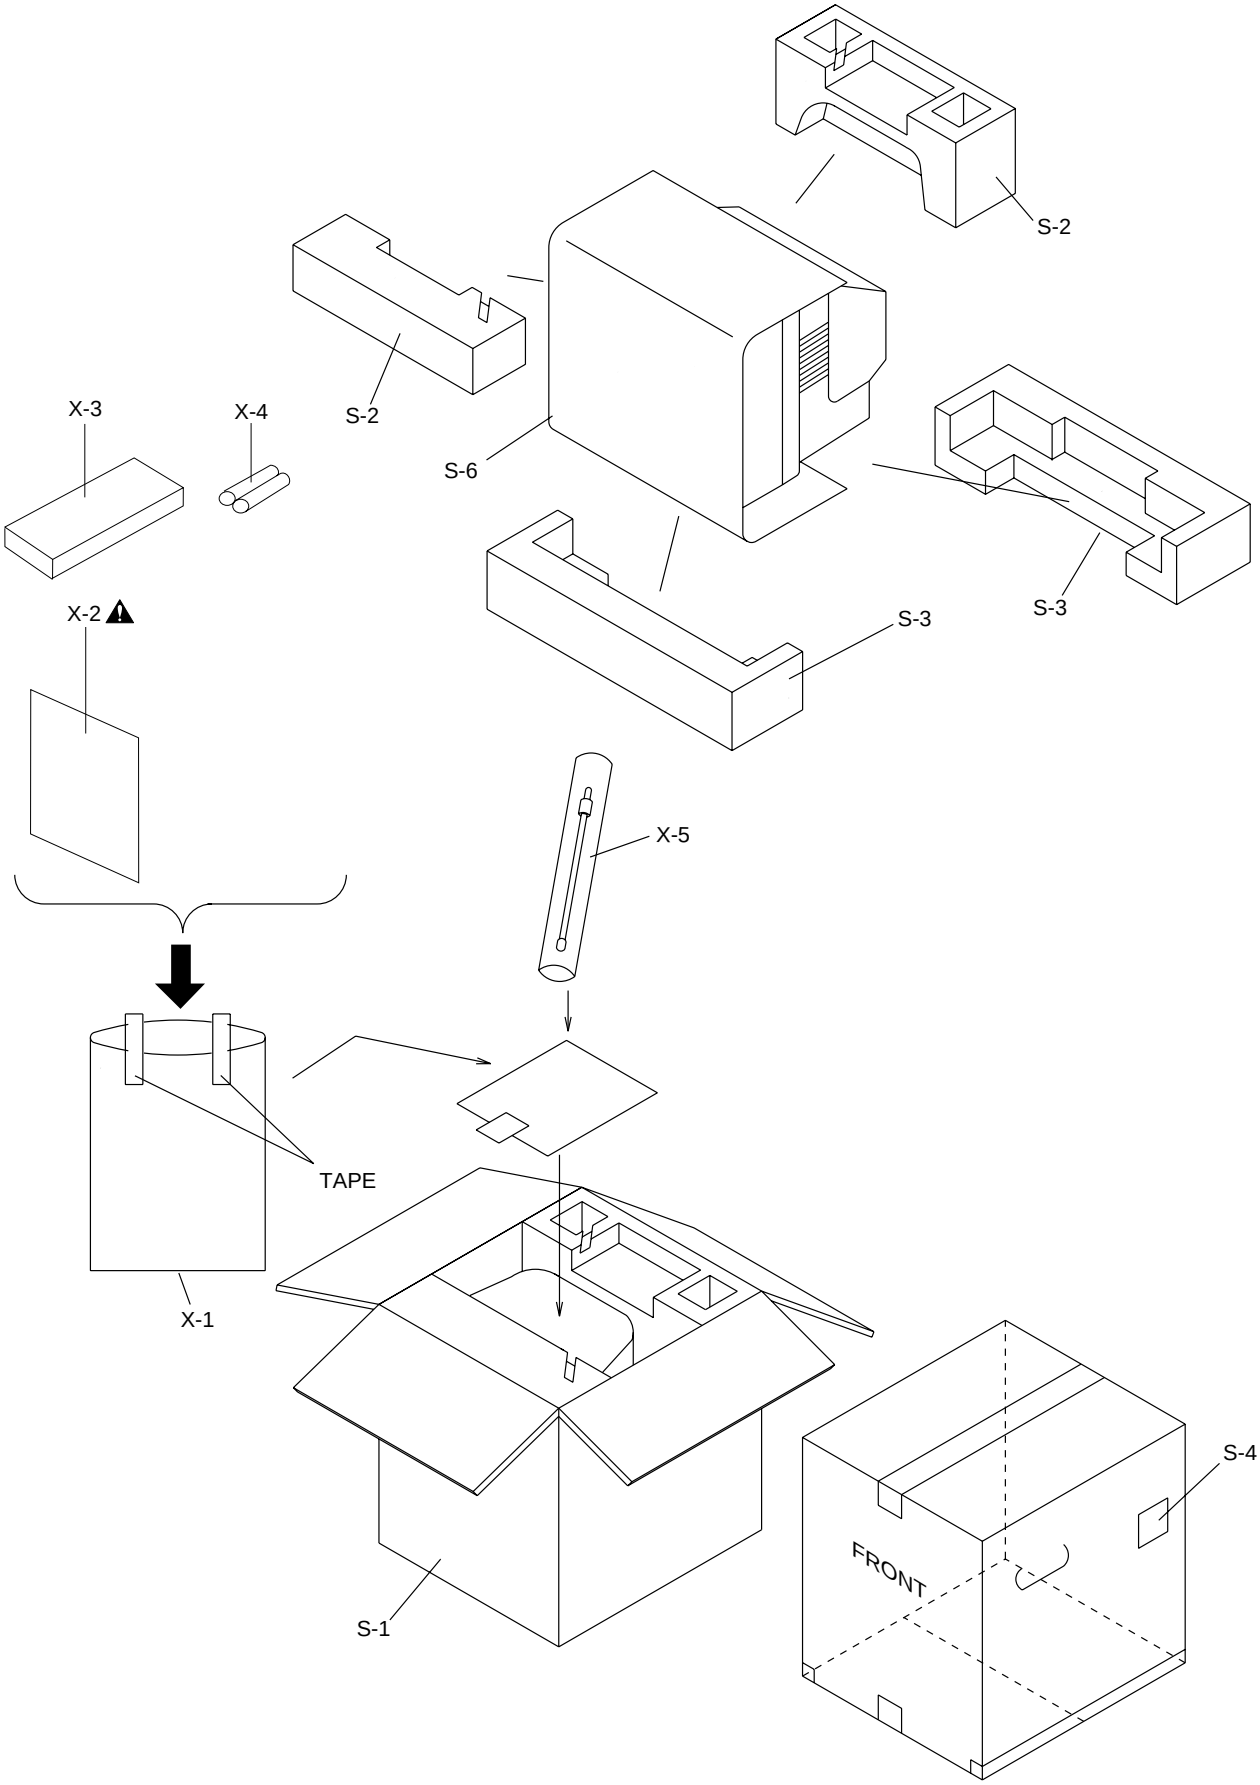

Packing [SRC22194]

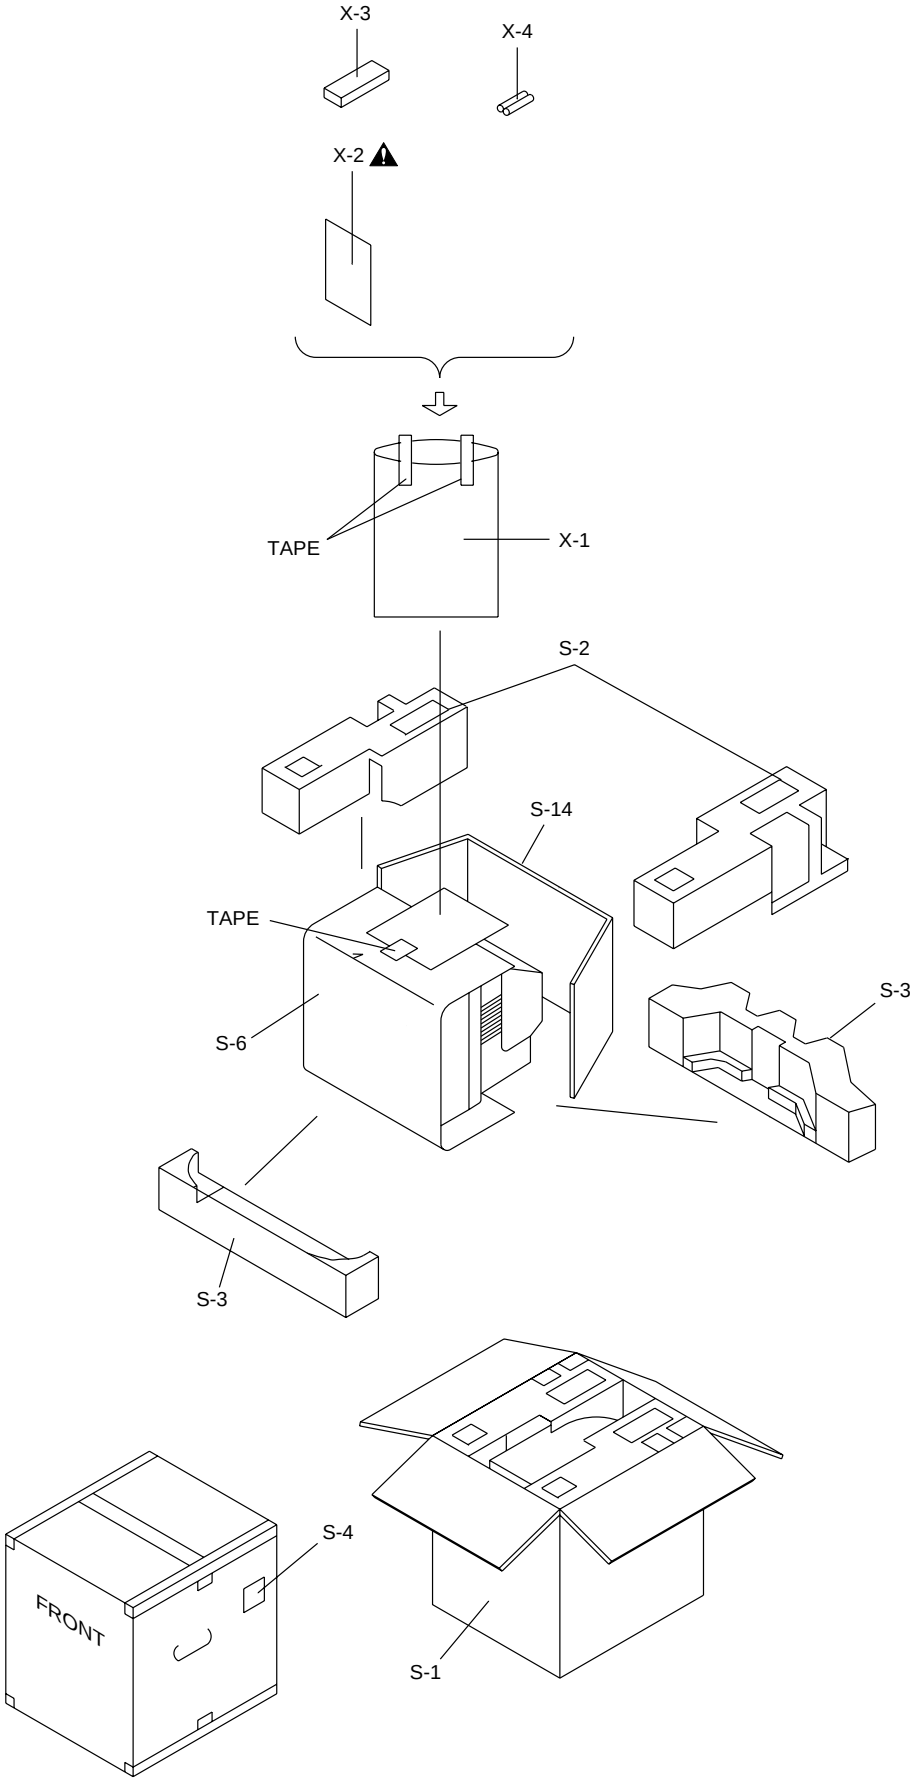

DECK EXPLODED VIEWS

Deck Mechanism View 1

Mark	Description
•••••	Floil G-374G (Blue grease)
▲▲▲▲▲	SLIDUS OIL #150

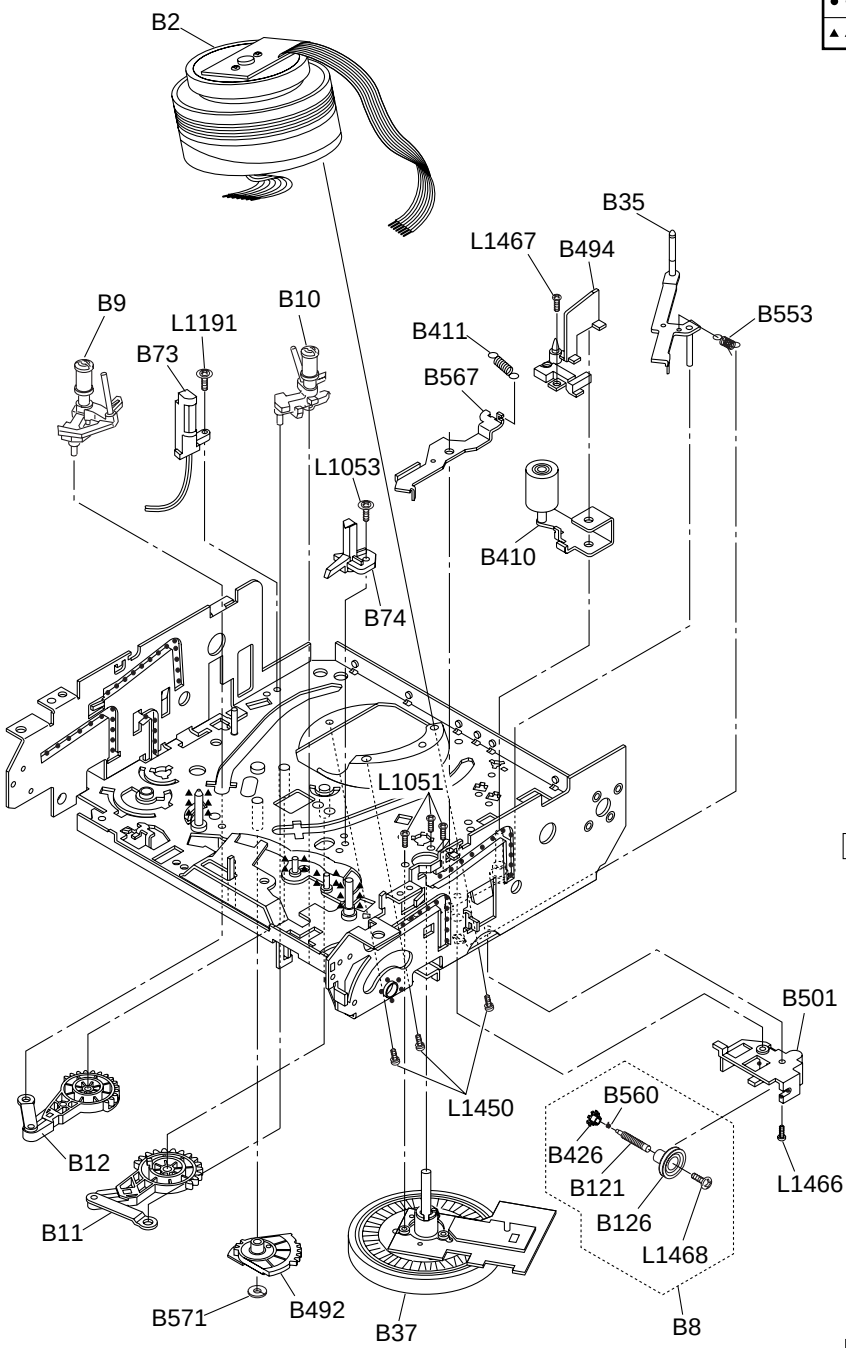

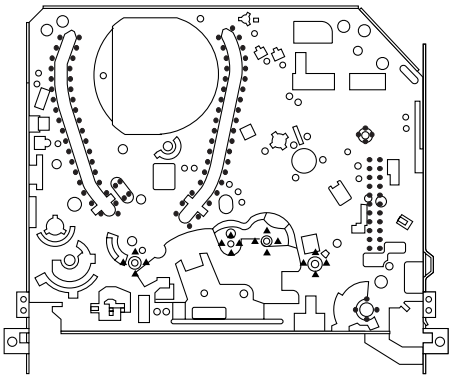

Chassis Assembly
Top View (Lubricating Point)

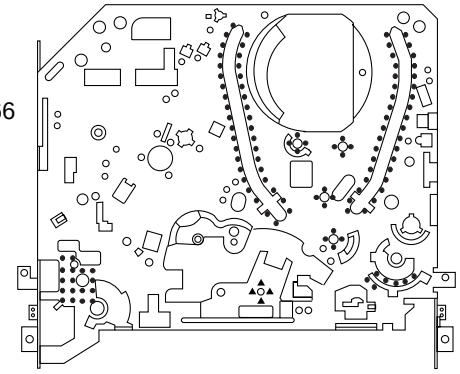

Chassis Assembly
Bottom View (Lubricating Point)

Some Ref. Numbers are not in sequence.

Deck Mechanism View 2

Mark	Description
•••••	Floil G-374G (Blue grease)
×××××	SANKOUL FG84M (Yellow grease)

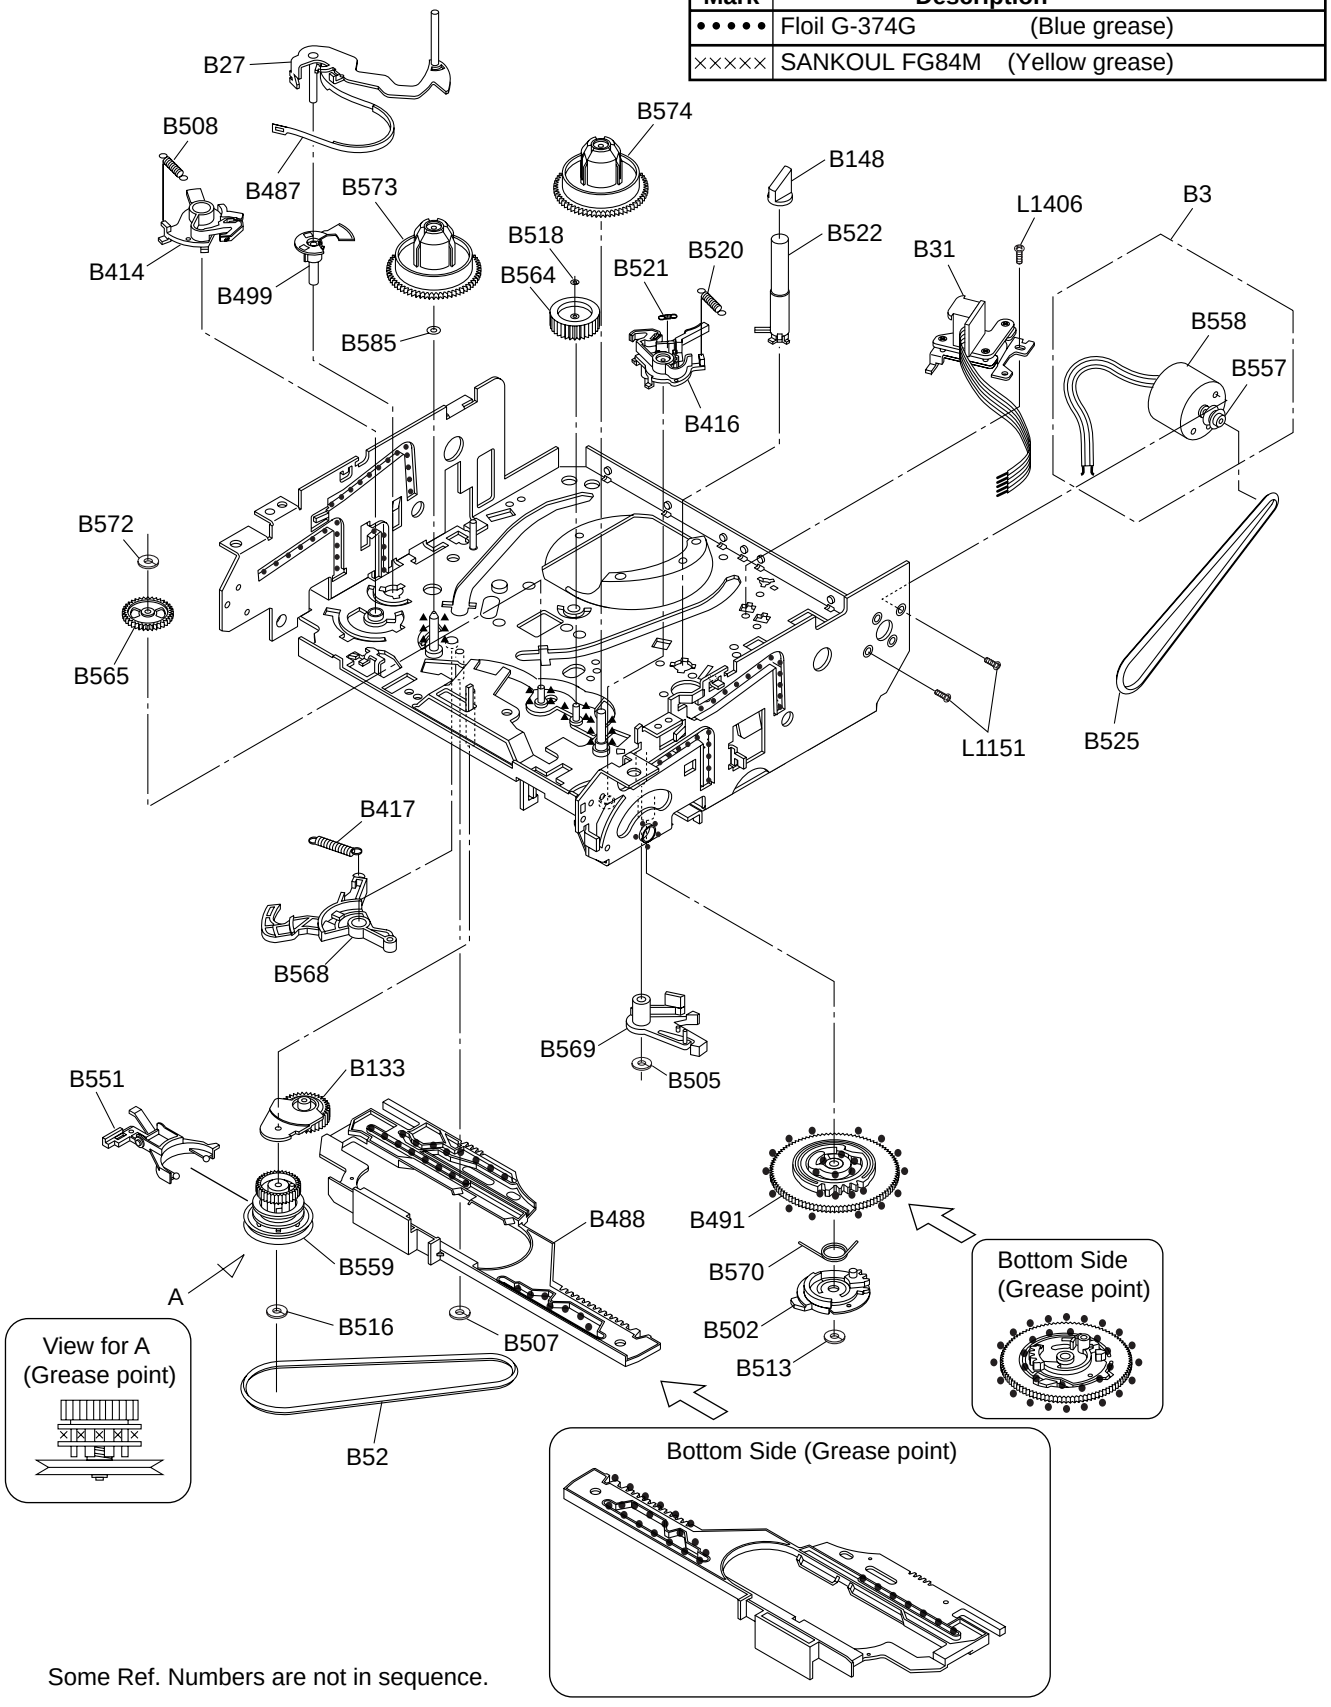

Some Ref. Numbers are not in sequence.

Deck Mechanism View 3

Mark	Description
• • • • •	Floil G-374G (Blue grease)

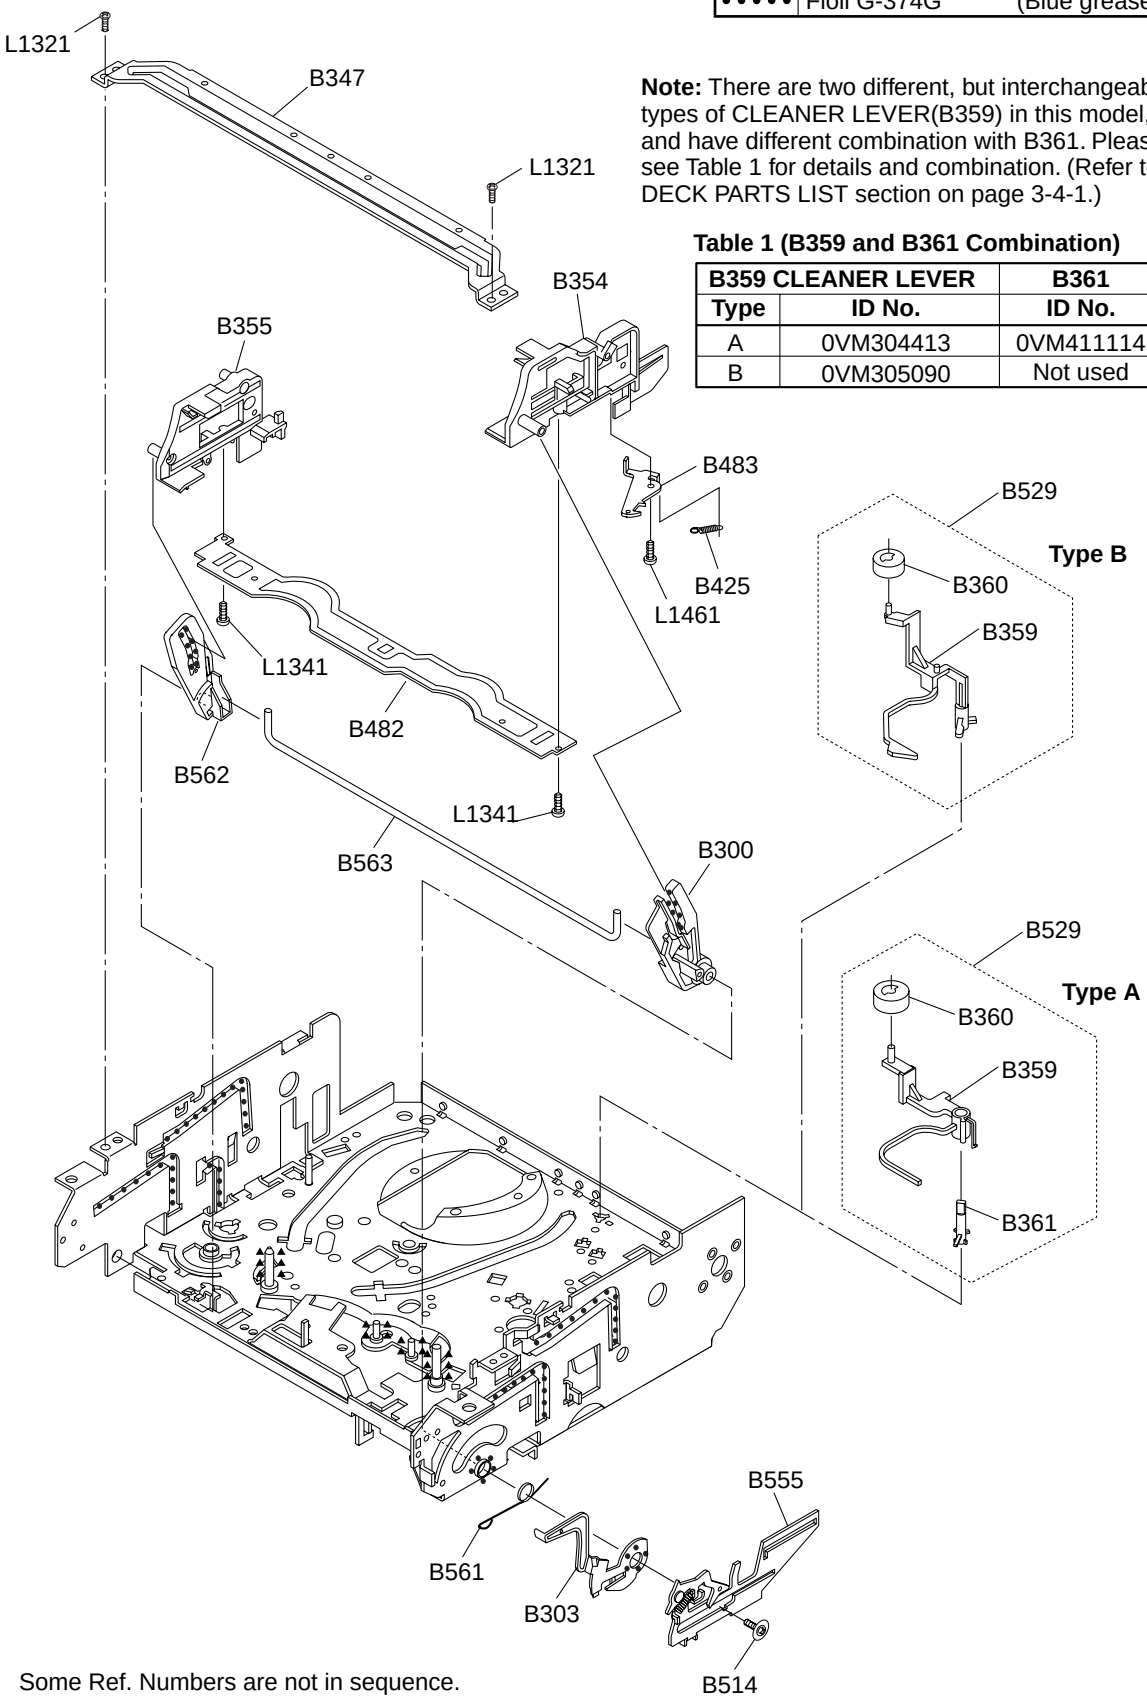

Note: There are two different, but interchangeable types of CLEANER LEVER(B359) in this model, and have different combination with B361. Please see Table 1 for details and combination. (Refer to DECK PARTS LIST section on page 3-4-1.)

Table 1 (B359 and B361 Combination)

B359 CLEANER LEVER		B361
Type	ID No.	ID No.
A	0VM304413	0VM411114
B	0VM305090	Not used

Some Ref. Numbers are not in sequence.

MECHANICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a ⚠ have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTES:

1. Parts that are not assigned part numbers (---------) are not available.
2. Comparison Chart of Models and Marks

Model	Mark
SRC2213	A
SRC22134	B
SRC22194	C

[SRC2213/SRC22134]

Ref. No.	Mark	Description	Part No.
A1X	A	FRONT CABINET ASSEMBLY T5307UH	0EM101169
A1X	B	FRONT CABINET ASSEMBLY T5308UJ	0EM101170
A1-1	A	FRONT CABINET T5300UA	0EM000619
A1-1	B	FRONT CABINET T5308UJ	0EM101181
A1-2	A	CONTROL PLATE T5307UH	0EM301605
A1-2	B	CONTROL PLATE T5308UJ	0EM301606
A1-3	A	BRAND PLATE T5307UH:SYLVANIA	0EM407053
A1-3	B	BRAND PLATE T5308UJ:SYLVANIA	0EM407194
A1-4	A	CASSETTE DOOR T5303UD	0EM406915
A1-4	B	CASSETTE DOOR T5308UJ	0EM407195
A1-5		DOOR SPRING B5000UA or	0VM403773
		DOOR SPRING(Z10) T5200UA	0EM406687
A2	A	REAR CABINET T5303UD	0EM000604
A2	B	REAR CABINET T5308UJ	0EM101182
A3⚠	A	RATING LABEL T5307UH	----------
A3⚠	B	RATING LABEL T5308UJ	----------
A4	A	POP LABEL T5307UH	0EM407065
A4	B	POP LABEL T5308UJ	0EM407096
1B1	A	DECK ASSEMBLY CZD011/VM1426	N1426FT
1B1	B	DECK ASSEMBLY CZD011/VM1446	N1446FT
B1		TENSION SPRING B0080B0:EM40808	26WH006
B2		M5 CRT SCREW(B) B4000UA	0VM403923
B3		SHIELD PLATE (Z11 13V) T5300UA	0EM406843
CL802		WIRE ASSEMBLY 2P/150	WX1B5900-001
CLN551		CRT GND WIRE CRT GND	WX1L7720-001
DG601⚠		DEGAUSSING COIL F-019 or	LLBH00ZTM019
⚠		DEGAUSSING COIL AVDG016	LLBH00ZWR016
L1		SCREW, P-TIGHT 4X18 BIND HEAD +	GBMP4180
L4		SCREW, P-TIGHT 3X10 BIND HEAD	GBUP3100
SP801		SPEAKER S08F02B or	DSD0808XQ010
		SPEAKER J-F097-C5	DSD0808DCP01
TB1		TRAY CHASSIS T5300UA	0EM000588
TB2		TOP SHIELD T5300UA	0EM301573
TB8		SPEAKER HOLDER T5100UA	0EM201157B
TB10		RCA HOLDER T5300UA	0EM406869
TB11		CLOTH(10X30XT0.5) B5900UA	0EM404486
TB23		TRAY COVER TD250UA	0EM406459
TL1		SCREW, P-TIGHT 3X12 WASHER HEAD+	GCMP3120
TL3		SCREW, S-TIGHT 3X4 BIND HEAD+	GBMS3040
TL13		SCREW, B-TIGHT M3X8 BIND HEAD+	GBMB3080
TL14		SCREW, B-TIGHT M3X8 BIND HEAD+	GBMB3080
TL15		SCREW TAPPING M4X14	DBU14140
TL16		SCREW, P-TIGHT 3X10 BIND HEAD+	GBMP3100
TL17		SCREW, P-TIGHT M3X10 WASHER HEAD+	GCMP3100
PACKING			
S1	A	CARTON T5307UH	0EM407066
S1	B	CARTON T5308UJ	0EM407050
S2		STYROFOAM TOP ASSEMBLY T5300UA	0EM406844
S3		STYROFOAM BOTTOM ASSEMBLY T5300UA	0EM406845
S4	A	SERIAL NO. LABEL T5307UH	0EM407068
S4	B	SERIAL NO. LABEL T5308UJ	0EM407098
S6		SET SHEET B5506UG:800X1500	0EM402369
ACCESSORIES			
X1		POLYETHYLENE BAG B5310UL	Z223380
X2⚠	A	OWNER'S MANUAL T5307UH	0EMN01904
X2⚠	B	OWNER'S MANUAL T5308UJ	0EMN01907
X3	A	REMOCON UNIT 512/ERC001/N0154UD or	N0154UD
	A	REMOCON UNIT 512/ERC001/N0123UD	N0123UD
X3	B	REMOCON UNIT 512/ERC001/NE109UD	NE109UD
X4		DRY BATTERY R6P UM3 or	XB0M451GH001
		DRY BATTERY R6P(AR)2PX or	XB0M451HU002
		DRY BATTERY R6P(AR)2P X ICI or	XB0M451HU003
		DRY BATTERY(SUNRISE) R6SSE/2S or	XB0M451MS002
		DRY BATTERY R6P/2S	XB0M451T0001
X5		ROD ANTENNA T5200UA or	0EMN01755
		ROD ANTENNA L7720UA:NTSC W/COO or	0EMN00673
		ROD ANTENNA T5000UA	0EMN01599
Note: A number of different CRTs (V501) may be used in these models. Each CRT is used in combination with a specific deflection yoke (L551). Refer to Table 1 and the following parts list for details.			
CRT TYPE A			
L551⚠		DEFLECTION YOKE LLBY00ZSY005	LLBY00ZSY005
V501⚠		CRT A34AGT13X	TCRT190CP036
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE B			
L551⚠		DEFLECTION YOKE KDY3GDA82X	LLBY00ZMS011
V501⚠		CRT A34AGT13X	TCRT190CP036
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE C			
L551⚠		DEFLECTION YOKE LLBY00ZSY002	LLBY00ZSY002
V501⚠		CRT A34KQW42X	TCRT190SM013
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001

Ref. No.	Mark	Description	Part No.
CRT TYPE D			
L551⚠		DEFLECTION YOKE CDY-M1456S	LLBY00ZQS008
V501⚠		CRT A34KQW42X	TCRT190SM013
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE E			
L551⚠		DEFLECTION YOKE CDY-M1422F	LLBY00ZQS001
V501⚠		CRT A34JLL90X(W)	TCRT190QS015
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE F			
L551⚠		DEFLECTION YOKE CDY-M1455F	LLBY00ZQS007
V501⚠		CRT A34LRQ90X(VW)	TCRT190P7003
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE G			
L551⚠		DEFLECTION YOKE LLBY00ZSY002	LLBY00ZSY002
V501⚠		CRT A34KPU02XX	TCRT190GS016
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE H			
L551⚠		DEFLECTION YOKE ST14PWRF01	LLBY00ZSAM01
V501⚠		CRT A34LEX10X	TCRT190SAM01
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE I			
L551⚠		DEFLECTION YOKE LLBY00ZSY002	LLBY00ZSY002
V501⚠		CRT A34JQQ093X	TCRT190MS010
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE J			
L551⚠		DEFLECTION YOKE KDY3GCB82X	LLBY00ZMS018
V501⚠		CRT A34JQQ093X	TCRT190MS010
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
CRT TYPE K			
L551⚠		DEFLECTION YOKE KDY3GC734X	LLBY00ZMS006
V501⚠		CRT A34KQW42X	TCRT190SM013
V501-1		C.P.MAGNET JH225-FN-00	XM04000BV003
V501-2		WEDGE FT-00110W or	XV10000T4001
		WEDGE DB25SR	XV10000D9001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001

[SRC22194]

Ref. No.	Mark	Description	Part No.
A1X		FRONT CABINET ASSEMBLY T7308UJ	0EM101173
A1-1		FRONT CABINET T7300UA	0EM000616
A1-2		CONTROL PLATE T7308UJ	0EM301611
A1-3		BRAND PLATE T5307UH:SYLVANIA	0EM407053
A1-4		CASSETTE DOOR T5303UD	0EM406915
A1-5		DOOR SPRING B5000UA or	0VM403773
		DOOR SPRING(Z10) T5200UA	0EM406687
A1-6		CLOTH(4X7XT0.7) T5000UA	0EM404974
A2		REAR CABINET T7303UD	0EM000614
A3⚠		RATING LABEL T7308UJ	----------
A4		POP LABEL T7308UJ	0EM407241
1B1		DECK ASSEMBLY CZD011/VM1446	N1446FT
B1		TENSION SPRING B0080B0:EM40808	26WH006
B2		CRT MOUNTING SCREW B0030U1:K42419	8A00083
B3		SHIELD PLATE (Z11 13V) T5300UA	0EM406843
B4⚠		DEGAUSS HOLDER L9800UA	0EM404845
B5		CLOTH 190X15XT0.5	TS7623
B11		CLOTH(10X30XT0.5) B5900UA	0EM404486
CL802		WIRE ASSEMBLY 2P/150	WX1B5900-001
CLN551 ⚠		CRT WIRE WX1T7000-005	WX1T7000-005
DG601⚠		DEGAUSSING COIL F-020 or	LLBH00ZTM020
⚠		DEGAUSSING COIL AVDG015	LLBH00ZWR015
DS1		SHEET, POLYETHYLENE	0VM301906
L1		SCREW, P-TIGHT 4X18 BIND HEAD +	GBMP4180
L4		SCREW, ASSEMBLED 12:M3X14	0EM404416
SP801		SPEAKER S08F02B or	DSD0808XQ010
		SPEAKER J-F097-C5	DSD0808DCP01
TB1		TRAY CHASSIS T5300UA	0EM000588
TB2		TOP SHIELD T5300UA	0EM301573
TB10		RCA HOLDER T5300UA	0EM406869
TB22⚠		19V CHASSIS NO. LABEL TJ T7300UA	0EM406881
TB23		TRAY COVER TD250UA	0EM406459
TL1		SCREW, P-TIGHT 3X12 WASHER HEAD+	GCMP3120
TL3		SCREW, S-TIGHT 3X4 BIND HEAD+	GBMS3040
TL13		SCREW, B-TIGHT M3X8 BIND HEAD+	GBMB3080
TL14		SCREW, B-TIGHT M3X8 BIND HEAD+	GBMB3080
TL15		SCREW TAPPING M4X14	DBU14140
TL16		SCREW, P-TIGHT 3X10 BIND HEAD+	GBMP3100
TL17		SCREW, P-TIGHT M3X10 WASHER HEAD+	GCMP3100
PACKING			
S1		CARTON T7308UJ	0EM407102
S2		STYROFOAM TOP ASSEMBLY T7300UA	0EM406850
S3		STYROFOAM BOTTOM ASSEMBLY T7300UA	0EM406851
S4		SERIAL NO. LABEL T7308UJ	0EM407104
S6		SET SHEET B7500UA:1000X1700	0EM402178
S14		TVCR HOLD PAD T7300UA	0EM406849
ACCESSORIES			
X1		POLYETHYLENE BAG B5310UL	Z223380
X2⚠		OWNER'S MANUAL T5308UJ	0EMN01907
X3		REMOCON UNIT 512/ERC001/N0157UD	N0157UD
X4		DRY BATTERY R6P UM3 or	XB0M451GH001
		DRY BATTERY R6P(AR)2PX or	XB0M451HU002
		DRY BATTERY R6P(AR)2P X ICI or	XB0M451HU003
		DRY BATTERY(SUNRISE) R6SSE/2S or	XB0M451MS002
		DRY BATTERY R6P/2S	XB0M451T0001

Ref. No.	Mark	Description	Part No.
Note: A number of different CRTs (V501) may be used in these models. Each CRT is used in combination with a specific deflection yoke (L551). Refer to Table 1 and the following parts list for details.			
		CRT TYPE A	
L551⚠		DEFLECTION YOKE LLBY00ZSY006	LLBY00ZSY006
V501⚠		CRT A48JLL90X	TCRT190QS009
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
		CRT TYPE B	
L551⚠		DEFLECTION YOKE CDY-M2019F	LLBY00ZQS004
V501⚠		CRT A48JLL90X	TCRT190QS009
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
		CRT TYPE C	
L551⚠		DEFLECTION YOKE LLBY00ZSY007	LLBY00ZSY007
V501⚠		CRT A48LRH93X(W)	TCRT190P7002
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
		CRT TYPE D	
L551⚠		DEFLECTION YOKE CDY-M2023F	LLBY00ZQS005
V501⚠		CRT A48LRH93X(W)	TCRT190P7002
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
		CRT TYPE E	
L551⚠		DEFLECTION YOKE 330P510A37	LLBY00ZTHA01
V501⚠		CRT A48LGS30X	TCRT190THA01
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
		CRT TYPE F	
L551⚠		DEFLECTION YOKE LLBY00ZSY008	LLBY00ZSY008
V501⚠		CRT A48LVL095X	TCRT190MS011
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
		CRT TYPE G	
L551⚠		DEFLECTION YOKE KDY3MDD18X	LLBY00ZMS019
V501⚠		CRT A48LVL095X	TCRT190MS011
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001
		CRT TYPE H	
L551⚠		DEFLECTION YOKE KDY3MDD74X	LLBY00ZMS024
V501⚠		CRT A48AKH13X01 K or	TCRT190CP043
⚠		CRT:MINI BARE CHUNGHWA T7300UA or	0EDM06903
⚠		CRT A48AKH13X	TCRT190CP044
V501-1		C.P.MAGNET JH225-014	XM04000BV009
V501-2		WEDGE FT-00110W	XV10000T4001
V501-3		RUBBER MAGNET 20X10X1.2	XM05000BV001

Table 1 (V501 and L551 Combination)

Note 1: Purity and Convergence Adjustments must be performed following CRT replacement. Refer to Electrical Adjustment Instructions.

Note2: Please confirm CRT Type No. on the CRT Warning Label which is located on the CRT. Then See the Table 1 for V501 and L551 combination chart.
Please refer this CRT, Deflection Yoke combination chart for parts order.

[SRC2213/SRC22134]

V501: CRT Type No.	V501: CRT Part No.	L551: Deflection Yoke Part No.
CRT A34AGT13X	TCRT190CP036	LLBY00ZSY005
CRT A34AGT13X	TCRT190CP036	LLBY00ZMS011
CRT A34KQW42X	TCRT190SM013	LLBY00ZSY002
CRT A34KQW42X	TCRT190SM013	LLBY00ZQS008
CRT A34JLL90X(W)	TCRT190QS015	LLBY00ZQS001
CRT A34LRQ90X(VW)	TCRT190P7003	LLBY00ZQS007
CRT A34KPU02XX	TCRT190GS016	LLBY00ZSY002
CRT A34LEX10X	TCRT190SAM01	LLBY00ZSAM01
CRT A34JQQ093X	TCRT190MS010	LLBY00ZSY002
CRT A34JQQ093X	TCRT190MS010	LLBY00ZMS018
CRT A34KQW42X	TCRT190SM013	LLBY00ZMS006

[SRC22194]

V501: CRT Type No.	V501: CRT Part No.	L551: Deflection Yoke Part No.
CRT A48JLL90X	TCRT190QS009	LLBY00ZSY006
CRT A48JLL90X	TCRT190QS009	LLBY00ZQS004
CRT A48LRH93X(W)	TCRT190P7002	LLBY00ZSY007
CRT A48LRH93X(W)	TCRT190P7002	LLBY00ZQS005
CRT A48LGS30X	TCRT190THA01	LLBY00ZTHA01
CRT A48LVL095X	TCRT190MS011	LLBY00ZSY008
CRT A48LVL095X	TCRT190MS011	LLBY00ZMS019
CRT A48AKH13X01 K	TCRT190CP043	LLBY00ZMS024
CRT:MINI BARE CHUNG-HWA T7300UA	0EDM06903	
CRT A48AKH13X	TCRT190CP044	

CRT Warning Label Location

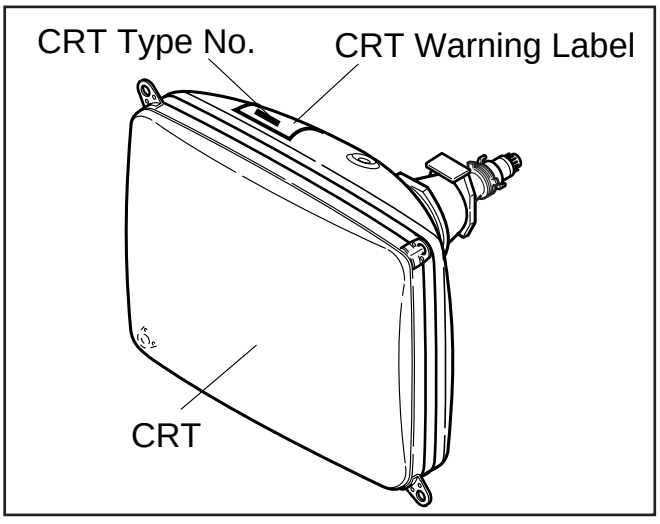

ELECTRICAL PARTS LIST

PRODUCT SAFETY NOTE: Products marked with a ⚠ have special characteristics important to safety. Before replacing any of these components, read carefully the product safety notice in this service manual. Don't degrade the safety of the product through improper servicing.

NOTES:

1. Parts that are not assigned part numbers (---------) are not available.
2. Tolerance of Capacitors and Resistors are noted with the following symbols.

C.....±0.25%	D.....±0.5%	F.....±1%
G.....±2%	J.....±5%	K.....±10%
M.....±20%	N.....±30%	Z.....+80/-20%

3. Comparison Chart of Models and Marks

Model	Mark
SRC2213	A
SRC22134	B
SRC22194	C

MMA CBA

Ref. No.	Mark	Description	Part No.
	A	MMA CBA (MAIN+CRT+SENSOR)	0ESA04724
	B	MMA CBA (MAIN+CRT+SENSOR)	0ESA04812
	C	MMA CBA (MAIN+CRT+SENSOR Consists of the followings	0ESA04667
		MAIN CBA (MMA-A) CRT CBA (MMA-B) SENSOR CBA	---------- ---------- 0ESA04524

MAIN CBA

Ref. No.	Mark	Description	Part No.
		MAIN CBA (MMA-A) Consists of the followings	----------
		CAPACITORS	
C001	B	CERAMIC CAP.(AX) Y M 0.01µF/16V	CCA1CMT0Y103
C002		CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C003		CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C004		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/16V	CZM1CZB0F103
C005		ELECTROLYTIC CAP. 47µF/6.3V M H7	CE0KMAVSL470
C006		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C007		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JKB0B103
C205		CERAMIC CAP.(AX) Y M 0.01µF/16V	CCA1CMT0Y103
C207		ELECTROLYTIC CAP. 47µF/6.3V M H7	CE0KMAVSL470
C208		ELECTROLYTIC CAP. 47µF/6.3V M H7	CE0KMAVSL470
C209		CHIP CERAMIC CAP. B K 0.022µF/50V or	CHD1JKB0B223
		CHIP CERAMIC CAP. B K 0.022µF/25V	CHD1EKB0B223
C210		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C212		CHIP CERAMIC CAP.(MELF) SL J 22pF/50V	CZM1JJBSL220
C213		CHIP CERAMIC CAP.(MELF) SL J 22pF/50V	CZM1JJBSL220
C214		ELECTROLYTIC CAP. 100µF/6.3V H7	CE0KMAVSL101
C216		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/16V	CZM1CZB0F103
C217		CHIP CERAMIC CAP.(MELF) SL D 10pF/50V	CZM1JDBSL100
C218		CHIP CERAMIC CAP.(MELF) SL J 15pF/50V	CZM1JJBSL150
C220		ELECTROLYTIC CAP. 47µF/6.3V M H7	CE0KMAVSL470
C221		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/16V	CZM1CZB0F103
C222		CHIP CERAMIC CAP.(MELF) Y K 2200pF/35V	CZM1GKB0Y222
C223		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C224		CHIP CERAMIC CAP.(MELF) Y K 1000pF/35V	CZM1GKB0Y102
C225		CHIP CERAMIC CAP.(MELF) W K 560pF/50V	CZM1JKB0B561
C231		CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C232		CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C235		CERAMIC CAP.(AX) Y M 0.01µF/16V	CCA1CMT0Y103
C236		CERAMIC CAP.(AX) F Z 0.047µF/16V	CCA1CZTFZ473
C238		CHIP CERAMIC CAP.(MELF) Y K 1000pF/35V	CZM1GKB0Y102
C239		ELECTROLYTIC CAP. 22µF/50V M or	CE1JMASDL220
		ELECTROLYTIC CAP. 22µF/50V M	CE1JMASTL220
C240		CHIP CERAMIC CAP.(MELF) W K 560pF/50V	CZM1JKB0B561
C241		CHIP CERAMIC CAP.(MELF) Y K 4700pF/16V	CZM1CKB0Y472
C242		CHIP CERAMIC CAP.(MELF) Y K 1000pF/35V	CZM1GKB0Y102
C243		ELECTROLYTIC CAP. 22µF/16V M LL or	CE1CMASLL220
		ELECTROLYTIC CAP. 22µF/16V M LL	CE1CMASLH220
C244		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/16V	CZM1CZB0F103
C245		ELECTROLYTIC CAP. 47µF/25V M or	CE1EMASDL470
		ELECTROLYTIC CAP. 47µF/25V M	CE1EMASTL470
C246		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/16V	CZM1CZB0F103
C247		ELECTROLYTIC CAP. 22µF/50V M or	CE1JMASDL220
		ELECTROLYTIC CAP. 22µF/50V M	CE1JMASTL220
C251		CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZB0F104
		CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZB0F104
C252	A,B	ELECTROLYTIC CAP. 220µF/16V M or	CE1CMASDL221
	A,B	ELECTROLYTIC CAP. 220µF/16V M	CE1CMASTL221
C252	C	ELECTROLYTIC CAP. 470µF/16V M or	CE1CMASDL471
	C	ELECTROLYTIC CAP. 470µF/16V M	CE1CMASTL471
C253		CERAMIC CAP.(AX) B K 100pF/50V	CCA1JKT0B101
C255		ELECTROLYTIC CAP. 100µF/10V M or	CE1AMASDL101
		ELECTROLYTIC CAP. 100µF/10V M	CE1AMASTL101
C256	C	ELECTROLYTIC CAP. 470µF/16V M or	CE1CMASDL471
	C	ELECTROLYTIC CAP. 470µF/16V M	CE1CMASTL471
C257		CHIP CERAMIC CAP.(MELF) Y K 1000pF/35V	CZM1GKB0Y102
C301		ELECTROLYTIC CAP. 1µF/50V M LL or	CE1JMASLL010
		ELECTROLYTIC CAP. 1µF/50V LL	CE1JMASLH1R0
C302		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JKB0B103
C304		ELECTROLYTIC CAP. 220µF/16V M or	CE1CMASDL221
		ELECTROLYTIC CAP. 220µF/16V M	CE1CMASTL221
C305		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JKB0B103
C306		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0

Ref. No.	Mark	Description	Part No.
C307		ELECTROLYTIC CAP. 100µF/10V M or	CE1AMASDL101
		ELECTROLYTIC CAP. 100µF/10V M	CE1AMASTL101
C308	A,B	CHIP CERAMIC CAP. CH J 47pF/50V	CHD1JJBCH470
C308	C	CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C309	A,B	CHIP CERAMIC CAP. CH J 47pF/50V	CHD1JJBCH470
C309	C	CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C310	A,B	CHIP CERAMIC CAP. CH J 47pF/50V	CHD1JJBCH470
C310	C	CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C311		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JKB0B103
C314		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0
C317		CHIP CERAMIC CAP. B K 0.022µF/50V or	CHD1JKB0B223
		CHIP CERAMIC CAP. B K 0.022µF/25V	CHD1EKB0B223
C318		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0
C319		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0
C320		ELECTROLYTIC CAP. 100µF/10V M or	CE1AMASDL101
		ELECTROLYTIC CAP. 100µF/10V M	CE1AMASTL101
C322		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0
C323		ELECTROLYTIC CAP. 470µF/10V M or	CE1AMASDL471
		ELECTROLYTIC CAP. 470µF/10V M	CE1AMASTL471
C325		ELECTROLYTIC CAP. 2.2µF/50V M LL or	CE1JMASLL2R2
		ELECTROLYTIC CAP. 2.2µF/50V LL	CE1JMASLH2R2
C326		FILM CAP.(P) 0.1µF/50V J or	CMA1JJS00104
		FILM CAP.(P) 0.1µF/50V J	CA1J104MS029
C328		CERAMIC CAP.(AX) X M 3300pF/16V	CCA1CMT0X332
C329		ELECTROLYTIC CAP. 4.7µF/50V M or	CE1JMASDL4R7
		ELECTROLYTIC CAP. 4.7µF/50V M	CE1JMASTL4R7
C330		ELECTROLYTIC CAP. 0.47µF/50V M or	CE1JMASDLR47
		ELECTROLYTIC CAP. 0.47µF/50V M	CE1JMASTLR47
C331		CHIP CERAMIC CAP. CH J 680pF/50V	CHD1JJBCH681
C332		CHIP CERAMIC CAP. B K 0.047µF/50V or	CHD1JKB0B473
		CHIP CERAMIC CAP. B K 0.047µF/25V	CHD1EKB0B473
C333		FILM CAP.(P) 0.047µF/50V J or	CMA1JJS00473
		FILM CAP.(P) 0.047µF/50V J	CA1J473MS029
C335		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C337		ELECTROLYTIC CAP. 100µF/16V M or	CE1CMASDL101
		ELECTROLYTIC CAP. 100µF/16V M	CE1CMASTL101
C343		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0
C345		CHIP CERAMIC CAP. CH J 47pF/50V	CHD1JJBCH470
C346		CHIP CERAMIC CAP. CH J 47pF/50V	CHD1JJBCH470
C410		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C411		ELECTROLYTIC CAP. 100µF/6.3V H7	CE0KMAVSL101
C412		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/ 16V	CZM1CZB0F103
C413		CHIP CERAMIC CAP.(MELF) W K 390pF/ 50V	CZM1JKB0B391
C414		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C416		CHIP CERAMIC CAP.(MELF) B K 180pF/ 50V	CZM1JKB0B181
C417		CHIP CERAMIC CAP.(MELF) SL J 22pF/ 50V	CZM1JJBSL220
C418		PCB JUMPER D0.6-P5.0	JW5.0T
C420		ELECTROLYTIC CAP. 22µF/16V M H7	CE1CMAVSL220

Ref. No.	Mark	Description	Part No.
C421		ELECTROLYTIC CAP. 4.7µF/50V M H7	CE1JMAVSL4R7
C423		ELECTROLYTIC CAP. 4.7µF/50V M H7	CE1JMAVSL4R7
C424		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C425		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C426		ELECTROLYTIC CAP. 22µF/16V M H7	CE1CMAVSL220
C427		CERAMIC CAP.(AX) Y M 0.01µF/16V	CCA1CMT0Y103
C428		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/ 16V	CZM1CZB0F103
C429		ELECTROLYTIC CAP. 47µF/6.3V M H7	CE0KMAVSL470
C430		CHIP CERAMIC CAP. B K 0.022µF/50V or	CHD1JKB0B223
		CHIP CERAMIC CAP. B K 0.022µF/25V	CHD1EKB0B223
C431		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C433	B	CHIP CERAMIC CAP. CH J 270pF/50V	CHD1JJBCH271
C434		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C435		ELECTROLYTIC CAP. 2.2µF/50V M H7	CE1JMAVSL2R2
C436		CHIP CERAMIC CAP.(MELF) Y K 4700pF/ 16V	CZM1CKB0Y472
C438		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C439		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/ 16V	CZM1CZB0F103
C440		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C441		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C442		CHIP CERAMIC CAP. B K 0.047µF/50V or	CHD1JKB0B473
		CHIP CERAMIC CAP. B K 0.047µF/25V	CHD1EKB0B473
C443		CHIP CERAMIC CAP. B K 0.047µF/50V or	CHD1JKB0B473
		CHIP CERAMIC CAP. B K 0.047µF/25V	CHD1EKB0B473
C444		ELECTROLYTIC CAP. 22µF/16V M H7	CE1CMAVSL220
C445		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/ 16V	CZM1CZB0F103
C446		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C447		CHIP CERAMIC CAP.(MELF) F Z 0.01µF/ 16V	CZM1CZB0F103
C448		CERAMIC CAP.(AX) Y M 0.01µF/16V	CCA1CMT0Y103
C449		CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZB0F104
		CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZB0F104
C450	A,C	CHIP CERAMIC CAP. CH J 220pF/50V	CHD1JJBCH221
C450	B	CHIP CERAMIC CAP. CH J 270pF/50V	CHD1JJBCH271
C492		ELECTROLYTIC CAP. 1µF/50V M H7	CE1JMAVSL1R0
C552		FILM CAP.(P) 0.047µF/50V J or	CMA1JJS00473
		FILM CAP.(P) 0.047µF/50V J	CA1J473MS029
C553		ELECTROLYTIC CAP. 2.2µF/50V M LL or	CE1JMASLL2R2
		ELECTROLYTIC CAP. 2.2µF/50V LL	CE1JMASLH2R2
C555		ELECTROLYTIC CAP. 47µF/35V M or	CE1GMASDL470
		ELECTROLYTIC CAP. 47µF/35V M	CE1GMASTL470
C556		ELECTROLYTIC CAP. 1000µF/25V M or	CE1EMZPDL102
		ELECTROLYTIC CAP. 1000µF/25V M	CE1EMZPTL102
C558		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JKB0B103
C559	A,B	ELECTROLYTIC CAP. 330µF/35V M or	CE1GMZPDL331
	A,B	ELECTROLYTIC CAP. 330µF/35V M	CE1GMZPTL331
C559	C	ELECTROLYTIC CAP. 470µF/35V M or	CE1GMZPDL471
	C	ELECTROLYTIC CAP. 470µF/35V M	CE1GMZPTL471
C560		FILM CAP.(P) 0.01µF/50V J or	CMA1JJS00103
		FILM CAP.(P) 0.01µF/50V J	CA1J103MS029
C571⚠	A,B	P.P. CAP 0.33µF/200V J or	CA2D334VC013
⚠	A,B	PP CAP. 0.33µF/250V J	CT2E334MS041
C571⚠	C	P.P.CAP 0.47µF/200 J or	CA2D474VC012
⚠	C	PP CAP. 0.47µF/250V J	CT2E474MS041
C574⚠		ELECTROLYTIC CAP. 4.7µF/250V M or	CE2EMASDL4R7
⚠		ELECTROLYTIC CAP. 4.7µF/250V M	CE2EMASTL4R7
C577		FILM CAP.(P) 0.01µF/50V J or	CMA1JJS00103
		FILM CAP.(P) 0.01µF/50V J	CA1J103MS029
C578		ELECTROLYTIC CAP. 47µF/25V M or	CE1EMASDL470

Ref. No.	Mark	Description	Part No.
		ELECTROLYTIC CAP. 47µF/25V M	CE1EMASTL470
C580⚠	A,B	P.P. CAP 0.0082µF/1.6K J or	CA3C822VC010
⚠	A,B	PP CAP. 0.0082µF/1.6KV J or	CT3C822MS039
⚠	A,B	PP CAP. 0.0082µF/1.6KV J	CBH3CJQ00822
C580⚠	C	P.P. CAP 0.01µF/1.6K J or	CA3C103VC010
⚠	C	PP CAP. 0.01µF/1.6KV J or	CT3C103MS039
⚠	C	PP CAP. 0.01µF/1.6KV J	CBH3CJQ00103
C581⚠	C	CERAMIC CAP. BN 1000pF/2KV or	CCD3DKA0B102
⚠	C	CERAMIC CAP. LB 1000pF/2KV or	CA3D102KG004
⚠	C	CERAMIC CAP. 1000pF/2KV	CA3D102PAN04
C584⚠		ELECTROLYTIC CAP. 1µF/160V M or	CE2CMASDL1R0
⚠		ELECTROLYTIC CAP. 1µF/160V M	CE2CMASTL010
C591⚠		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
⚠		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
⚠		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0
C592⚠		ELECTROLYTIC CAP. 47µF/35V M or	CE1GMASDL470
⚠		ELECTROLYTIC CAP. 47µF/35V M	CE1GMASTL470
C594		ELECTROLYTIC CAP. 100µF/160V M or	CE2CMZPDL101
		ELECTROLYTIC CAP. 100µF/160V M	CE2CMZZTL101
C602⚠		SAFETY CAP. 4700pF/250V KX	CA2E472MR050
C604⚠		SAFETY CAP. 1000pF/250V KX	CA2E102MR050
C605⚠		METALLIZED FILM CAP. 0.1µF/250V or	CT2E104MS037
⚠		FILM CAP.(MP) 0.1µF/250V K	CT2E104DC011
C606		CERAMIC CAP. F Z 0.01µF/500V or	CCD2JZD0F103
		CERAMIC CAP. 0.01µF/AC250V	CCD2EZA0F103
C607		CERAMIC CAP. F Z 0.01µF/500V or	CCD2JZD0F103
		CERAMIC CAP. 0.01µF/AC250V	CCD2EZA0F103
C608		CERAMIC CAP. F Z 0.01µF/500V or	CCD2JZD0F103
		CERAMIC CAP. 0.01µF/AC250V	CCD2EZA0F103
C609		CERAMIC CAP. F Z 0.01µF/500V or	CCD2JZD0F103
		CERAMIC CAP. 0.01µF/AC250V	CCD2EZA0F103
C610⚠	A,B	ELECTROLYTIC CAPACIT0R 150µF/200V or	CA2D151S6012
⚠	A,B	ALMINIUM ELECTROLYTIC CAP150µF/ 200V	CA2D151NC088
C610⚠	C	ELECTROLYTIC CAP. 220µF/200V SL X or	CA2D221S6003
⚠	C	ELECTROLYTIC CAP. 220µF/200V	CA2D221NC088
C611	A,B	CERAMIC CAP. BN 680pF/2KV or	CCD3DKA0B681
	A,B	CERAMIC CAP. LB 680pF/2K or	CA3D681KG004
	A,B	CERAMIC CAP. 680pF/2KV	CA3D681PAN04
C611	C	CERAMIC CAP. BN 820pF/2KV or	CCD3DKA0B821
	C	CERAMIC CAP. LB 820pF/2KV or	CA3D821KG004
	C	CERAMIC CAP. 820pF/2KV	CA3D821PAN04
C612		FILM CAP.(P) 0.033µF/50V J or	CMA1JJS00333
		FILM CAP.(P) 0.033µF/50V J	CA1J333MS029
C613	A,B	FILM CAP.(P) 0.0012µF/50V J or	CMA1JJS00122
	A,B	FILM CAP.(P) 0.0012µF/50V J	CA1J122MS029
C613	C	FILM CAP.(P) 0.001µF/50V J or	CMA1JJS00102
	C	FILM CAP.(P) 0.001µF/50V J	CA1J102MS029
C614⚠	A,B	FILM CAP.(P) 0.056µF/50V J or	CMA1JJS00563
⚠	A,B	FILM CAP.(P) 0.056µF/50V J	CA1J563MS029
C614⚠	C	FILM CAP.(P) 0.082µF/50V J or	CMA1JJS00823
⚠	C	FILM CAP.(P) 0.082µF/50V J	CA1J823MS029
C615	A,B	CERAMIC CAP. BN 680pF/2KV or	CCD3DKA0B681
	A,B	CERAMIC CAP. LB 680pF/2K or	CA3D681KG004
	A,B	CERAMIC CAP. 680pF/2KV	CA3D681PAN04
C615	C	CERAMIC CAP. BN 820pF/2KV or	CCD3DKA0B821
	C	CERAMIC CAP. LB 820pF/2KV or	CA3D821KG004
	C	CERAMIC CAP. 820pF/2KV	CA3D821PAN04
C616⚠		ELECTROLYTIC CAP. 100µF/160V M or	CE2CMZPDL101
⚠		ELECTROLYTIC CAP. 100µF/160V M	CE2CMZZTL101

Ref. No.	Mark	Description	Part No.
C617⚠		ELECTROLYTIC CAP. 470µF/35V M or	CE1GMZPDL471
⚠		ELECTROLYTIC CAP. 470µF/35V M	CE1GMZPTL471
C618⚠		ELECTROLYTIC CAP. 1000µF/16V M or	CE1CMZPDL102
⚠		ELECTROLYTIC CAP. 1000µF/16V M	CE1CMZPTL102
C619⚠	A,B	ELECTROLYTIC CAP. 470µF/16V M or	CE1CMASDL471
⚠	A,B	ELECTROLYTIC CAP. 470µF/16V M	CE1CMASTL471
C619⚠	C	ELECTROLYTIC CAP. 1000µF/16V M or	CE1CMZPDL102
⚠	C	ELECTROLYTIC CAP. 1000µF/16V M	CE1CMZPTL102
C620⚠		ELECTROLYTIC CAP. 1000µF/16V M or	CE1CMZPDL102
⚠		ELECTROLYTIC CAP. 1000µF/16V M	CE1CMZPTL102
C622	A,B	CERAMIC CAP.(AX) SL J 68pF/50V	CCA1JJTSL680
C622	C	CERAMIC CAP.(AX) B K 220pF/50V	CCA1JKT0B221
C623	A,B	FILM CAP.(P) 0.01µF/50V J or	CMA1JJS00103
	A,B	FILM CAP.(P) 0.01µF/50V J	CA1J103MS029
C624		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JKB0B103
C625		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL1R0
		ELECTROLYTIC CAP. 1µF/50V M or	CE1JMASDL010
		ELECTROLYTIC CAP. 1µF/50V M	CE1JMASTL1R0
C626		ELECTROLYTIC CAP. 4.7µF/50V M or	CE1JMASDL4R7
		ELECTROLYTIC CAP. 4.7µF/50V M	CE1JMASTL4R7
C628	A,B	ELECTROLYTIC CAP. 10µF/50V M or	CE1JMASDL100
	A,B	ELECTROLYTIC CAP. 10µF/50V M	CE1JMASTL100
C628	C	ELECTROLYTIC CAP. 470µF/10V M or	CE1AMASDL471
	C	ELECTROLYTIC CAP. 470µF/10V M	CE1AMASTL471
C629		ELECTROLYTIC CAP. 47µF/25V M or	CE1EMASDL470
		ELECTROLYTIC CAP. 47µF/25V M	CE1EMASTL470
C630		ELECTROLYTIC CAP. 100µF/10V M or	CE1AMASDL101
		ELECTROLYTIC CAP. 100µF/10V M	CE1AMASTL101
C631		ELECTROLYTIC CAP. 220µF/6.3V M or	CE0KMASDL221
		ELECTROLYTIC CAP. 220µF/6.3V M	CE0KMASTL221
C632		ELECTROLYTIC CAP. 100µF/16V M or	CE1CMASDL101
		ELECTROLYTIC CAP. 100µF/16V M	CE1CMASTL101
C633		ELECTROLYTIC CAP. 220µF/16V M or	CE1CMASDL221
		ELECTROLYTIC CAP. 220µF/16V M	CE1CMASTL221
C634		ELECTROLYTIC CAP. 100µF/10V M or	CE1AMASDL101
		ELECTROLYTIC CAP. 100µF/10V M	CE1AMASTL101
C635		ELECTROLYTIC CAP. 47µF/25V M or	CE1EMASDL470
		ELECTROLYTIC CAP. 47µF/25V M	CE1EMASTL470
C636		CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZB0F104
		CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZB0F104
C640		CERAMIC CAP.(AX) B K 2200pF/50V	CA1J222TU011
C801		ELECTROLYTIC CAP. 220µF/16V M or	CE1CMASDL221
		ELECTROLYTIC CAP. 220µF/16V M	CE1CMASTL221
C802		ELECTROLYTIC CAP. 470µF/16V M or	CE1CMASDL471
		ELECTROLYTIC CAP. 470µF/16V M	CE1CMASTL471
C803		ELECTROLYTIC CAP. 10µF/50V M or	CE1JMASDL100
		ELECTROLYTIC CAP. 10µF/50V M	CE1JMASTL100
C804		ELECTROLYTIC CAP. 0.22µF/50V M or	CE1JMASDLR22
		ELECTROLYTIC CAP. 0.22µF/50V M	CE1JMASTLR22
C805		CHIP CERAMIC CAP. B K 4700pF/50V	CHD1JKB0B472
C853	A,C	CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZB0F104
	A,C	CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZB0F104
C853	B	CHIP CERAMIC CAP. B K 0.033µF/50V or	CHD1JKB0B333
	B	CHIP CERAMIC CAP. B K 0.033µF/25V	CHD1EKB0B333
C854		ELECTROLYTIC CAP. 22µF/16V M H7	CE1CMAVSL220
C856		CHIP CERAMIC CAP. F Z 0.1µF/50V or	CHD1JZB0F104
		CHIP CERAMIC CAP. F Z 0.1µF/25V	CHD1EZB0F104
C857		ELECTROLYTIC CAP. 33µF/10V H7	CE1AMAVSL330
C858		ELECTROLYTIC CAP. 4.7µF/50V M H7	CE1JMAVSL4R7
C859		CHIP CERAMIC CAP. B K 0.015µF/50V	CHD1JKB0B153

Ref. No.	Mark	Description	Part No.
C860		CHIP CERAMIC CAP.(MELF) Y K 1000pF/ 35V	CZM1GKB0Y102
C861		CHIP CERAMIC CAP. CH J 100pF/50V	CHD1JJBCH101
C862		CHIP CERAMIC CAP. B K 0.01µF/50V	CHD1JKB0B103
C863		ELECTROLYTIC CAP. 10µF/25V M H7	CE1EMAVSL100
C864		ELECTROLYTIC CAP. 10µF/25V M H7	CE1EMAVSL100
C865		CHIP CERAMIC CAP.(MELF) Y K 1000pF/ 35V	CZM1GKB0Y102
C866		CHIP CERAMIC CAP.(MELF) Y K 2200pF/ 35V	CZM1GKB0Y222
C872		ELECTROLYTIC CAP. 47µF/6.3V M H7	CE0KMAVSL470
C873		ELECTROLYTIC CAP. 100µF/16V M H7	CE1CMAVSL101
C874		CERAMIC CAP. B K 470pF/100V or	CCD2AKS0B471
		CERAMIC CAP. B K 470pF/500V	CCD2JKS0B471
C875		FILM CAP.(P) 0.018µF/100V J or	CMA2AJS00183
		FILM CAP.(P) 0.018µF/50V J	CA1J183MS029
CONNECTORS			
CN303		CONNECTOR BASE, 5P TUC-P05P-B1	J3TUA05TG001
CN571		CONNECTOR BASE, 5P TV-50P-05-V3 or	J3TVC05TG002
		CONNECTOR BASE, 5P RTB-1.5-5P	J3RTC05JG001
CN601		CONNECTOR BASE, 2P TV-50P-02-V3 or	J3TVC02TG002
		CONNECTOR BASE, 2P RTB-1.5-2P	J3RTC02JG001
CN802		STRAIGHT CONNECTOR BASE 00 8283 0212 00 000 or	J383C02UG002
		STRAIGHT PIN HEADER, 2P 173981-2	1770258
DIODES			
D002		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS
D003		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS
D203		LED SIR-563ST3F P or	QPQPS1R563ST
		LED SIR-563ST3F Q	QPQQS1R563ST
D204		LED LTL-4214M1 or	NPQZLTL4214M
		LED(RED)L-FORMING LT1814G-81-FL or	NP4Z0LT1814G
		LED L-53HT or	NP4Z000L53HT
		LED LAMP 333HT/F45-50K or	NPWK333HTF45
		LED LAMP 333HT/F45-50L or	NPWL333HTF45
		LED LAMP 333HT/F45-50M	NPWM333HTF45
D215		CARBON RES. 1/4W J 680 Ω or	RCX4JATZ0681
		CARBON RES. 1/6W J 680 Ω	RCX6JATZ0681
D216		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS
D227		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D228		ZENER DIODE MTZJT-776.2B or	QDTB0MTZJ6R2
		ZENER DIODE DZ-6.2BSBT265	NDTB0DZ6R2BS
D301		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D304		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D305		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D306		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D307		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D308		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS
D310		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS
D311		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS

Ref. No.	Mark	Description	Part No.
D312		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D313		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D314		ZENER DIODE MTZJT-779.1B or	QDTB0MTZJ9R1
		ZENER DIODE DZ-9.1BSBT265	NDTB0DZ9R1BS
D401		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D552		DIODE 1N5397-B or	NDLZ001N5397
		RECTIFIER DIODE ERB12-06	QDQZ0ERB1206
D571⚠		DIODE FR154 or	NDLZ000FR154
⚠		FAST RECOVERY DIODE ERB44-02	QDPZ0ERB4402
D572⚠		DIODE FR104-B or	NDLZ000FR104
⚠		RECTIFIER DIODE 10ELS2 or	QDQZ0010ELS2
⚠		RECTIFIER DIODE ERA22-02	QDPZ0ERA2202
D584⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D585		ZENER DIODE MTZJT-775.1B or	QDTB0MTZJ5R1
		ZENER DIODE DZ-5.1BSBT265	NDTB0DZ5R1BS
D591⚠		ZENER DIODE MTZJT-7736B or	QDTB00MTZJ36
⚠		ZENER DIODE DZ-36BSBT265	NDTB00DZ36BS
D593⚠		PCB JUMPER D0.6-P5.0	JW5.0T
D595⚠		ZENER DIODE MTZJT-7720B or	QDTB00MTZJ20
⚠		ZENER DIODE DZ-20BSBT265	NDTB00DZ20BS
D596⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D597⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D598⚠		DIODE FR104-B or	NDLZ000FR104
⚠		RECTIFIER DIODE 10ELS2 or	QDQZ0010ELS2
⚠		RECTIFIER DIODE ERA22-02	QDPZ0ERA2202
D601		PCB JUMPER D0.6-P10.0	JW10.0T
D603⚠		DIODE 1N5397-B or	NDLZ001N5397
⚠		RECTIFIER DIODE ERB12-06	QDQZ0ERB1206
D604⚠		DIODE 1N5397-B or	NDLZ001N5397
⚠		RECTIFIER DIODE ERB12-06	QDQZ0ERB1206
D605⚠		DIODE 1N5397-B or	NDLZ001N5397
⚠		RECTIFIER DIODE ERB12-06	QDQZ0ERB1206
D606⚠		DIODE 1N5397-B or	NDLZ001N5397
⚠		RECTIFIER DIODE ERB12-06	QDQZ0ERB1206
D607⚠	A,B	ZENER DIODE MTZJT-7720C or	QDTC00MTZJ20
⚠	A,B	ZENER DIODE DZ-20BSCT265	NDTC00DZ20BS
D607⚠	C	ZENER DIODE MTZJT-7724C or	QDTC00MTZJ24
⚠	C	ZENER DIODE DZ-24BSCT265	NDTC00DZ24BS
D608		ZENER DIODE MTZJT-7736A or	QDTA00MTZJ36
		ZENER DIODE DZ-36BSAT265	NDTA00DZ36BS
D609⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D610		ZENER DIODE MTZJT-775.6B or	QDTB0MTZJ5R6
		ZENER DIODE DZ-5.6BSBT265	NDTB0DZ5R6BS
D611		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D613⚠	A,B	FAST RECOVERY DIODE CA201-4	QDWZ00CA2014
D613⚠		RECOVERY DIODE ERC18-04	QDZZ0ERC1804
D614⚠		DIODE FR104-B or	NDLZ000FR104
⚠		RECTIFIER DIODE 10ELS2 or	QDQZ0010ELS2
⚠		RECTIFIER DIODE ERA22-02	QDPZ0ERA2202
D615⚠		DIODE 1ZC33 or	QDQZ0001ZC33
⚠		ZENER DIODE RD33FB	QDQZ000RD33F
D616⚠		SCHOTTKY BARRIER DIODE 21DQ04 or	QDQZ0021DQ04
⚠		SCHOTTKY BARRIER DIODE ERB81-004	AERB81004***

Ref. No.	Mark	Description	Part No.
D617⚠		SCHOTTKY BARRIER DIODE 11EQS04 or	QD4Z011EQS04
⚠		SCHOTTKY BARRIER DIODE ERA81-004	QDPZERA81004
D618⚠		SCHOTTKY BARRIER DIODE 11EQS04 or	QD4Z011EQS04
⚠		SCHOTTKY BARRIER DIODE ERA81-004	QDPZERA81004
D619		DIODE FR104-B or	NDLZ000FR104
		RECTIFIER DIODE 10ELS2 or	QDQZ0010ELS2
		RECTIFIER DIODE ERA22-02	QDPZ0ERA2202
D620⚠		ZENER DIODE MTZJT-776.8B or	QDTB0MTZJ6R8
⚠		ZENER DIODE DZ-6.8BSBT265	NDTB0DZ6R8BS
D621⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D622⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D623⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D626		ZENER DIODE MTZJT-7736A or	QDTA00MTZJ36
		ZENER DIODE DZ-36BSAT265	NDTA00DZ36BS
D627⚠	A,B	ZENER DIODE MTZJT-7713A or	QDTA00MTZJ13
⚠	A,B	ZENER DIODE DZ-13BSAT265	NDTA00DZ13BS
D627⚠	C	ZENER DIODE MTZJT-7715A or	QDTA00MTZJ15
⚠	C	ZENER DIODE DZ-15BSAT265	NDTA00DZ15BS
D628⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D629		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D630⚠		PCB JUMPER D0.6-P5.0	JW5.0T
D631		ZENER DIODE MTZJT-776.8A or	QDTA0MTZJ6R8
		ZENER DIODE DZ-6.8BSAT265	NDTA0DZ6R8BS
D632		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D633		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D634		ZENER DIODE MTZJT-778.2B or	QDTB0MTZJ8R2
		ZENER DIODE DZ-8.2BSBT265	NDTB0DZ8R2BS
D635		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D636		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D638⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D640⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D641⚠		ZENER DIODE MTZJT-7736A or	QDTA00MTZJ36
⚠		ZENER DIODE DZ-36BSAT265	NDTA00DZ36BS
D646		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D647		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D648		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
		SWITCHING DIODE 1N4148	NDTZ001N4148
D649⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
D801⚠		SWITCHING DIODE 1SS133(T-77) or	QDTZ001SS133
⚠		SWITCHING DIODE 1N4148	NDTZ001N4148
ICS			
IC201⚠	A	MICROCONTROLLER 16BIT M37760M8H8C8GP	QSZAB0RMB095
IC201⚠	B,C	MICROCONTROLLER 16BIT M37760M8H1D8GP	QSZAA0RMB096
IC202		IC:MEMORY BR24C02F-W or	QSMBA0SRM003
		IC:MEMORY AT24C02N-10SC or	NSMMA0SAZ012
		IC(EEPROM) M24C02-MN6 or	NSMMA0SSS028
		IC:MEMORY BR24C02F	QSMMA0SRM003
IC301⚠		IC:CHROMA/IF 1 CHIP M61210FP-R60* or	QSZAA0RMB086
⚠		IC:CHROMA/IF 1 CHIP M61210FP-R61 or	QSZAB0RMB086
⚠		IC:CHROMA/IF 1 CHIP M61210FP-R62*	QSZAC0RMB086
IC401		IC:Y/C/A LA71091M	QSZBA0RSY012
IC551⚠		VERTICAL OUTPUT IC AN5522 or	QSZBA0SMS002
⚠		VERTICAL OUTPUT IC LA78040A	QSBBA0SSY003
IC601⚠		PHOTOCOUPLER LTV-817B-F or	NPEB0LTV817F
⚠		PHOTOCOUPLER LTV-817C-F or	NPEC0LTV817F
⚠		PHOTO COUPLER PC817X6	QPE600PC817X
IC602⚠		VOLTAGE REGULATOR KIA7805API or	NSBBA0SJY011
⚠		VOLTAGE REGULATOR KA7805A or	NSZBA0SF3052
⚠		IC:VOLTAGE REGULATOR AN7805F	AN7805F
IC801		AUDIO AMP LA4224	QSZAA0SSY005
COILS			
L001		PCB JUMPER D0.6-P5.0	JW5.0T
L211⚠		CHOKE COIL 47μH-K	LLBD00PKV007
L301		PCB JUMPER D0.6-P5.0	JW5.0T
L302		INDUCTOR 15μH-J-26T or	LLAXJATTU150
		INDUCTOR 15μH-K-26T	LLAXKDTKA150
L303		INDUCTOR 12μH-J-26T or	LLAXJATTU120
		INDUCTOR 12μH-K-26T	LLAXKDTKA120
L305		INDUCTOR 1.0μH-J-26T or	LLAXJATTU1R0
		INDUCTOR 1.0μH-K-26T	LLAXKDTKA1R0
L306		PCB JUMPER D0.6-P5.0	JW5.0T
L402		INDUCTOR 22μH-J-26T or	LLAXJATTU220
		INDUCTOR 22μH-K-26T	LLAXKDTKA220
L404		CHOKE COIL 47μH-K	LLBD00PKV007
L505		CHOKE COIL 47μH-K	LLBD00PKV007
L572	A,B	CHOKE COIL 47μH-K	LLBD00PKV007
L601⚠		LINE FILTER SA-91213B or	LLBG00ZSA002
⚠		LINE FILTER TLF12UA302W1R0 or	LLBG00ZTU025
⚠		LINE FILTER 5.0MH 6Y075 or	LLBG00ZKT004
⚠		LINE FILTER UU10.5-A or	LLBG00ZY2008
⚠		LINE FILTER TLF14CB3321R0 or	LLBG00ZTU012
⚠		LINE FILTER 6.35MH UU10-002	LLBG00ZKV001
L872		INDUCTOR 47μH-K-5FT or	LLARKBSTU470
		INDUCTOR 47μH-K-5FT	LLARKDSKA470
TRANSISTORS			
Q205		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
		TRANSISTOR KTC3198(GR) or	NQS40KTC3198
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q206		PHOTO TRANSISTOR PT204-6B-12 or	NPWZT2046B12
		PHOTO TRANSISTOR MID-32A22	NPWZM1D32A22
Q301		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
		TRANSISTOR KTC3198(GR) or	NQS40KTC3198
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q302		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
		TRANSISTOR KTC3198(GR) or	NQS40KTC3198

Ref. No.	Mark	Description	Part No.
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q401		TRANSISTOR 2SA1175(F) or	QQSF02SA1175
		TRANSISTOR KTA1267(GR) or	NQS10KTA1267
		TRANSISTOR KTA1266(GR) or	NQS40KTA1266
		TRANSISTOR 2SA1015-GR(TPE2)	QQS102SA1015
Q402		TRANSISTOR 2SA1175(F) or	QQSF02SA1175
		TRANSISTOR KTA1267(GR) or	NQS10KTA1267
		TRANSISTOR KTA1266(GR) or	NQS40KTA1266
		TRANSISTOR 2SA1015-GR(TPE2)	QQS102SA1015
Q491		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
		TRANSISTOR KTC3198(GR) or	NQS40KTC3198
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q571⚠		TRANSISTOR 2SD2627LS-FEC-YB11	QQZZ02SD2627
Q571⚠	A,B	TRANSISTOR TT2084LS-YB11	QQZZ00TT2084
Q572		TRANSISTOR 2SC1627Y-TPE2	QQSY02SC1627
Q591⚠		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
⚠		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
⚠		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
⚠		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
⚠		TRANSISTOR KTC3198(GR) or	NQS40KTC3198
⚠		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q601⚠		MOS FET 2SK2662	QF5Z02SK2662
Q602⚠		TRANSISTOR 2SC2120-O-TPE2 or	QQS002SC2120
⚠		TRANSISTOR 2SC2120-Y(TPE2)	QQSY02SC2120
Q604⚠		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
⚠		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
⚠		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
⚠		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q605		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
		TRANSISTOR KTC3198(GR) or	NQS40KTC3198
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q606⚠		TRANSISTOR 2SA950(O) or	Q2SA9500TPE2
⚠		TRANSISTOR 2SA950(Y) or	Q2SA950YTPE2
⚠		TRANSISTOR KTA1271(Y)	NQSY0KTA1271
Q607		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
		TRANSISTOR KTC3198(GR) or	NQS40KTC3198
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q608⚠		TRANSISTOR 2SC2120-O-TPE2 or	QQS002SC2120
⚠		TRANSISTOR 2SC2120-Y(TPE2) or	QQSY02SC2120
⚠		TRANSISTOR KTC3203(Y)	NQSY0KTC3203
Q609		TRANSISTOR 2SC2120-O-TPE2 or	QQS002SC2120
		TRANSISTOR 2SC2120-Y(TPE2) or	QQSY02SC2120
		TRANSISTOR KTC3203(Y)	NQSY0KTC3203
Q610⚠		TRANSISTOR 2SC2785(F) or	QQSF02SC2785
⚠		TRANSISTOR 2SC2785(H) or	QQSH02SC2785
⚠		TRANSISTOR 2SC2785(J) or	QQSJ02SC2785
⚠		TRANSISTOR KTC3199(GR) or	NQS10KTC3199
⚠		TRANSISTOR KTC3198(GR) or	NQS40KTC3198
⚠		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q611⚠		TRANSISTOR 2SD400(F)	QQUF002SD400
Q612		RES. BUILT-IN TRANSISTOR KRA103M or	NQSZ0KRA103M
		RES. BUILT-IN TRANSISTOR BN1F4M-T	QQSZ00BN1F4M
Q612	C	RES. BUILT-IN TRANSISTOR 2SA1346	2SA1346Z
Q871		TRANSISTOR 2SA1175(F) or	QQSF02SA1175
		TRANSISTOR KTA1267(GR) or	NQS10KTA1267
		TRANSISTOR KTA1266(GR) or	NQS40KTA1266
		TRANSISTOR 2SA1015-GR(TPE2)	QQS102SA1015
Q872		TRANSISTOR 2SC2120-O-TPE2 or	QQS002SC2120
		TRANSISTOR 2SC2120-Y(TPE2) or	QQSY02SC2120
		TRANSISTOR KTC3203(Y)	NQSY0KTC3203
Q873		TRANSISTOR 2SC3331(T) or	QSC3331TNPAA
		TRANSISTOR 2SC3331(U) or	QSC3331UNPAA
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q874		TRANSISTOR 2SC3331(T) or	QSC3331TNPAA
		TRANSISTOR 2SC3331(U) or	QSC3331UNPAA
		TRANSISTOR 2SC1815-GR(TPE2)	QQS102SC1815
Q875		RES. BUILT-IN TRANSISTOR KRA103M or	NQSZ0KRA103M
		RES. BUILT-IN TRANSISTOR BN1F4M-T	QQSZ00BN1F4M
Q875	C	RES. BUILT-IN TRANSISTOR 2SA1346	2SA1346Z
RESISTORS			
J023		CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
		CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R001		CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R004		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R007		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R008		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R201		CARBON RES. 1/4W G 4.7k Ω or	RCX4GATZ0472
		CARBON RES. 1/6W G 4.7k Ω	RCX6GATZ0472
R202		CARBON RES. 1/4W G 22k Ω or	RCX4GATZ0223
		CARBON RES. 1/6W G 22k Ω	RCX6GATZ0223
R203		CARBON RES. 1/4W G 470 Ω or	RCX4GATZ0471
		CARBON RES. 1/6W G 470 Ω	RCX6GATZ0471
R204		CARBON RES. 1/4W G 1.5k Ω or	RCX4GATZ0152
		CARBON RES. 1/6W G 1.5k Ω	RCX6GATZ0152
R205		CARBON RES. 1/4W G 3.6k Ω or	RCX4GATZ0362
		CARBON RES. 1/6W G 3.6k Ω	RCX6GATZ0362
R206		CARBON RES. 1/4W G 10k Ω or	RCX4GATZ0103
		CARBON RES. 1/6W G 10k Ω	RCX6GATZ0103
R207		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R208		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R209		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R210		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R211		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R212		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R213		CHIP RES.(1608) 1/10W J 2.7k Ω	RRXAJB5Z0272
R214		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R215		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R216		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R217		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R218		CHIP RES.(1608) 1/10W J 2.7k Ω	RRXAJB5Z0272
R219		CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
		CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R220		CHIP RES.(1608) 1/10W J 470k Ω	RRXAJB5Z0474
R221		CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
		CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R222		CHIP RES.(1608) 1/10W J 470k Ω	RRXAJB5Z0474
R223		CHIP RES.(1608) 1/10W J 560 Ω	RRXAJB5Z0561
R224		PCB JUMPER D0.6-P5.0	JW5.0T
R225		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R226		PCB JUMPER D0.6-P5.0	JW5.0T
R227		CARBON RES. 1/4W J 270 Ω or	RCX4JATZ0271

Ref. No.	Mark	Description	Part No.
		CARBON RES. 1/6W J 270 Ω	RCX6JATZ0271
R229		CHIP RES.(1608) 1/10W J 390 Ω	RRXAJB5Z0391
R230		METAL OXIDE FILM RES. 1W J 2.2 Ω or	RN012R2ZU001
		METAL OXIDE FILM RES. 1W J 2.2 Ω	RN012R2DP003
R233		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R234		CHIP RES.(1608) 1/10W J 1.2k Ω	RRXAJB5Z0122
R235		CHIP RES.(1608) 1/10W J 47 Ω	RRXAJB5Z0470
R236		CHIP RES.(1608) 1/10W J 100k Ω	RRXAJB5Z0104
R237		PCB JUMPER D0.6-P5.0	JW5.0T
R238		CHIP RES.(1608) 1/10W J 470k Ω	RRXAJB5Z0474
R239		CHIP RES.(1608) 1/10W J 2.7k Ω	RRXAJB5Z0272
R240		PCB JUMPER D0.6-P5.0	JW5.0T
R241		CARBON RES. 1/4W J 5.6k Ω or	RCX4JATZ0562
		CARBON RES. 1/6W J 5.6k Ω	RCX6JATZ0562
R243		CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R244		CHIP RES.(1608) 1/10W J 1M Ω	RRXAJB5Z0105
R245		CHIP RES.(1608) 1/10W J 470 Ω	RRXAJB5Z0471
R247		CHIP RES.(1608) 1/10W J 820 Ω	RRXAJB5Z0821
R248		CHIP RES.(1608) 1/10W J 470 Ω	RRXAJB5Z0471
R249		CHIP RES.(1608) 1/10W J 3.3k Ω	RRXAJB5Z0332
R250		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R251		CHIP RES.(1608) 1/10W J 3.3k Ω	RRXAJB5Z0332
R252		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R253		CHIP RES.(1608) 1/10W J 3.3k Ω	RRXAJB5Z0332
R254		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R255		PCB JUMPER D0.6-P5.0	JW5.0T
R256		CARBON RES. 1/4W J 5.6k Ω or	RCX4JATZ0562
		CARBON RES. 1/6W J 5.6k Ω	RCX6JATZ0562
R257		PCB JUMPER D0.6-P5.0	JW5.0T
R258		PCB JUMPER D0.6-P5.0	JW5.0T
R259		CARBON RES. 1/4W J 5.6k Ω or	RCX4JATZ0562
		CARBON RES. 1/6W J 5.6k Ω	RCX6JATZ0562
R260		PCB JUMPER D0.6-P5.0	JW5.0T
R261		CARBON RES. 1/4W J 6.8k Ω or	RCX4JATZ0682
		CARBON RES. 1/6W J 6.8k Ω	RCX6JATZ0682
R263		CHIP RES.(1608) 1/10W J 68k Ω	RRXAJB5Z0683
R264		CHIP RES.(1608) 1/10W J 220k Ω	RRXAJB5Z0224
R267		CHIP RES.(1608) 1/10W J 33k Ω	RRXAJB5Z0333
R269		PCB JUMPER D0.6-P5.0	JW5.0T
R270		CHIP RES.(1608) 1/10W J 100k Ω	RRXAJB5Z0104
R273		CHIP RES.(1608) 1/10W J 1.8k Ω	RRXAJB5Z0182
R274		CHIP RES.(1608) 1/10W J 680 Ω	RRXAJB5Z0681
R275		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R279		CARBON RES. 1/4W J 10k Ω or	RCX4JATZ0103
		CARBON RES. 1/6W J 10k Ω	RCX6JATZ0103
R280		CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
		CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R281		CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R289		PCB JUMPER D0.6-P5.0	JW5.0T
R290		PCB JUMPER D0.6-P5.0	JW5.0T
R292		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R293		PCB JUMPER D0.6-P5.0	JW5.0T
R294		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R301		CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R302		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R305		CHIP RES.(1608) 1/10W J 68k Ω	RRXAJB5Z0683
R306		CHIP RES.(1608) 1/10W J 6.8k Ω	RRXAJB5Z0682
R308		CHIP RES.(1608) 1/10W J 1.2k Ω	RRXAJB5Z0122
R309		CARBON RES. 1/4W J 22 Ω or	RCX4JATZ0220
		CARBON RES. 1/6W J 22 Ω	RCX6JATZ0220
R310		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222

Ref. No.	Mark	Description	Part No.
R311		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R312		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R313		CHIP RES.(1608) 1/10W J 330 Ω	RRXAJB5Z0331
R314		CHIP RES.(1608) 1/10W J 330 Ω	RRXAJB5Z0331
R315		CHIP RES.(1608) 1/10W J 330 Ω	RRXAJB5Z0331
R316		PCB JUMPER D0.6-P5.0	JW5.0T
R317		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R318		CARBON RES. 1/4W J 100 Ω or	RCX4JATZ0101
		CARBON RES. 1/6W J 100 Ω	RCX6JATZ0101
R319		CARBON RES. 1/4W J 100 Ω or	RCX4JATZ0101
		CARBON RES. 1/6W J 100 Ω	RCX6JATZ0101
R320		CHIP RES.(1608) 1/10W J 120k Ω	RRXAJB5Z0124
R321		CARBON RES. 1/4W J 180k Ω or	RCX4JATZ0184
		CARBON RES. 1/6W J 180k Ω	RCX6JATZ0184
R322		CHIP RES.(1608) 1/10W J 15k Ω	RRXAJB5Z0153
R323		CHIP RES.(1608) 1/10W J 6.8k Ω	RRXAJB5Z0682
R324		CARBON RES. 1/4W J 100 Ω or	RCX4JATZ0101
		CARBON RES. 1/6W J 100 Ω	RCX6JATZ0101
R325		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R326		CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R331		CHIP RES.(1608) 1/10W J 47 Ω	RRXAJB5Z0470
R333	A,C	CARBON RES. 1/4W J 27 Ω or	RCX4JATZ0270
	A,C	CARBON RES. 1/6W J 27 Ω	RCX6JATZ0270
R333	B	PCB JUMPER D0.6-P5.0	JW5.0T
R335		CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R336		CHIP RES.(1608) 1/10W J 390 Ω	RRXAJB5Z0391
R337		CHIP RES.(1608) 1/10W J 220 Ω	RRXAJB5Z0221
R342		CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R345		PCB JUMPER D0.6-P5.0	JW5.0T
R347		CHIP RES.(1608) 1/10W J 10M Ω	RRXAJB5Z0106
R350		CHIP RES.(1608) 1/10W J 68 Ω	RRXAJB5Z0680
R351		CHIP RES.(1608) 1/10W J 680 Ω	RRXAJB5Z0681
R352		CHIP RES.(1608) 1/10W J 1M Ω	RRXAJB5Z0105
R391		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R392		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R393		CHIP RES.(1608) 1/10W J 100 Ω	RRXAJB5Z0101
R406		CHIP RES.(1608) 1/10W J 47k Ω	RRXAJB5Z0473
R407		CHIP RES.(1608) 1/10W J 47k Ω	RRXAJB5Z0473
R408	B,C	CHIP RES.(1608) 1/10W J 47k Ω	RRXAJB5Z0473
R409		CHIP RES.(1608) 1/10W J 18k Ω	RRXAJB5Z0183
R413		CHIP RES.(1608) 1/10W J 39k Ω	RRXAJB5Z0393
R414		CHIP RES.(1608) 1/10W J 4.7k Ω	RRXAJB5Z0472
R415		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R416		CHIP RES.(1608) 1/10W J 100k Ω	RRXAJB5Z0104
R417		CARBON RES. 1/4W J 220 Ω or	RCX4JATZ0221
		CARBON RES. 1/6W J 220 Ω	RCX6JATZ0221
R418		CHIP RES.(1608) 1/10W J 390 Ω	RRXAJB5Z0391
R419		CHIP RES.(1608) 1/10W J 330 Ω	RRXAJB5Z0331
R423		CHIP RES.(1608) 1/10W J 5.6M Ω	RRXAJB5Z0565
R424		CHIP RES.(1608) 1/10W J 100k Ω	RRXAJB5Z0104
R425		CHIP RES.(1608) 1/10W J 82k Ω	RRXAJB5Z0823
R426		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R427		CARBON RES. 1/4W J 820 Ω or	RCX4JATZ0821
		CARBON RES. 1/6W J 820 Ω	RCX6JATZ0821
R428		CHIP RES.(1608) 1/10W J 680k Ω	RRXAJB5Z0684
R429		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R431		CHIP RES.(1608) 1/10W J 8.2k Ω	RRXAJB5Z0822
R434	B,C	CHIP RES.(1608) 1/10W J 47k Ω	RRXAJB5Z0473
R435	A	CHIP RES.(1608) 1/10W J 1.8k Ω	RRXAJB5Z0182
R435	B,C	CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R495		CHIP RES.(1608) 1/10W J 47k Ω	RRXAJB5Z0473

Ref. No.	Mark	Description	Part No.
R496		CHIP RES.(1608) 1/10W J 2.2M Ω	RRXAJB5Z0225
R497		CHIP RES.(1608) 1/10W J 12k Ω	RRXAJB5Z0123
R544⚠		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R551		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R552⚠		CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R552⚠	C	CARBON RES. 1/6W J 1.5k Ω	RCX6JATZ0152
R556		CHIP RES.(1608) 1/10W J 4.7 Ω	RRXAJB5Z04R7
R557		CHIP RES.(1608) 1/10W J 470 Ω	RRXAJB5Z0471
R558	A,B	CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R558	C	CHIP RES.(1608) 1/10W J 15k Ω	RRXAJB5Z0153
R559	A,B	CHIP RES.(1608) 1/10W J 1k Ω	RRXAJB5Z0102
R559	C	CHIP RES.(1608) 1/10W J 820 Ω	RRXAJB5Z0821
R560	A,B	CARBON RES. 1/4W J 6.8k Ω or	RCX4JATZ0682
	A,B	CARBON RES. 1/6W J 6.8k Ω	RCX6JATZ0682
R560	C	CARBON RES. 1/4W J 5.1k Ω or	RCX4JATZ0512
	C	CARBON RES. 1/6W J 5.1k Ω	RCX6JATZ0512
R561	A,B	CHIP RES.(1608) 1/10W J 8.2k Ω	RRXAJB5Z0822
R561	C	CHIP RES.(1608) 1/10W J 5.6k Ω	RRXAJB5Z0562
R562		CARBON RES. 1/4W J 4.7 Ω	RCX4JATZ04R7
R563		CARBON RES. 1/4W J 4.7 Ω	RCX4JATZ04R7
R565⚠	A,B	CARBON RES. 1/4W J 3.9 Ω or	RCX4JATZ03R9
⚠	A,B	CARBON RES. 1/6W J 3.9 Ω	RCX6JATZ03R9
R565⚠	C	PCB JUMPER D0.6-P5.0	JW5.0T
R566⚠	A,B	CARBON RES. 1/4W J 3.9 Ω or	RCX4JATZ03R9
⚠	A,B	CARBON RES. 1/6W J 3.9 Ω	RCX6JATZ03R9
R566⚠	C	CARBON RES. 1/4W J 4.7 Ω or	RCX4JATZ04R7
⚠	C	CARBON RES. 1/6W J 4.7 Ω	RCX6JATZ04R7
R568	C	CARBON RES. 1/4W J 1.5k Ω or	RCX4JATZ0152
	C	CARBON RES. 1/6W J 1.5k Ω	RCX6JATZ0152
R570⚠	A,B	CARBON RES. 1/4W J 3.9 Ω or	RCX4JATZ03R9
⚠	A,B	CARBON RES. 1/6W J 3.9 Ω	RCX6JATZ03R9
R570⚠	C	CARBON RES. 1/4W J 4.7 Ω or	RCX4JATZ04R7
⚠	C	CARBON RES. 1/6W J 4.7 Ω	RCX6JATZ04R7
R571		CHIP RES.(1608) 1/10W J 1.5k Ω	RRXAJB5Z0152
R572	C	CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
	C	CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R573	A,B	CARBON RES. 1/4W J 470 Ω or	RCX4JATZ0471
	A,B	CARBON RES. 1/6W J 470 Ω	RCX6JATZ0471
R573	C	CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
	C	CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R574⚠		METAL OXIDE FILM RES. 2W J 1k Ω or	RN02102ZU001
⚠		METAL OXIDE FILM RES. 2W J 1k Ω	RN02102DP004
R575⚠		METAL OXIDE FILM RES. 2W J 1k Ω or	RN02102ZU001
⚠		METAL OXIDE FILM RES. 2W J 1k Ω	RN02102DP004
R576		CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
		CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R577		CARBON RES. 1/4W J 560 Ω or	RCX4JATZ0561
		CARBON RES. 1/6W J 560 Ω	RCX6JATZ0561
R578		PCB JUMPER D0.6-P5.0	JW5.0T
R580⚠		CARBON RES. 1/4W J 47 Ω or	RCX4JATZ0470
⚠		CARBON RES. 1/6W J 47 Ω	RCX6JATZ0470
R583⚠	A,B	METAL OXIDE FILM RES. 1W J 1.8 Ω or	RN011R8ZU001
⚠	A,B	METAL OXIDE FILM RES. 1W J 1.8 Ω	RN011R8DP003
R583⚠	C	METAL RESISTER. 2W J 2.7 Ω or	RN022R7ZU001
⚠	C	METAL OXIDE FILM RES. 2W J 2.7 Ω	RN022R7DP004
R584⚠		CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
⚠		CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R585		CARBON RES. 1/4W J 8.2k Ω or	RCX4JATZ0822
		CARBON RES. 1/6W J 8.2k Ω	RCX6JATZ0822
R587⚠		CARBON RES. 1/4W J 100k Ω or	RCX4JATZ0104
⚠		CARBON RES. 1/6W J 100k Ω	RCX6JATZ0104

Ref. No.	Mark	Description	Part No.
R588		CARBON RES. 1/4W J 100k Ω or	RCX4JATZ0104
		CARBON RES. 1/6W J 100k Ω	RCX6JATZ0104
R589⚠		CARBON RES. 1/4W J 47 Ω or	RCX4JATZ0470
⚠		CARBON RES. 1/6W J 47 Ω	RCX6JATZ0470
R591⚠	A,B	CHIP RES.(1608) 1/10W J 6.8k Ω	RRXAJB5Z0682
R591⚠	C	CHIP RES.(1608) 1/10W J 33k Ω	RRXAJB5Z0333
R592⚠		CARBON RES. 1/4W J 180k Ω or	RCX4JATZ0184
⚠		CARBON RES. 1/6W J 180k Ω	RCX6JATZ0184
R593⚠	A,B	CHIP RES.(1608) 1/10W J 56k Ω	RRXAJB5Z0563
R593⚠	C	CHIP RES.(1608) 1/10W J 68k Ω	RRXAJB5Z0683
R594⚠		CHIP RES.(1608) 1/10W J 56k Ω	RRXAJB5Z0563
R596		CARBON RES. 1/4W J 22k Ω or	RCX4JATZ0223
		CARBON RES. 1/6W J 22k Ω	RCX6JATZ0223
R597⚠		CHIP RES.(1608) 1/10W J 6.8k Ω	RRXAJB5Z0682
R598⚠		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R599⚠		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R602⚠		CEMENT RES. 3W J 1.2 Ω or	RW031R2PG007
⚠		CEMENT RES. 5W K 1.2 Ω or	RW051R2DP005
⚠		CEMENT RESISTOR 5W K 1.2 Ω or	RW051R2PG001
⚠		CEMENT RESISTOR 5W J 1.2 Ω	RW051R2Y4001
R603⚠	A,B	METAL OXIDE FILM RES. 2W J 0.39 Ω or	RN02R39ZU001
⚠	A,B	METAL OXIDE FILM RES. 2W J 0.39 Ω	RN02R39DP004
R603⚠	C	METAL OXIDE FILM RES. 2W J 0.22 Ω or	RN02R22ZU001
⚠	C	METAL OXIDE FILM RES. 2W J 0.22 Ω	RN02R22DP004
R604⚠	A,B	CARBON RES. 1/4W J 1.5M Ω or	RCX4JATZ0155
⚠	A,B	CARBON RES. 1/6W J 1.5M Ω	RCX6JATZ0155
R604⚠	C	CARBON RES. 1/4W J 1.2M Ω or	RCX4JATZ0125
⚠	C	CARBON RES. 1/6W J 1.2M Ω	RCX6JATZ0125
R605		CHIP RES.(1608) 1/10W J 1.2M Ω	RRXAJB5Z0125
R606		CARBON RES. 1/4W J 220 Ω or	RCX4JATZ0221
		CARBON RES. 1/6W J 220 Ω	RCX6JATZ0221
R607	A,B	CARBON RES. 1/4W J 180 Ω or	RCX4JATZ0181
	A,B	CARBON RES. 1/6W J 180 Ω	RCX6JATZ0181
R607	C	CARBON RES. 1/4W J 220 Ω or	RCX4JATZ0221
	C	CARBON RES. 1/6W J 220 Ω	RCX6JATZ0221
R608	A,B	CARBON RES. 1/4W J 220k Ω or	RCX4JATZ0224
	A,B	CARBON RES. 1/6W J 220k Ω	RCX6JATZ0224
R608	C	CARBON RES. 1/4W J 180k Ω or	RCX4JATZ0184
	C	CARBON RES. 1/6W J 180k Ω	RCX6JATZ0184
R609		PCB JUMPER D0.6-P5.0	JW5.0T
R610	A,B	CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
	A,B	CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R610	C	CARBON RES. 1/4W J 1.2k Ω or	RCX4JATZ0122
	C	CARBON RES. 1/6W J 1.2k Ω	RCX6JATZ0122
R613	A,B	CARBON RES. 1/4W J 150 Ω or	RCX4JATZ0151
	A,B	CARBON RES. 1/6W J 150 Ω	RCX6JATZ0151
R613	C	CARBON RES. 1/4W J 68 Ω or	RCX4JATZ0680
	C	CARBON RES. 1/6W J 68 Ω	RCX6JATZ0680
R614	A,B	CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R614	C	CHIP RES.(1608) 1/10W J 1.2k Ω	RRXAJB5Z0122
R616⚠		CARBON RES. 1/4W 2.2 Ω J or	RCX4JATZ02R2
⚠		CARBON RES. 1/6W J 2.2 Ω	RCX6JATZ02R2
R617		CARBON RES. 1/4W J 180 Ω or	RCX4JATZ0181
		CARBON RES. 1/6W J 180 Ω	RCX6JATZ0181
R618		CARBON RES. 1/4W J 270 Ω or	RCX4JATZ0271
		CARBON RES. 1/6W J 270 Ω	RCX6JATZ0271
R619		CARBON RES. 1/4W J 270 Ω or	RCX4JATZ0271
		CARBON RES. 1/6W J 270 Ω	RCX6JATZ0271
R620⚠		CEMENT RES. 5W J 3.9k Ω or	RW05392DP008
⚠		CEMENT RES. 5W 3.9k Ω H=25MM or	RW05392PG004
⚠		CEMENT RES. 5W J 3.9k Ω	RW05392Y4004

Ref. No.	Mark	Description	Part No.
R621⚠	A,B	CARBON RES. 1/4W J 12k Ω or	RCX4JATZ0123
⚠	A,B	CARBON RES. 1/6W J 12k Ω	RCX6JATZ0123
R621	C	CARBON RES. 1/4W J 15k Ω or	RCX4JATZ0153
	C	CARBON RES. 1/6W J 15k Ω	RCX6JATZ0153
R622	A,B	CARBON RES. 1/4W J 12k Ω or	RCX4JATZ0123
	A,B	CARBON RES. 1/6W J 12k Ω	RCX6JATZ0123
R622	C	CARBON RES. 1/4W J 15k Ω or	RCX4JATZ0153
	C	CARBON RES. 1/6W J 15k Ω	RCX6JATZ0153
R623		CARBON RES. 1/4W J 33k Ω or	RCX4JATZ0333
		CARBON RES. 1/6W J 33k Ω	RCX6JATZ0333
R624⚠		CARBON RES. 1/4W J 39k Ω or	RCX4JATZ0393
⚠		CARBON RES. 1/6W J 39k Ω	RCX6JATZ0393
R625⚠	A,B	CARBON RES. 1/4W J 39k Ω or	RCX4JATZ0393
⚠	A,B	CARBON RES. 1/6W J 39k Ω	RCX6JATZ0393
R625⚠	C	CARBON RES. 1/4W J 47k Ω or	RCX4JATZ0473
⚠	C	CARBON RES. 1/6W J 47k Ω	RCX6JATZ0473
R629⚠	A,B	CARBON RES. 1/4W J 10k Ω or	RCX4JATZ0103
⚠	A,B	CARBON RES. 1/6W J 10k Ω	RCX6JATZ0103
R629⚠	C	CARBON RES. 1/4W J 12k Ω or	RCX4JATZ0123
⚠	C	CARBON RES. 1/6W J 12k Ω	RCX6JATZ0123
R630⚠		CARBON RES. 1/4W J 12k Ω or	RCX4JATZ0123
⚠		CARBON RES. 1/6W J 12k Ω	RCX6JATZ0123
R631⚠	A,B	CARBON RES. 1/4W J 15k Ω or	RCX4JATZ0153
⚠	A,B	CARBON RES. 1/6W J 15k Ω	RCX6JATZ0153
R631⚠	C	CARBON RES. 1/4W J 13k Ω or	RCX4JATZ0133
⚠	C	CARBON RES. 1/6W J 13k Ω	RCX6JATZ0133
R632⚠		CARBON RES. 1/4W J 560 Ω or	RCX4JATZ0561
⚠		CARBON RES. 1/6W J 560 Ω	RCX6JATZ0561
R633⚠		CHIP RES.(1608) 1/10W J 5.6k Ω	RRXAJB5Z0562
R634		CHIP RES.(1608) 1/10W J 6.8k Ω	RRXAJB5Z0682
R635		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R639⚠		METAL OXIDE FILM RES. 2W J 680 Ω or	RN02681ZU001
⚠		METAL OXIDE FILM RES. 2W J 680 Ω	RN02681DP004
R640⚠		CHIP RES.(1608) 1/10W J 56k Ω	RRXAJB5Z0563
R641		CARBON RES. 1/4W J 10k Ω or	RCX4JATZ0103
		CARBON RES. 1/6W J 10k Ω	RCX6JATZ0103
R642		CHIP RES.(1608) 1/10W J 5.6k Ω	RRXAJB5Z0562
R644		CARBON RES. 1/4W J 47k Ω or	RCX4JATZ0473
		CARBON RES. 1/6W J 47k Ω	RCX6JATZ0473
R645⚠		CARBON RES. 1/4W J 220 Ω or	RCX4JATZ0221
⚠		CARBON RES. 1/6W J 220 Ω	RCX6JATZ0221
R646⚠		METAL OXIDE FILM RES. 1W J 47 Ω or	RN01470ZU001
⚠		METAL OXIDE FILM RES. 1W J 47 Ω	RN01470DP003
R647⚠		METAL OXIDE FILM RES. 1W J 47 Ω or	RN01470ZU001
⚠		METAL OXIDE FILM RES. 1W J 47 Ω	RN01470DP003
R648⚠		CARBON RES. 1/2W J 5.6 Ω or	RCX2JZQZ05R6
⚠		CARBON RES. 1/2W J 5.6 Ω or	RCX25R6KA013
⚠		CARBON RES. 1/2W J 5.6 Ω	RCX2JZPZ05R6
R649		CARBON RES. 1/4W J 68k Ω or	RCX4JATZ0683
		CARBON RES. 1/6W J 68k Ω	RCX6JATZ0683
R650⚠		CARBON RES. 1/4W J 22 Ω or	RCX4JATZ0220
⚠		CARBON RES. 1/6W J 22 Ω	RCX6JATZ0220
R651⚠		CARBON RES. 1/4W J 560 Ω or	RCX4JATZ0561
⚠		CARBON RES. 1/6W J 560 Ω	RCX6JATZ0561
R652⚠		CARBON RES. 1/4W J 560 Ω or	RCX4JATZ0561
⚠		CARBON RES. 1/6W J 560 Ω	RCX6JATZ0561
R653		CARBON RES. 1/4W J 100 Ω or	RCX4JATZ0101
		CARBON RES. 1/6W J 100 Ω	RCX6JATZ0101
R654⚠		CARBON RES. 1/2W J 10 Ω or	RCX2JZQZ0100
⚠		CARBON RES. 1/2W J 10 Ω or	RCX2100KA013
⚠		CARBON RES. 1/2W J 10 Ω	RCX2JZPZ0100

Ref. No.	Mark	Description	Part No.
R655⚠	A,B	CARBON RES. 1/4W J 2.2k Ω or	RCX4JATZ0222
⚠	A,B	CARBON RES. 1/6W J 2.2k Ω	RCX6JATZ0222
R655⚠	C	CARBON RES. 1/4W J 2.7k Ω or	RCX4JATZ0272
⚠	C	CARBON RES. 1/6W J 2.7k Ω	RCX6JATZ0272
R656⚠	A,B	METAL OXIDE FILM RES. 2W J 10 Ω or	RN02100ZU001
⚠	A,B	METAL OXIDE FILM RES. 2W J 10 Ω	RN02100DP004
R656⚠	C	METAL OXIDE FILM RES. 2W J 6.8 Ω or	RN026R8ZU001
⚠	C	METAL OXIDE FILM RES. 2W J 6.8 Ω	RN026R8DP004
R659		CARBON RES. 1/4W J 100 Ω or	RCX4JATZ0101
		CARBON RES. 1/6W J 100 Ω	RCX6JATZ0101
R660		PCB JUMPER D0.6-P5.0	JW5.0T
R665		PCB JUMPER D0.6-P5.0	JW5.0T
R667	C	CARBON RES. 1/4W J 1.5k Ω or	RCX4JATZ0152
	C	CARBON RES. 1/6W J 1.5k Ω	RCX6JATZ0152
R701		CHIP RES.(1608) 1/10W J 82 Ω	RRXAJB5Z0820
R801⚠		METAL OXIDE FILM RES. 1W J 12 Ω or	RN01120ZU001
⚠		FIXED METAL OXIDE FILM RES. 1W J 12 Ω	RN01JZPZ0120
R802⚠		CHIP RES.(1608) 1/10W J 4.7k Ω	RRXAJB5Z0472
R803⚠		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R804		CARBON RES. 1/4W J 2.7k Ω or	RCX4JATZ0272
		CARBON RES. 1/6W J 2.7k Ω	RCX6JATZ0272
R805	A,B	CARBON RES. 1/4W J 10k Ω or	RCX4JATZ0103
	A,B	CARBON RES. 1/6W J 10k Ω	RCX6JATZ0103
R805	C	CARBON RES. 1/4W J 8.2k Ω or	RCX4JATZ0822
	C	CARBON RES. 1/6W J 8.2k Ω	RCX6JATZ0822
R806		CARBON RES. 1/4W J 47 Ω or	RCX4JATZ0470
		CARBON RES. 1/6W J 47 Ω	RCX6JATZ0470
R807		CARBON RES. 1/4W J 47 Ω or	RCX4JATZ0470
		CARBON RES. 1/6W J 47 Ω	RCX6JATZ0470
R851		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R852		CHIP RES.(1608) 1/10W J 3.3k Ω	RRXAJB5Z0332
R853		CHIP RES.(1608) 1/10W J 2.2M Ω	RRXAJB5Z0225
R856		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R857		CHIP RES.(1608) 1/10W J 3.3k Ω	RRXAJB5Z0332
R858		CHIP RES.(1608) 1/10W J 6.8k Ω	RRXAJB5Z0682
R859		CHIP RES.(1608) 1/10W J 4.7k Ω	RRXAJB5Z0472
R861		CHIP RES.(1608) 1/10W J 6.8k Ω	RRXAJB5Z0682
R862		CHIP RES.(1608) 1/10W J 2.7k Ω	RRXAJB5Z0272
R863		CHIP RES.(1608) 1/10W J 10k Ω	RRXAJB5Z0103
R864		CHIP RES.(1608) 1/10W J 8.2k Ω	RRXAJB5Z0822
R865		CHIP RES.(1608) 1/10W J 12k Ω	RRXAJB5Z0123
R866		CHIP RES.(1608) 1/10W J 330k Ω	RRXAJB5Z0334
R867		CHIP RES.(1608) 1/10W J 150 Ω	RRXAJB5Z0151
R868		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R869		CHIP RES.(1608) 1/10W J 820 Ω	RRXAJB5Z0821
R871		CARBON RES. 1/4W J 1k Ω or	RCX4JATZ0102
		CARBON RES. 1/6W J 1k Ω	RCX6JATZ0102
R872		CHIP RES.(1608) 1/10W J 22k Ω	RRXAJB5Z0223
R873		CARBON RES. 1/4W J 47k Ω or	RCX4JATZ0473
		CARBON RES. 1/6W J 47k Ω	RCX6JATZ0473
R874		CARBON RES. 1/4W J 100 Ω or	RCX4JATZ0101
		CARBON RES. 1/6W J 100 Ω	RCX6JATZ0101
R875		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R876		CHIP RES.(1608) 1/10W J 2.2k Ω	RRXAJB5Z0222
R877		CARBON RES. 1/4W J 820 Ω or	RCX4JATZ0821
		CARBON RES. 1/6W J 820 Ω	RCX6JATZ0821
SWITCHES			
SW201		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003

Ref. No.	Mark	Description	Part No.
SW202		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW203		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW204		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW205		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW206		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW207		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW208		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW209		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW210		TACT SWITCH SKQSAB or	SST0101AL038
		TACT SWITCH SKHHAM or	SST0101AL029
		TACT SWITCH KSM0612B	SST0101HH003
SW211		LEAF SWITCH LSA-1142AU or	SSC0101KB013
		LEAF SWITCH MXS00052MPP0 or	SSC0101MCE01
		LEAF SWITCH MXS00981MPP0	SSC0101MCE02
SW212		ROTARY MODE SWITCH SSS-43MD or	SSR0106KB001
		ROTARY MODE SWITCH R8100212	SSR0106U3001
MISCELLANEOUS			
BC571		BEAD INDUCTORS FBA04HA600VB-00	LLBF00STU026
BC601		BEAD INDUCTORS FBR07HA121TB-00	LLBF00ZTU021
BC602		BEAD INDUCTORS FBR07HA121TB-00	LLBF00ZTU021
BC603		BEAD INDUCTORS FBR07HA121TB-00	LLBF00ZTU021
BC604		BEAD INDUCTORS FBR07HA121TB-00	LLBF00ZTU021
BC605		BEAD INDUCTORS FBR07HA121TB-00	LLBF00ZTU021
BC606		PCB JUMPER D0.6-P5.0	JW5.0T
CF301		CERAMIC TRAP 4.5MHz or	FBE455PMR003
		4.5M TRAP XT4.5MB2	FBE455PLN001
CF302		CERAMIC FILTER SFSRA4M50CF00-B0 or	FBB455PMR004
		4.5M FILTER LTH4.5MCB	FBB455PLN001
CL201		FFC/FPC CONNECTOR 12P 04 6232 112 103 800	JC62D12TM003
F601⚠		FUSE 4.00A/125V or	PAGU20CAG402
⚠		FUSE 51MS040L or	PAFC20CHV402
⚠		FUSE 4A/125V 237 TYPE or	PAGJ20CAG402
⚠		FUSE STC4A125V U/CT	PAGE20CW3402
FH601		FUSE HOLDER MSF-015	XH01Z00LY001
FH601⚠		FUSE HOLDER FH-V-03078	XH01Z00DK001
FH602		FUSE HOLDER MSF-015	XH01Z00LY001
FH602⚠		FUSE HOLDER FH-V-03078	XH01Z00DK001
JK701		RCA JACK(YELLOW) MSP-281V4-B or	JXRL010LY003
		RCA JACK(YELLOW) AV1-15-3	JXRL010RP013
JK702		RCA JACK(WHITE) MSP-281V1-B or	JXRL010LY005
		RCA JACK(WHITE) AV1-15-4	JXRL010RP014
JK801		EARPHONE JACK MSJ-035-12APC or	JYSL030LY001
		EARPHONE JACK HTJ-035-1ZEBTZ or	JYSL030GE001
		EARPHONE JACK HSJ1403-01-010	JYSL030HD002
PS601⚠		THERMISTOR ZPB45BL7R0A	QNZZ45BL7R0A
RS201		REMOTE RECEIVER MIM-93M6DKF or	USESJRSUNT01
		REMOTE RECEIVER PIC-37042LU	USESJRSKK033
SA601⚠		SURGE ABSORBER JVR-07N471K or	NVQZVR07N471
⚠		SURGE ABSORBER CNR-10D471K or	NVQZR10D471K
⚠		SURGE ABSORBER CNR-07D471K or	NVQZR07D471K
⚠		SURGE ABSORBER PVR-07D471KB	NVQZ07D471KB
SF001	A,C	SAW FILTER SAFGM45M7VHGZM0B03	FBB456PMR007
SF001	B	SAW FILTER SAFGP45M7VHEZM0B03	FBB456PMR005
SG601⚠		GAP. FNR-G3.10D	FAZ000LD6005
T571⚠	A,B	FLYBACK TRANS BSC21-2028S	LTF00CPS2046
T571⚠	C	FLYBACK TRANS BSC21-2042S or	LTF00CPS2053
⚠	C	FLYBACK TRANS BSC25-0244	LTF00CPP1017
T572	A,B	H0RIZONTAL DRIVE TRANS LP2-005	LTH00CPA5005
T572	C	H0RIZONTAL DRIVE TRANS LP2-004	LTH00CPA5004
T601⚠	A,B	SWITCHING TRANS 01746 or	LTT00CPKT089
⚠	A,B	SWICHING TRANS CSA-SW0041	LTT00CPSA117
T601⚠	C	SWITCHING TRANS 01747	LTT00CPKT090
TB3		HEAD SHIELD(NTSC) T5300UA	0EM301560
TB7		LED HOLDER T5300UA	0EM406868
TB9	A,B	13VPOW HEAT SINK PGD ASSEMBLY T5300UA	0EM406798
TB9	C	19VPOW HEAT SINK PGE ASSEMBLY T7300UA	0EM406801
TB21		BUSH, LED(F) H3700UD	0VM409508
TB26	A,B	13V H/V HEAT SINK PGF T5300UA	0EM406799
TB26	C	19V H/V HEAT SINK PGG T7300UA	0EM406806
TL2		SCREW, B-TIGHT M3X8 BIND HEAD+ or	GBMB3080
		SCREW, B-TIGHT M3X8 BIND HEAD+	GBMB3080
TU001⚠	A,C	TUNER B8095AP	UTUNNTUSP018
TU001	A,C	TUNER ENV56DB3G3	UTUNNTUMS009
TU001⚠	B	TUNER UNIT TEDH-932A	UTUNNTUAL029
VR601⚠		CARBON P.O.T. 10k Ω B or	VRCB103KA011
⚠		CARBON P.O.T. 10k Ω B	VRCB103HH014
W601⚠		AC CORD PB8K9F9110A-057 or	WAC0172LW008
⚠		AC CORD WAC0172LTE01 or	WAC0172LTE01
⚠		AC CORD WAC0172AS006	WAC0172AS006
X201		X'TAL 32.768kHz(20PPM) or	FXC323LJNY01
		X'TAL 32.768kHz(20PPM) or	FXC323LCT001
		X'TAL 32.768kHz(20PPM)	FXC323LDS002
X202		X'TAL HC-49/U 10.6MHz or	FXD106LLN001
		X'TAL AT49-10.6 or	FXD106LDS002
		X'TAL :10.6MHz S8562	FXD106LCT001
X301		X'TAL 3.579545 MHz	FXD355LLN003
X401		X'TAL 3.579545MHz(20PPM) or	FXC355LJNY01
		X'TAL 3.579545MHz(20PPM) or	FXC355LLN003
		X'TAL 3.579545MHz(20PPM) or	FXC355LDS001
		X'TAL 3.579545MHz	FXC355LLN001

CRT CBA

Ref. No.	Mark	Description	Part No.
		CRT CBA (MMA-B) Consists of the followings	----------
CAPACITORS			
C501	A,B	CHIP CERAMIC CAP. CH J 330pF/50V	CHD1JJBCH331
C501	C	CHIP CERAMIC CAP. CH J 470pF/50V	CHD1JJBCH471
C502	A,B	CHIP CERAMIC CAP. CH J 330pF/50V	CHD1JJBCH331
C502	C	CHIP CERAMIC CAP. CH J 470pF/50V	CHD1JJBCH471
C503	A,B	CHIP CERAMIC CAP. CH J 330pF/50V	CHD1JJBCH331
C503	C	CHIP CERAMIC CAP. CH J 470pF/50V	CHD1JJBCH471

Ref. No.	Mark	Description	Part No.
C507		ELECTROLYTIC CAP. 47µF/25V M or	CE1EMASDL470
		ELECTROLYTIC CAP. 47µF/25V M	CE1EMASTL470
C510		CERAMIC CAP. B K 1000pF/2KV or	CCD3DKP0B102
		CERAMIC CAP. B K 1000pF/2KV or	CA3D102MR030
		CERAMIC CAP. B K 1000pF/2KV	CCD3DKD0B102
CONNECTORS			
CN501		PIN CONNECTOR 005P-5100 or	JTEA001TG001
		CONNECTOR PIN, 1P LV or	1700576
		CONNECTOR PIN, 1P RT-01N-2.3A	1730688
COIL			
L501		PCB JUMPER D0.6-P5.0	JW5.0T
TRANSISTORS			
Q501		TRANSISTOR 2SC2482 TPE6 or	QQSZ02SC2482
		TRANSISTOR 2SC3468(E)-AE or	QQSE02SC3468
		TRANSISTOR 2SC3468(D)-AE or	QQSD02SC3468
		TRANSISTOR KTC3207	NQSZ0KTC3207
Q502		TRANSISTOR 2SC2482 TPE6 or	QQSZ02SC2482
		TRANSISTOR 2SC3468(E)-AE or	QQSE02SC3468
		TRANSISTOR 2SC3468(D)-AE or	QQSD02SC3468
		TRANSISTOR KTC3207	NQSZ0KTC3207
Q503		TRANSISTOR 2SC2482 TPE6 or	QQSZ02SC2482
		TRANSISTOR 2SC3468(E)-AE or	QQSE02SC3468
		TRANSISTOR 2SC3468(D)-AE or	QQSD02SC3468
		TRANSISTOR KTC3207	NQSZ0KTC3207
RESISTORS			
R501⚠		METAL OXIDE FILM RES. 1W J 15k Ω or	RN01153ZU001
⚠		METAL OXIDE FILM RES. 1W J 15k Ω	RN01153DP003
R502⚠		METAL OXIDE FILM RES. 1W J 15k Ω or	RN01153ZU001
⚠		METAL OXIDE FILM RES. 1W J 15k Ω	RN01153DP003
R503⚠		METAL OXIDE FILM RES. 1W J 15k Ω or	RN01153ZU001
⚠		METAL OXIDE FILM RES. 1W J 15k Ω	RN01153DP003
R504		CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R505		CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R506		CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R507		CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R508		CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R511⚠		CARBON RES. 1/4W J 150k Ω	RCX4JATZ0154
R512⚠		CARBON RES. 1/4W J 150k Ω	RCX4JATZ0154
R513⚠		CARBON RES. 1/4W J 150k Ω	RCX4JATZ0154
R514		CARBON RES. 1/4W J 1.5k Ω	RCX4JATZ0152
R516		CHIP RES.(1608) 1/10W J 15 Ω	RRXAJB5Z0150
R517	A,B	CARBON RES. 1/4W J 680 Ω or	RCX4JATZ0681
	A,B	CARBON RES. 1/6W J 680 Ω	RCX6JATZ0681
R517	C	CARBON RES. 1/4W J 560 Ω or	RCX4JATZ0561
	C	CARBON RES. 1/6W J 560 Ω	RCX6JATZ0561
R518		CHIP RES.(1608) 1/10W J 15 Ω	RRXAJB5Z0150
R519	A,B	CARBON RES. 1/4W J 680 Ω or	RCX4JATZ0681
	A,B	CARBON RES. 1/6W J 680 Ω	RCX6JATZ0681
R519	C	CARBON RES. 1/4W J 560 Ω or	RCX4JATZ0561
	C	CARBON RES. 1/6W J 560 Ω	RCX6JATZ0561
R520		CHIP RES.(1608) 1/10W J 15 Ω	RRXAJB5Z0150
R521	A,B	CARBON RES. 1/4W J 680 Ω or	RCX4JATZ0681
	A,B	CARBON RES. 1/6W J 680 Ω	RCX6JATZ0681
R521	C	CARBON RES. 1/4W J 560 Ω or	RCX4JATZ0561
	C	CARBON RES. 1/6W J 560 Ω	RCX6JATZ0561
MISCELLANEOUS			
CL501A	A,B	LEAD WIRE 3P/270	WX1T5300-101
CL501A	C	LEAD WIRE 3P/350	WX1T7300-101
CL504A	A,B	LEAD WIRE 4P/250	WX1T5300-102
CL504A	C	LEAD WIRE 4P 340MM	WX1T7200-101

Ref. No.	Mark	Description	Part No.
JK501⚠		CRT SOCKET ISMS02S	JSCC220PK003

SENSOR CBA

Ref. No.	Mark	Description	Part No.
		SENSOR CBA Consists of the followings	0ESA04524
Q201		PHOTO TRANSISTOR PT204-6B-12 or	NPWZT2046B12
		PHOTO TRANSISTOR MID-32A22	NPWZM1D32A22
Q202		PHOTO TRANSISTOR PT204-6B-12 or	NPWZT2046B12
		PHOTO TRANSISTOR MID-32A22	NPWZM1D32A22

DECK PARTS LIST

Note: There are two different, but interchangeable types of CLEANER LEVER(B359) in this model, and have different combination with B361. Please see Table 1 for details and combination.

Table 1 (B359 and B361 Combination)

B359 CLEANER LEVER		B361
Type	**ID No.**	**ID No.**
A	0VM304413	0VM411114
B	0VM305090	Not used

Comparison Chart of Models and Marks

Model	Mark
SRC2213	A
SRC22134	B
SRC22194	C

Ref. No	Mark	Description	Part No.
B2	A	CYLINDER ASSEMBLY MK11 NTSC 2HD SQPB	N1428CYL
B2	B,C	CYLINDER ASSEMBLY MK11 NTSC 4HD SQPB	N1448CYL
B3		LOADING MOTOR ASSEMBLY MK11	0VSA12093
B8		PULLEY ASSEMBLY MK11	0VSA12078
B9		MOVING GUIDE S PREPARATION MK10	0VSA11002
B10		MOVING GUIDE T PREPARATION MK10	0VSA11004
B11		LOADING ARM T(B) ASSEMBLY MK11	0VSA12110
B12		LOADING ARM S(B) ASSEMBLY MK11	0VSA12109
B27		TENSION LEVER SUB ASSEMBLY MK11	0VSA12076
B31		AC HEAD ASSEMBLY MK11(TVCR)	0VSA12305
B35		TAPE GUIDE ASSEMBLY MK11	0VSA12069
B37		CAPSTAN MOTOR 288/VCCM011	N9660CMT
B52		CAP BELT MK10	0VM411138
B73		FE HEAD ASSEMBLY MK11 or	N9742FEL
		FE HEAD(MK11) MH-131SF11 or	DHVEC01Z0005
		FE HEAD ASSEMBLY MK11	N9743FEL
B74		PRISM MK10	0VM202870
B121		WORM MK11	0VM412544
B126		PULLEY MK11	0VM412543
B133		IDLER ASSEMBLY MK10	0VSA11017
B148		TG CAP MK11	0VM412972
B300		C DRIVE LEVER R MK11	0VM305068
B303		F DOOR OPENER MK11	0VM203299
B347		GUIDE HOLDER A MK10	0VM304920
B354		SLIDER R MK11	0VM101040
B355		SLIDER L MK11	0VM203296
B359		CLEANER LEVER MK10 or	0VM304413
		CLEANER LEVER MK11	0VM305090
B360		CLEANER ROLLER MK9	0VM410032C
B361		CL POST MK10	0VM411114
B410		PINCH ARM(A) ASSEMBLY MK11	0VSA12064
B411		PINCH SPRING MK10	0VM411092
B414		M BRAKE S ASSEMBLY MK11	0VSA12211
B416		M BRAKE T ASSEMBLY MK11	0VSA12212
B417		TENSION SPG(190265) MK11	0VM412984
B425		LOCK LEVER SPRING MK10	0VM411110
B426		KICK PULLEY MK10	0VM411095
B482		C PLATE MK11	0VM203297
B483		LOCK LEVER MK10	0VM411109D
B487		BAND BRAKE MK10	0VM304416B
B488		MODE LEVER MK11 or	0VM101043
		MODE LEVER(PB) MK11	0VM101112
B491		CAM GEAR(A) MK11	0VM101044
B492		MODE GEAR MK11	0VM305074
B494		DOOR OPENER B MK11	0VM305072
B499		T LEVER HOLDER MK10	0VM304419
B501		WORM HOLDER MK11	0VM305067
B502		CAM GEAR(B) MK10	0VM304403
B505		PSCW(625504) MK11	0VM413288
B507		REEL WASHER MK9 5*2.1*0.5	0VM410058
B508		S BRAKE SPRING MK10	0VM411121
B513		PSCW(752605) MK10	0VM411516
B514		SCREW RACK MK11	0VM412597
B516		REEL WASHER MK9 5*2.1*0.5	0VM410058
B518		P.S.W CUT 1.6X4.0X0.5T	0VM408485A
B520		T BRAKE SPRING MK10	0VM411123
B521		SOFT SPRING MK10	0VM411122
B522		TG POST ASSEMBLY MK11	0VSA12080
B525		LDG BELT MK11	0VM412804
B529		CLEANER ASSEMBLY MK11	0VSA12086
B551		FF ARM MK11	0VM305069
B553		REV SPRING MK11	0VM412555
B555		RACK ASSEMBLY MK11	0VSA12071
B557		MOTOR PULLEY U5	0VM403205A
B558		LOADING MOTOR M31E-1 R14 7351	MMDZB12MM002
B559		CLUTCH ASSEMBLY MK11	0VSA12350
B560		KICK SPRING MK10	0VM411475A
B562		C DRIVE LEVER L MK10	0VM304408
B563		SLIDER SHAFT MK10	0VM411112
B564		M GEAR MK10	0VM411136E
B565		SENSOR GEAR MK11	0VM305080
B567		PINCH ARM(B) MK10	0VM304396
B568		BT ARM MK10	0VM304417H
B569		CAM HOLDER F MK11	0VM305075
B570		CAM RACK SPG MK10	0VM411102
B571		P.S.W F 6*2.55*0.5	0VM402629A
B572		P.S.W CUT 1.6X4.0X0.5T	0VM408485A
B573		REEL S MK11	0VM203436
B574		REEL T MK10	0VM202872C
B585		PSW(2957505) MK11	0VM412745
L1051		SCREW, B-TIGHT M2.6X6 PAN HEAD+	GPMB9060
L1053		SCREW, S-TIGHT M2.6X8 WASHER HEAD+	GCMS9080
L1151		SCREW, SEMS M2.6X4 PAN HEAD+	CPM39040
L1191		SCREW, S-TIGHT M2.6X8 WASHER HEAD+	GCMS9080
L1321		SCREW, S-TIGHT M3X6 BIND HEAD+	GBMS3060
L1341		SCREW, P-TIGHT M2.6X6 BIND HEAD+	GBMP9060
L1406		AC HEAD SCREW MK9	0VM410964
L1450		SCREW, SEMS M2.6X5 PAN HEAD+	CPM39050
L1461		SCREW, P-TIGHT M2.6X6 WASHER HEAD+	GCMP9060
L1466		SCREW, S-TIGHT M2.6X6 BIND HEAD+	GBMS9060
L1467		SCREW, S-TIGHT M2.6X5 WASHER HEAD+	GCMS9050
L1468		SCREW, B-TIGHT M1.7X12	GAMB7120

Printed in Japan
2002-02-20 HO